MOSTEK®

Z80 MICROCOMPUTER SYSTEMS

Operations Manual

FLP-80DOS FLEXIBLE DISK OPERATING SYSTEM V2.1

FLP-80DOS Operations Manual

VERSION 2.1

TABLE OF CONTENTS

SECTION NUMBER	PARAGRAPH NUMBER	TITLE	PAGE NUMBER
		PART 1 USER INFORMATION	
1		FLP-80DOS GENERAL DESCRIPTION	
	1-1	INTRODUCTION	1-1
	1-4	MONITOR	1-4
	1-5	DESIGNER'S DEVELOPMENT TOOL-DDT	1-4
	1-6	TEXT EDITOR-EDIT	1-4
	1-7	Z80 ASSEMBLER-ASM	1-4
	1-8	LINKER-LINK	1-5
	1-9	PERIPHERAL INTERCHANGE PROGRAM-PIP	1-5
	1-10	I/O SYSTEM	1-5
	1-13	OTHER PROGRAMS	1-6
	1-15	REFERENCE DOCUMENTS	1-9
	1-16	DEFINITION OF SYMBOLS USED IN THIS MANUAL	1-9
	1-18	CONSOLE INTERACTION	1-9
	1-19	ENTERING DATA ON THE CONSOLE	1-9
	1-20	CONSOLE ESCAPE	1-10
	1-21	CONCEPT OF DATASET	1-12
	1-23	CONCEPT OF LOGICAL UNIT NUMBERS	1-14
	1-27	DATE FEATURE	1-14
	1-31	FLEXIBLE DISK HANDLING PROCEDURE	1-16
	1-36	START UP PROCEDURES	1-18
	1-41	MEMORY AND I/O SUMMARY	1-21

TABLE OF CONTENTS cont.

SECTION NUMBER	PARAGRAPH NUMBER	TITLE	PAGE NUMBER
	1-42	MEMORY MAP	1-21
	1-44	PORT MAP	1-23
2		MONITOR	
	2-1	INTRODUCTION	2-1
	2-3	OPERATIONS SUMMARY	2-1
	2-4	SYSTEM RESET	2-1
	2-6	POWER UP SEQUENCE	2-2
	2-7	MONITOR COMMAND SUMMARY	2-2
	2-9	IMPLIED RUN COMMAND	2-3
	2-12	COMMAND ENTRY	2-4
	2-13	DEFINITIONS	2-4
	2-14	ASSIGN COMMAND	2-5
	2-17	BEGIN COMMAND	2-6
	2-20	CLEAR COMMAND	2-6
	2-23	DDT COMMAND	2-7
	2-26	DTABLE COMMAND	2-7
	2-29	DUMP COMMAND	2-8
	2-32	GET COMMAND	2-8
	2-35	INIT COMMAND	2-9
	2-38	RTABLE COMMAND	2-9
	2-41	SAVE COMMAND	2-10
	2-45	CONSOLE ESCAPE	2-10
3		PERIPHERAL INTERCHANGE PROGRAM (PIP)	
	3-1	INTRODUCITON	3-1
	3-2	ENTERING PIP	3-1

TABLE OF CONTENTS cont

SECTION NUMBER	PARAGRAPH NUMBER	TITLE	PAGE NUMBER
	3-5	PIP COMMAND SYNTAX	3-1
	3-9	APPEND COMMAND	3-2
	3-12	COPY COMMAND	3-3
	3-18	DATE COMMAND	3-5
	3-19	DIRECT COMMAND	3-5
	3-23	ERASE COMMAND	3-7
	3-27	FORMAT COMMAND	3-8
	3-34	INIT COMMAND	3-10
	3-37	RENAME COMMAND	3-10
	3-41	STATUS COMMAND	3-11
	3-44	QUIT COMMAND	3-12
4		FLP-80DOS TEXT EDITOR (EDIT)	
	4-1	INTRODUCTION	4-1
	4-3	CAPABILITIES	4-1
	4-5	SOFTWARE CONFIGURATION	4-1
	4-8	DEFINITIONS	4-2
	4-9	USING THE TEXT EDITOR-CONSOLE INTERACTION	4-5
	4-11	USING THE TEXT EDITOR-ENTERING COMMANDS	4-6
	4-13	USING THE TEXT EDITOR-FIRST STEPS	4-7
	4-15	USING THE TEXT EDITOR-BASIC COMMANDS	4-8
	4-16	I - INSERT	4-8
	4-17	An - ADVANCE	4-9

TABLE OF CONTENTS cont

SECTION NUMBER	PARAGRAPH NUMBER	TITLE	PAGE NUMBER
	4-19	Bn - BACKUP	4-10
	4-20	Dn - DELETE	4-10
	4-21	Ln - GO TO RECORD NUMBER n	4-11
	4-22	Vn - VERIFY	4-11
	4-23	TEXT EDITOR ADVANCED COMMANDS	4-12
	4-24	Cn /string1/string2/ - CHANGE	4-12
	4-25	En - EXCHANGE	4-13
	4-26	Fn - PRINT FLAG OPTION	4-14
	4-27	G dataset - GET RECORDS FROM DATASET	4-14
	4-28	Mn-MACRO	4-15
	4-29	Pn - dataset - PUT N RECORDS TO DATASET	4-15
	4-30	Sn /source image/ - SEARCH	4-16
	4-31	T - INSERT AT TOP	4-17
	4-32	Wn - WRITE	4-17
	4-33	Xn - EXECUTE	4-17
	4-34	EDITING LARGE FILES	4-18
	4-36	EDITOR MESSAGES	4-18
	4-41	SAMPLE EDITING SESSION	4-20
5		FLP-80DOS ASSEMBLER (ASM)	
	5-1	INTRODUCTION	5-1

TABLE OF CONTENTS cont

SECTION NUMBER	PARAGRAPH NUMBER	TITLE	PAGE NUMBER
	5-5	DEFINITIONS	5-1
	5-9	ASSEMBLY LANGUAGE SYNTAX	5-3
	5-11	DELIMITERS	5-3
	5-12	LABELS	5-3
	5-13	OPCODES	5-6
	5-14	PSEUDO-OPS	5-6
	5-15	OPERAND	5-11
	5-16	GENERIC OPERAND	5-11
	5-20	COMMENTS	5-15
	5-21	OBJECT OUTPUT	5-17
	5-23	ASSEMBLY LISTING OUTPUT	5-17
	5-25	ABSOLUTE MODULE RULES	5-17
	5-27	RELOCATABLE MODULE RULES	5-18
	5-33	GLOBAL SYMBOL HANDLING	5-19
	5-36	GLOBAL SYMBOL BASIC RULES	5-21
	5-37	GLOBAL SYMBOL ADVANCED RULES	5-22
	5-38	USE OF THE "NAME" PSEUDO-OP	5-23
	5-40	USING THE ASSEMBLER	5-24
	5-42	ASSEMBLER OPTIONS	5-25
	5-44	ERROR MESSAGES	5-26
	5-46	ADVANCED OPERATIONS	5-26
	5-47	PASS 2 ONLY OPERATION (SINGLE PASS OPERATION)	5-26
	5-49	ASSEMBLING SEVERAL SOURCE MODULES TOGETHER	5-27
	5-50	SAMPLE ASSEMBLY SESSION	5-27

TABLE OF CONTENTS cont

SECTION NUMBER	PARAGRAPH NUMBER	TITLE	PAGE NUMBER
6		LINKER	
	6-1	INTRODUCTION	6-1
	6-3	LINKER COMMAND	6-1
	6-8	A OPTION	6-2
	6-9	C OPTION	6-3
	6-10	L OPTION	6-3
	6-11	S OPTION	6-4
	6-13	LINKER OPERATION	6-4
	6-15	LINKER RESTRICTIONS	6-5
	6-17	EXAMPLES OF LINK COMMAND	6-6
7		DDT-80 DEBUG SYSTEM	
	7-1	INTRODUCTION	7-1
	7-3	SOFTWARE CONFIGURATION	7-1
	7-7	COMMAND SUMMARY	7-6
	7-8	CONVENTIONS	7-6
	7-10	PREPARATION	7-8
	7-13	DESCRIPTION OF DDT COMMANDS	7-8
	7-14	COMMAND FORMAT	7-8
	7-17	OPERANDS	7-9
	7-27	OPERAND EXAMPLES	7-10
	7-28	COMMAND TERMINATORS	7-11
	7-30	SPECIAL KEYS	7-11
	7-32	ERRORS	7-12
	7-34	B-BREAKPOINT COMMAND	7-13
	7-42	C-COPY MEMORY BLOCK COMMAND	7-16
	7-45	E-EXECUTE COMMAND	7-17

TABLE OF CONTENTS cont

SECTION NUMBER	PARAGRAPH NUMBER	TITLE	PAGE NUMBER
	7-48	F-FILL MEMORY COMMAND	7-18
	7-51	H-HEXADECIMAL ARITHMETIC	7-19
	7-54	L-LOCATE 8-BIT PATTERN COMMAND	7-20
	7-57	M-DISPLAY AND UPDATE MEMORY OR REGISTER COMMAND	7-21
	7-68	M-TABULATE MEMORY COMMAND	7-24
	7-71	O-SET OFFSET COMMAND	7-25
	7-74	P-DISPLAY AND UPDATE PORTS COMMAND	7-26
	7-77	Q-QUIT COMMAND	7-27
	7-80	R-DISPLAY CPU REGISTERS COMMAND	7-28
	7-84	V-VERIFY MEMORY COMMAND	7-30
	7-87	W-WALK THROUGH A PROGRAM COMMAND	7-31
	7-91	DEBUGGER ESCAPE (CNTL-C)	7-32
		PART 2 TECHNICAL INFORMATION	
8		RDCHR AND WRCHR SUBROUTINES	
	8-1	INTRODUCTION	8-1
	8-3	RDCHR - READ ONE BYTE	8-1
	8-4	CALLING SEQUENCE	8-1
	8-5	ENTRY PARAMETERS	8-1
	8-6	EXIT PARAMETERS	8-2

TABLE OF CONTENTS cont

SECTION NUMBER	PARAGRAPH NUMBER	TITLE	PAGE NUMBER
	8-7	OPERATION	8-2
	8-9	WRCHR - WRITE ONE BYTE	8-2
	8-10	CALLING SEQUENCE	8-2
	8-11	ENTRY PARAMETERS	8-2
	8-12	EXIT PARAMETERS	8-3
	8-13	OPERATION	8-3
	8-15	DDT OPERATION	8-3
9		INPUT/OUTPUT CONTROL SYSTEM (IOCS)	
	9-1	INTRODUCTION	9-1
	9-3	VECTOR DEFINITION	9-1
	9-6	LUNIT	9-4
	9-9	DVCE	9-5
	9-10	UNIT	9-6
	9-11	FNAM	9-6
	9-12	FEXT	9-6
	9-13	VERS	9-7
	9-14	USER	9-7
	9-15	RQST	9-7
	9-16	FMAT	9-8
	9-23	HADDR	9-10
	9-24	ERRA	9-10
	9-25	CFLGS	9-11
	9-32	SFLGS	9-13
	9-33	ERRC	9-13
	9-34	PBFFR	9-13
	9-35	UBFFR	9-13

TABLE OF CONTENTS cont

SECTION NUMBER	PARAGRAPH NUMBER	TITLE	PAGE NUMBER
	9-36	USIZE	9-13
	9-37	NREC	9-14
	9-38	HSCR	9-14
	9-39	ISCR	9-14
	9-40	HOW TO USE IOCS	9-14
	9-42	SET UP A VECTOR	9-14
	9-43	DEVICE HANDLER REQUIREMENTS	9-16
	9-46	PHYSICAL I/O BUFFERS	9-17
	9-52	SYSTEM INTERRUPT TABLE	9-18
	9-55	IOCS MEMORY MAP	9-19
	9-59	WRITING A DEVICE HANDLER	9-21
	9-60	CHARACTER-ORIENTED DEVICES	9-21
	9-66	RECORD-ORIENTED DEVICES	9-23
10		FLOPPY DISK HANDLER (FDH)	
	10-1	INTRODUCTION	10-1
	10-3	COMMUNICATION	10-1
	10-5	DOS RELATED VECTOR PARAMETERS	10-2
	10-6	CALLING CONVENTIONS	10-3
	10-8	GENERAL PURPOSE DISK MACRO REQUESTS	10-3
	10-9	COMPLETE DOS REQUEST CODES	10-6
	10-10	ERROR RETURN	10-10
	10-12	DIRECTORY	10-13
	10-14	DISK FORMAT	10-14

TABLE OF CONTENTS cont

SECTION NUMBER	PARAGRAPH NUMBER	TITLE	PAGE NUMBER
	10-17	SECTOR AND TRACK FORMATS	10-18
	10-18	DISKETTE - IDENTIFICATION	10-18
	10-19	NAME OF DISKETTE AND SPACE ALLOCATION	10-18
	10-20	DATA (FILES)	10-19
11		DISK CONTROLLER FIRMWARE (DCF)	
	11-1	INTRODUCTION	11-1
	11-3	SOFTWARE CONFIGURATION	11-1
	11-5	CONTROLLER OVERVIEW	11-1
	11-7	DISK CONTROLLER REQUESTS	11-3
	11-9	DISK CONTROLLER ERROR RETURN CODES	11-4
	11-11	LINKED FILE LOADER	11-5
	11-13	INTERACTIVE BOOT PROCESS	11-5
	11-15	INTERACTIVE SAVE PROCESS	11-6
12		I/O HANDLERS	
	12-1	INTRODUCTION	12-1
	12-3	CR - CARD READER	12-2
	12-4	CP - CENTRONICS LINE PRINTER	12-4
	12-5	LP - DATA PRODUCTS LINE PRINTER	12-5
	12-6	PR - PAPER TAPE READER	12-6
	12-7	PP - PAPER TAPE PUNCH	12-7
	12-8	TI - SILENT 700 CASSETTE INPUT	12-8

TABLE OF CONTENTS cont

SECTION NUMBER	PARAGRAPH NUMBER	TITLE	PAGE NUMBER
	12-9	TK - KEYBOARD	12-9
	12-10	TT - CONSOLE OUTPUT	12-10
	12-11	TO - SILENT 700 CASSETTE OUTPUT	12-12
	12-12	TR - TELETYPE PAPER TAPE READER	12-13
13		SYSTEM ROUTINES	
	13-1	INTRODUCTION	13-1
	13-3	PROM RESIDENT ROUTINES	13-1
	13-6	RAM RESIDENT ROUTINES	13-2
	13-10	ASBIN - CONVERT ASCII DIGIT TO BINARY	13-4
	13-11	ASTCHK-ASTERISK CHECK	13-5
	13-12	CRLF - OUTPUT CARRIAGE RETURN AND LINE FEED	13-6
	13-13	CSI - COMMAND STRING INTERPRETER	13-7
	13-14	CSISYN-JTASK CODE 7	13-8
	13-15	CSIPAR-JTASK CODE 6	13-9
	13-16	RENTRY - DDT-80 RE-ENTRY	13-12
	13-17	ECHO - INPUT AND ECHO A CHARACTER	13-13
	13-18	EH - SYSTEM ERROR HANDLER	13-14
	13-19	GETHL - GET A LINE OF INPUT FROM CONSOLE	13-16
	13-20	GETVEC - GET DEFAULT VECTOR	13-17

TABLE OF CONTENTS cont

SECTION NUMBER	PARAGRAPH NUMBER	TITLE	PAGE NUMBER
		ADDRESS	
	13-21	MINDIS - DISABLE MINIMAL LISTENER	13-18
	13-22	MINEN - ENABLE MINIMAL LISTENER	13-19
	13-23	MRENT - MONITOR RE-ENTRY	13-20
	13-24	PACC - PRINT ASCII CONTENTS OF THE ACCUMULATOR	13-21
	13-25	PTXT - PRINT TEXT STRING	13-22
	13-26	PVECT - PRINT VECTOR DATASET	13-23
	13-27	REBOOT - SYSTEM REBOOT SEQUENCE	13-24
	13-28	SCAN - INTERACTIVE SCAN	13-25
	13-29	SEARCH - FIND DIRECTORY ENTRY OF A FILE	13-26
	13-30	SPACE - OUTPUT A SPACE	13-27
	13-31	SRCHR, SRCHU - SEARCH MNEMONIC TABLES	13-28
14		BATCH MODE OPERATION	
	14-1	INTRODUCTION	14-1
	14-3	PRINCIPLES OF OPERATION	14-1
	14-7	BATCH COMMAND SEQUENCE SYNTAX	14-2
	14-12	EXAMPLE 1	14-3
	14-13	EXAMPLE 2	14-4

TABLE OF CONTENTS cont

SECTION NUMBER	PARAGRAPH NUMBER	TITLE	PAGE NUMBER
15		SYSTEM GENERATION	
	15-1	INTRODUCTION	15-1
	15-4	SYSTEM GENERATION PROCEDURE (SYSGEN)	15-1
	15-5	OPERATING SYSTEM MODULES	15-4
	15-6	STANDARD I/O DRIVERS	15-5
	15-10	ADDING NEW I/O DRIVERS	15-6
	15-12	CHANGING THE DEFAULT LOGICAL UNITS	15-7
	15-14	CHANGING THE NUMBER OF DISK UNITS IN THE SYSTEM	15-7
	15-16	SYSTEM GENERATION OF A 64K OPERATING SYSTEM	15-7

APPENDIX

A	Z80 OPCODES
B	MOSTEK OBJECT OUTPUT DEFINITION
C	SCRATCHPAD MEMORY MAP
D	TESTING/DIAGNOSTICS
E	FLP-80DOS ERROR DICTIONARY
F	SYSTEM LINKAGES
G	DISK RECOVERY UTILITY

LIST OF FIGURES

FIGURE NUMBER	TITLE	PAGE NUMBER
1-1	DEVELOPMENT SYSTEM PROGRAMS	1-3
1-2	FLP-80DOS SYSTEM	1-8
1-3	INPUT/OUTPUT LOGICAL UNIT NUMBERS	1-15
1-4	DISKETTE	1-17
1-5	RELATIONSHIP OF SYSTEM PROGRAMS IN FLP-80DOS	1-20
1-6	STANDARD FLP-80DOS MEMORY MAP	1-22
1-7	OEM-80 PORT ALLOCATION	1-24
1-8	FLP-80DOS COMMAND SUMMARY	1-25
4-1	EDITOR MEMORY MAP	4-3
4-2	LOGICAL UNIT NUMBER STRUCTURE	4-4
5-1	ASSEMBLER MEMORY MAP	5-4
5-2	LOGICAL UNIT NUMBER STRUCTURE	5-5
6-1	EXAMPLE LOAD MAP, GLOBAL CROSS REFERENCE, AND GLOBAL SYMBOL TABLE	6-8
7-1	DDT USER REGISTER MAP	7-3
7-2	DDT DATA PATHS	7-4
8-1	EXAMPLE OF RDCHR AND WRCHR	8-5
9-1	IOCS MEMORY MAP	9-20
10-1	EFFECTS OF FDH COMMANDS	10-9
10-2	FLP-80DOS V2.1 DISKETTE FORMAT	10-16
15-1	SAMPLE SYSTEM GENERATION	15-8
B-1	EXTERNAL SYMBOL LINK LIST	B-5

LIST OF TABLES

TABLE NUMBER	TITLE	PAGE NUMBER
4-1	SUMMARY OF FLP-80DOS EDITOR COMMANDS	4-22
5-1	ALLOWED CHARACTERS	5-9
5-2	GENERIC OPERANDS	5-13
5-3	ALLOWED OPERATORS AND HIERARCHIES IN FLP-80DOS ASSEMBLER	5-16
7-1	MNEMONICS RECOGNIZED BY DDT-80	7-5
7-2	DDT COMMAND SUMMARY	7-7
9-1	VECTOR DEFINITION	9-3
9-2	FLP-80DOS DEVICE MNEMONICS	9-5
9-3	GENERAL PURPOSE REQUESTS	9-7
9-4	FORMAT REQUEST CODES	9-8
9-5	PHYSICAL BUFFER ALLOCATION	9-17

NOTE: Certain sections of this manual refer to specific hardware configurations existing on the MOSTEK AID-80F Development System. In the future, FLP-80DOS will also be implemented on other hardware configurations. Since there will be minor differences in hardware implementation (e.g. I/O port numbers) the user should refer to the appropriate hardware manual for information concerning his system configurations.

PART 1

USER INFORMATION

SECTION 1

FLP-80DOS

GENERAL DESCRIPTION

1-1. INTRODUCTION

NOTE: This section should be read in its entirety. It discusses concepts which are used throughout the system.

1-2. FLP-80DOS is the MOSTEK Disk Operating System for the Z80. It is a software package designed to work with the following minimum hardware configuration:

1. Z80 CPU with a minumum of 16K Bytes of RAM
2. 4K Byte EPROM and a 256 Byte Scratchpad RAM
3. Floppy Disk Interface and 1 to 4 flexible disk units.

1-3. FLP-80DOS consists of development system software and OEM software. The development system programs are diagrammed in Figure 1-1. Each of these programs is discussed in detail in the next 6 sections of this manual. These programs provide state-of-the-art software for developing Z80 programs. The complete FLP-80DOS system is diagrammed in Figure 1-2. The component parts of the system establish a firm basis for OEM products. This diagram is discussed in detail in Sections 8 through 13 of this manual. The following programs are supplied in the FLP-80DOS package:

1. Monitor
2. Debugger
3. Text Editor
4. Z80 Assembler
5. Peripheral Interchange Program

6. Linker
7. A generalized I/O system for peripherals

These programs provide state-of-the-art software for developing Z80 programs as well as establishing a firm basis for OEM products.

FIGURE 1-1. DEVELOPMENT SYSTEM PROGRAMS

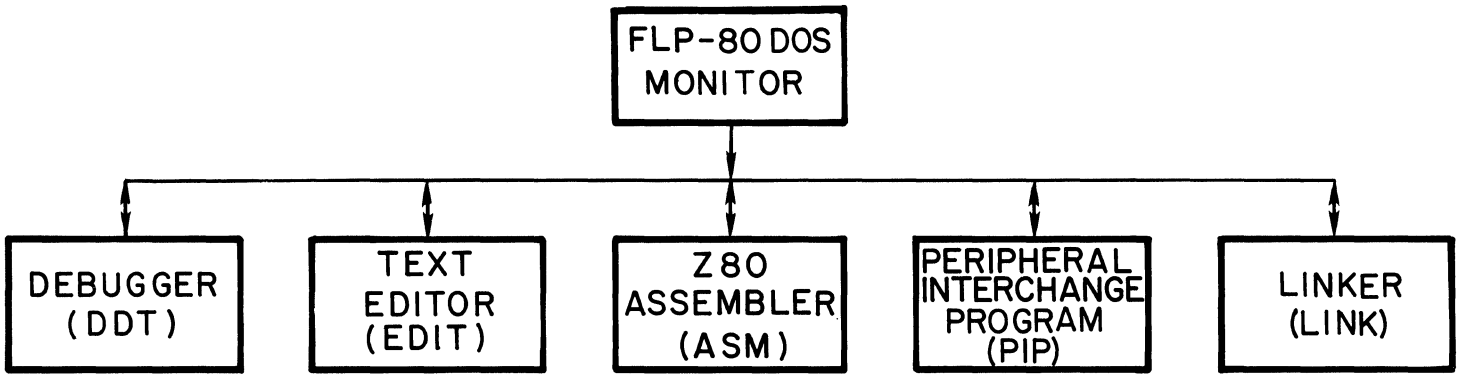

1-4. MONITOR. The Monitor provides a user interface from the console to the rest of the software. The user can load and run system programs, such as the Assembler, using one simple command. Programs in binary format can be loaded into and dumped from RAM. All I/O is done via channels which are identified by Logical Unit Numbers. The Monitor allows any software device handler to be assigned to any Logical Unit Number. Thus, the software provides complete flexibility in configuring the system with different peripherals.

1-5. DESIGNER'S DEVELOPMENT TOOL - DDT. The DDT debugger program is supplied in PROM. It provides a complete facility for interactively debugging relative and absolute Z80 programs. Standard commands allow displaying and modifying memory and CPU registers, setting breakpoints, and executing programs. Additional commands allow use of the MOSTEK AIM-80 to interactively debug a target system. Mnemonics are used to represent Z80 registers, thus simplifying the command language.

1-6. TEXT EDITOR - EDIT. The FLP-80DOS Editor permits random access editing of ASCII character strings. The Editor works on blocks of characters which are rolled in from the disk. It can be used as a line or character-oriented editor. Individual characters may be located by position or context. Each edited block is automatically rolled out to disk after editing. Although the Editor is used primarily for creating and modifying Z80 assembly language source statements, it may be applied to any ASCII text delimited by "carriage returns."

1-7. Z80 ASSEMBLER - ASM. The FLP-80DOS Assembler reads Z80 source mnemonics and pseudo-ops and outputs an assembly listing and object code. The assembly listing shows address, machine code, statement number, and source statement. The code is in industry-standard, hexadecimal format modified for relocatable,

linkable assemblies. The Assembler supports conditional assemblies, global symbols, relocatable programs, and a printed symbol table. It can assemble any length program, limited only by a symbol table size which is dependent on available RAM. Expressions involving arithmetic and logical operations are allowed. Although normally used as a two-pass assembler, the Assembler can also be run as a single-pass assembler.

1-8. LINKER-LINK. The Linker provides capability for linking object modules together and creating a binary (RAM image) file on disk. A binary file can be loaded using the Monitor GET or IMPLIED RUN command. Modules are linked together using global symbols for communication between modules. The Linker produces a global symbol table and a global cross-reference table which may be listed on any output device. The Linker also provides a library search option for all global symbols undefined after the specified object modules are processed. If a symbol is undefined, the Linker searches the disk for an object file having the filename of the symbol. If the file is found, it is opened and linked with the main module in an attempt to resolve the undefined symbol.

1-9. PERIPHERAL INTERCHANGE PROGRAM - PIP. The Peripheral Interchange Program provides complete file maintenance facilities for the system. In addition, it can be used to copy information from any device or file to any other device or file. The command language is easy to use and resembles that used on DEC minicomputers.

1-10. I/O SYSTEM. The I/O software, which is the heart of the FLP-80DOS development system, can be used directly in OEM applications. The software consists of two programs which provide a complete disk-handling facility.

1-11. The first package is called the I/O Control system (IOCS). This is a generalized blocker/deblocker which can interface to any device handler. Input and output can be done via the IOCS in any of four modes:

1. single byte transfer.
2. line at a time, where the end of a line is defined by carriage return.
3. multibyte transfers, where the number of bytes to be transferred is defined as the logical record length.
4. continuous tranfer to end-of-file, which is used for binary (RAM-image) files.

The IOCS provides easy application of I/O oriented packages to any device. There is one entry point, and all parameters are passed via a vector defined by the calling program. Any given device handler defines the physical attributes of its device which are, in turn, used by the IOCS to perform blocking and de-blocking.

1-12. The Floppy Disk Handler (FDH) interfaces from the IOCS to a firmware controller for up to 4 floppy disk units. The FDH provides a sophisticated command structure to handle advanced OEM products. The firmware controller interfaces to MOSTEK's Disk Controller Board. The disk format is soft-sectored. The software directly handles double-sided disks. The FDH has advanced error recovery capability. It supports a bad sector map and an extensive directory which allows multiple users. The file structure is doubly linked to increase data integrity on the disk. A bad file can be recovered from either its start or end.

1-13. OTHER PROGRAMS

1-14. MOSTEK offers a number of programs which work with FLP-80DOS. These programs are purchasable options for the Microcomputer. The following programs will be of interest to many users:

FZCASM	-The 3870/F8 Cross Assembler allows assembly of all F8 opcodes on the AID-80F. The FLP-80DOS Text Editor and Linker can be used with the Cross Assembler to produce programs which can be debugged.
ZAIM-72	-This 3870 family debugger program is to be used with the MOSTEK AIM-72 board for debugging 3870, 3872, or 3876 programs.
MOSTEK LIBRARY	-The Library consists of a set of utilities which are used at Mostek. Programs include a word processor, Lawrence Livermore Laboratory BASIC (oriented to controller applications), a disk recovery utility, an 8080 to Z80 source translator, a hexadecimal dump utility, and others. Complete source files are included.
BASIC	-MOSTEK BASIC features string and array manipulation, random access disk, and a complete set of standard BASIC commands.
FORTRAN IV	-MOSTEK FORTRAN is ANSI X3.3(1966) standard FORTRAN IV. It features an extensive run-time library.
MACRO-80	Powerful Macro Assembler for Z80.
MACRO-70	Powerful Macro Assembler for 3870/F8.

FIGURE 1-2. FLP-80DOS SYSTEM

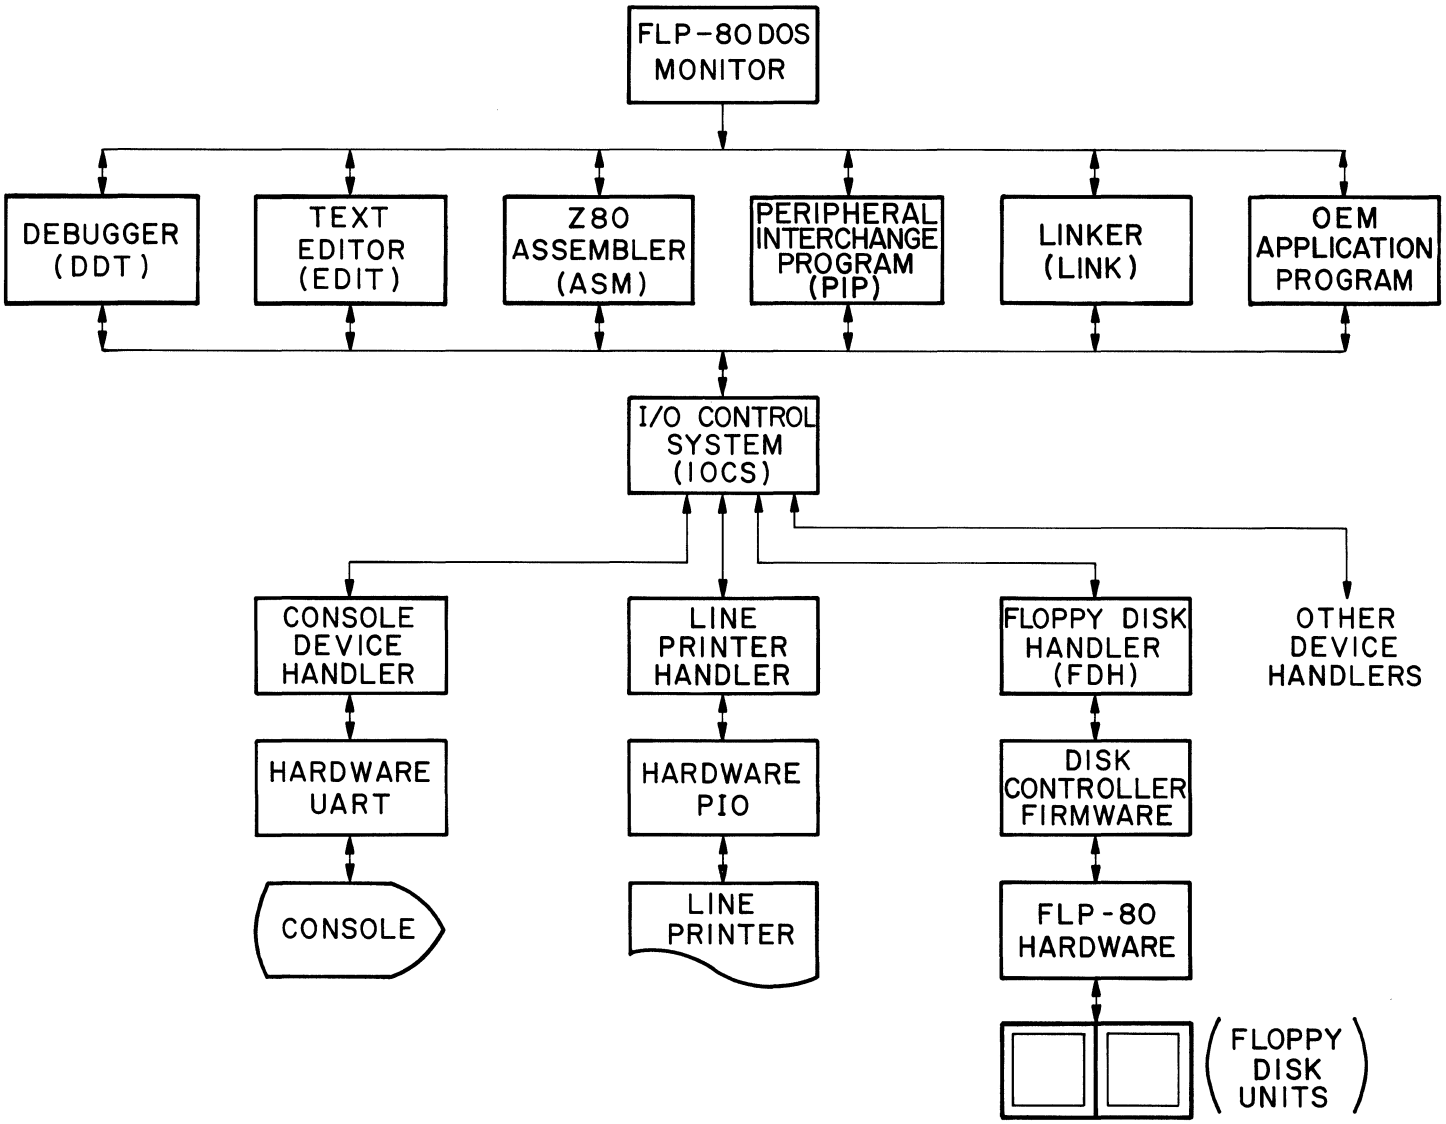

1-15. REFERENCE DOCUMENTS

AID-80F Operations Manual	MK78569
SDB-80 Software Development Board Operations Manual	MK78544
SDB-80E (European version)	MK78548
FLP-80 Hardware Operations Manual	MK78560
FLP-80E (European version)	MK78561
RAM-80B Operations Manual	MK78545
RAM-80BE (European Version)	MK78555
DSS-80 Development System Software Program Listing (OEM users only - restricted distribution)	MK78588
DOPS-80 Disk Operating Software Program Listing (OEM users only - restricted distribution)	MK78589

1-16. DEFINITION OF SYMBOLS USED IN THIS MANUAL

1-17. The following conventions are used throughout this manual:

All user input from the console device is underlined.

All hexadecimal numbers are identified by a subscript H, except where an example of program input or output is given.

(CR) means carriage return.

aaaa means any hexadecimal number.

1-18. CONSOLE INTERACTION

1-19. ENTERING DATA ON THE CONSOLE. Each line of input from the console is terminated with a carriage return in FLP-80DOS. The maximum length of a line of input is 160 characters. Before ending a line with carriage return, the user can modify the line with the following keys (Note that these standards do not apply to DDT, the debugger):

1. TAB (ASCII 09_H) -move the console cursor over mod-8 spaces. Tabs are set every 8 spaces.

2. RUBOUT (ASCII $7F_H$) -delete the previous character entered. A blackslash is printed on either side of the characters which are deleted.
3. BACKSPACE (ASCII 08_H) -delete the previous character. It is erased from the (CRT) screen by overprinting with a blank, and the cursor is moved backward. Backspacing over a tab character will back the cursor to the correct screen position.
4. CNTL-U (ASCII 15_H) -delete the current line of input and reprompt for another line.
5. SPACE BAR -used to alternately start and stop listing to console device. This is useful when a long file is being spooled to a CRT screen and the user wishes to view the file a page at a time.

1-20. CONSOLE ESCAPE ("Minimal Listener"). Any executing program in FLP-80DOS can be interrupted from the console device. (This feature is inhibited while DDT, the debugger, is being used.) The following key inputs are allowed:

1. CNTL-X (ASCII 18_H) - Monitor Escape. Entering this code from the console keyboard immediately reboots the system software and returns control to the FLP-80DOS Monitor. After a brief delay while the disk is

accessed, the Monitor prompt will appear on the console. The Monitor prompting character is a $. The Monitor escape cannot be used during use of the Debugger (DDT) or the Editor (EDIT).

NOTE: Monitor Escape is designed to provide an immediate reboot of the Monitor without finishing the currently executing program. Any output files which were open when the Monitor Escape was performed will not be closed. This means that those files will have no information stored in them.

2. CNTL-C (ASCII 03_H)- Debugger Escape. Entering this code from the console keyboard immediately returns control to the debugger (DDT). The current Z80 registers will be printed on the console, and DDT will wait for a command. To resume execution, enter a dot (.), then the command 'E'. For further details on using DDT as a debugging aid, please see Section 7 of this manual. This escape cannot be used if DDT is called up by the Monitor, or during use of the Editor.

NOTE Debugger Escape is designed to allow a program to be suspended by the user. It also provides a software asynchronous interrupt which is useful in debugging programs. It is <u>not</u> active during usage of DDT, the debugger (i.e., the user cannot use

Debugger Escape when using DDT). It may be used any number of times during the execution of a program.

1-21. CONCEPT OF DATASET

1-22. A dataset is a logical grouping of data associated with an I/O device. Throughout FLP-80DOS a dataset is identified as follows:

DEV:FILENAME.EXT[UIC]

where:

DEV = The device mnemonic consisting of two letters and a decimal digit terminated by a colon. The letters identify the device and the digit identifies the unit (e.g.,DK1: is disk unit 1). If no digit is entered, unit 0 is assumed. If the device mnemonic itself does not appear, the system disk (DK0:) is assumed. The following devices can be handled by FLP-80DOS supplied to you:

DEVICE NAMES	DESCRIPTION
CP:	Line Printer (Centronics)
CR:	Documation M300 card reader
DK0:	System Disk Unit (right hand unit)
DK1:	User Disk Unit (left hand unit)
LP:	Line Printer (Data Products)
PP:	High-Speed Paper Tape Punch
PR:	High-Speed Paper Tape Reader
TI:	Silent 700 Cassette Tape Reader Input
TO:	Silent 700 Cassette Tape Output
TT:	Teletype Typehead, CRT Screen, or Silent 700 Printer
TK:	Terminal Keyboard

Additional devices and their corresponding software handlers can be added by the user.

FILENAME = The file name specification consists of one or more letters or digits. The first six letters or digits specify the name. The first character must be a letter. All letters or digits in excess of 6 are ignored. The file name is not used if the device is not a file device (e.g., the line printer).

EXT = The extension specification consists of a period, followed by one or more letters or digits. The first three letters or digits specify the extension. All letters or digits in excess of three are ignored. If an extension does not appear in the dataset, a default extension of 3 blanks is assumed. The extension does not appear if the device is not a file device. The extension 'BIN' is reserved for binary (RAM image) files. The extension 'OBJ' is reserved for object files. The extension 'TMP' is reserved for temporary files by the Editor. The extension 'CRS' is used by the Assembler and the Linker for cross-reference files. The extension 'LST' is used by the Assembler for listing files.

UIC = The user identification code UIC consists of a left square bracket, followed by one to three decimal digits, followed by a right square bracket. The largest valid decimal number is 255. If the user identification code does not appear, a default code of 1 is assumed. The UIC is maintained on all disk files. It can be used to identify files of different users. The UIC does not appear if the device is not a file device.

1-23. CONCEPT OF LOGICAL UNIT NUMBERS

1-24. All FLP-80DOS input and output is done in terms of logical unit numbers, just as in FORTRAN. A Logical Unit Number (LUN) is any number in the range 0 - FF_H. Any dataset can be assigned to any Logical Unit Number (LUN) (using the Monitor ASSIGN command). The LUN acts as a channel through which a program performs input and output. This is diagrammed in Figure 1-3.

1-25. Logical Unit Numbers 0-5 are always pre-assigned when the system is powered up or reset. These are all "default" LUN's and they are assigned the following meanings:

LUN	meaning
0	console input
1	console output
2	object input
3	object output
4	source input
5	source output

1-26. LUN 0 and 1 are always assigned to the user console device. LUN's 0-5 have special features which make them useful for writing your own programs (more detail is given in Sections 8 and 9 of this manual). LUN FF_H cannot be reassigned to a device. This means that any program using LUN FF_H is responsible for making the device assignment. Further detail is given in Section 2 under the Monitor "ASSIGN" command.

1-27. DATE FEATURE

1-28. The date feature in FLP-80DOS V2.1 allows you to record the date of creation or last update of a file. This is done automatically by the system except for binary files.

FIGURE 1-3. INPUT/OUTPUT LOGICAL UNIT NUMBERS

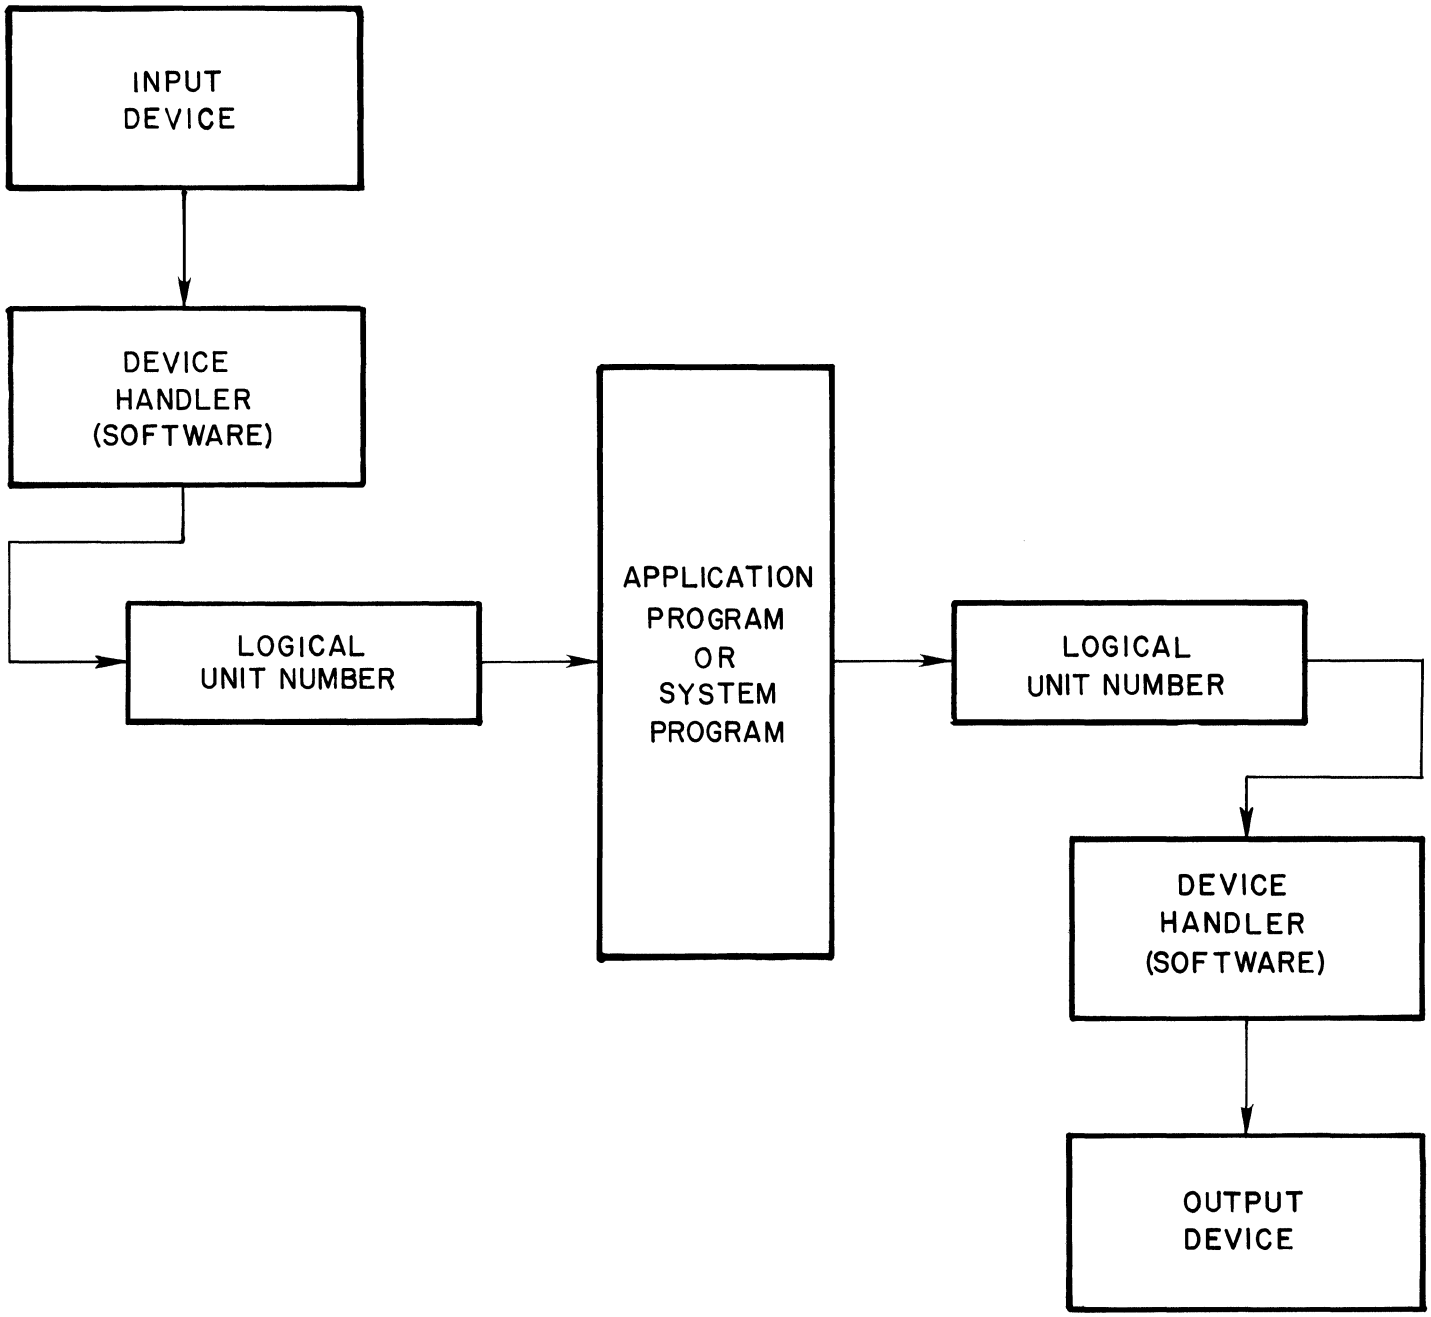

1-29. At power-up time, after system reset, the date can be entered at the system's request. (See start-up procedures in paragraph 1-36 for information on entering the date). Once the date has been entered correctly, it will remain in the system until turned off. A system reset does not destroy the date. In this case the date will appear after the sign-on message and no request to enter it will appear. If the user wishes to change the current date for any reason, it can be done through the DATE command in PIP. (see paragraph 3-18).

1-30. When a new file is created or an old one is updated, for example through the Editor, the current date is stored in its directory entry at the load-address bytes, with the exception of binary files in which case the load-address bytes contain that information and no date is recorded. We recommend that the user create a cross-reference file along with his binary file through the Linker, using option C. (see paragraph 6-9).

1-31. FLEXIBLE DISK HANDLING PROCEDURE

1-32. The 2 diskettes supplied with the system are both system diskettes. That is, each contains all of the FLP-80DOS software. The format is soft-sectored. It is recommended that burnished and qualified diskettes be used with FLP-80 system. New diskettes do not have to be pre-formatted because the system provides formatting capability. Each diskette in the system has all the system software on it. Each has 1964 available sectors of 124 data bytes (243536 bytes total). The capacity is double this for double-sided diskettes.

1-33. Figure 1-4 shows the diskette. The following precautions should be followed in handling the diskettes:

1. Do not bend or fold the diskette.

FIGURE 1-4. DISKETTE

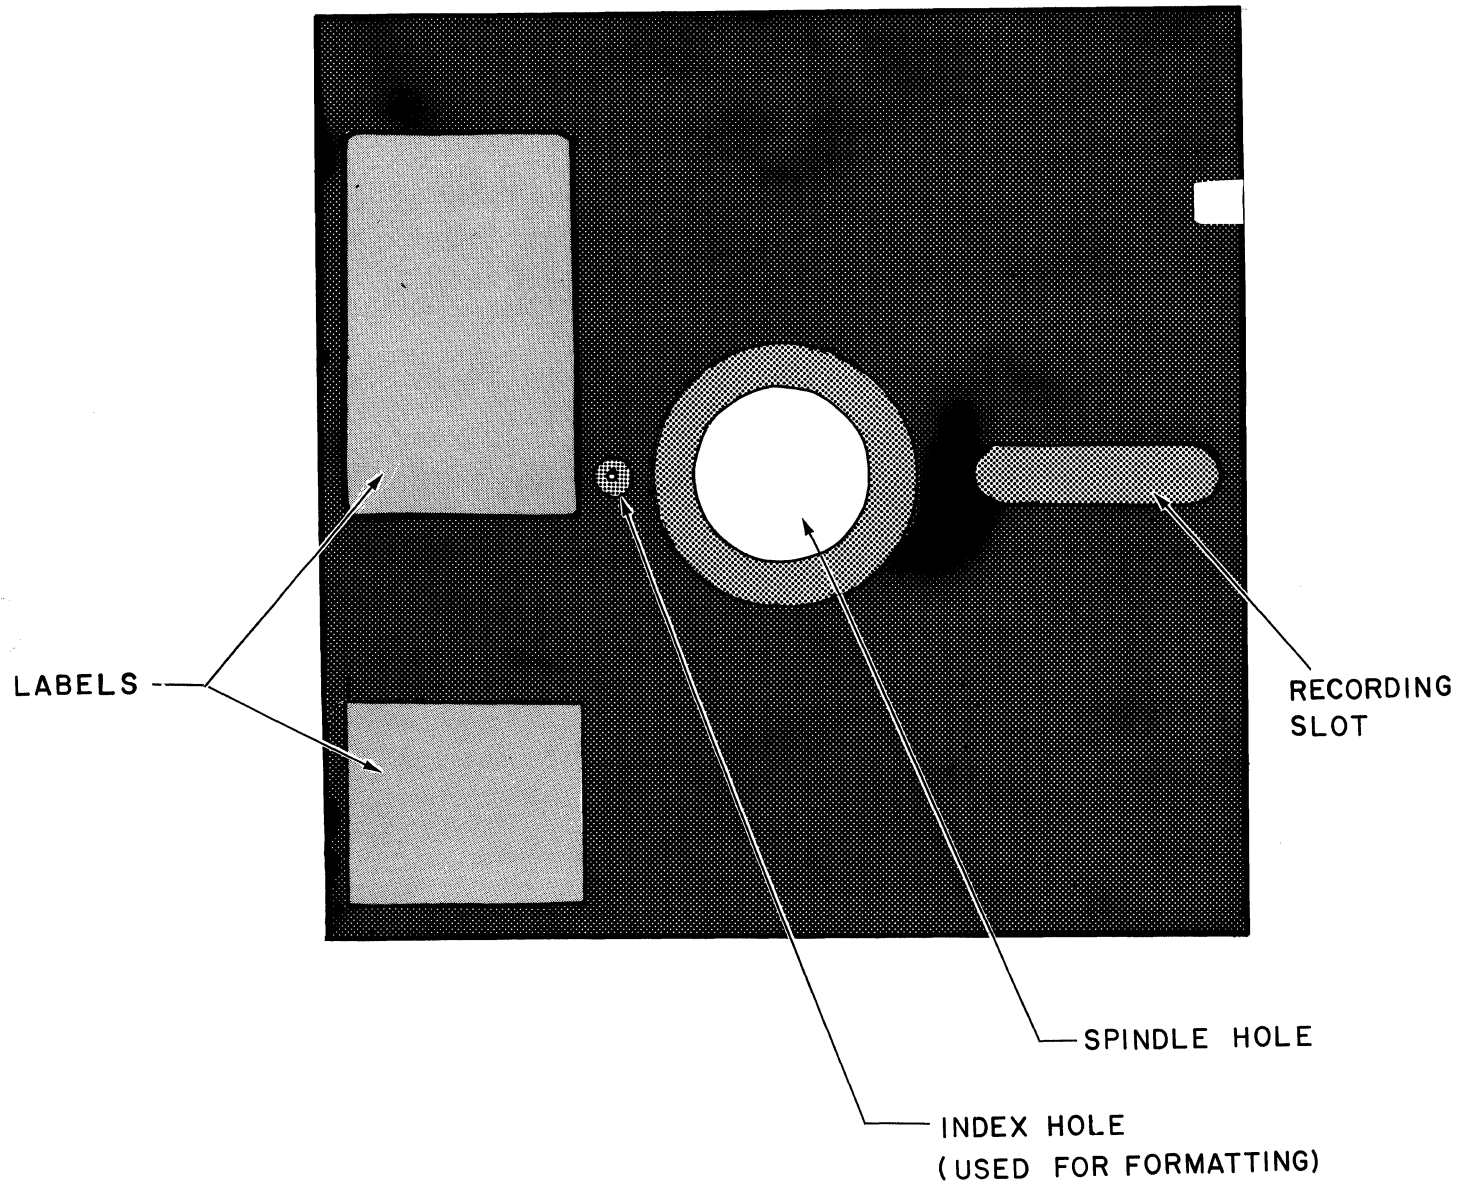

2. Do not touch the exposed recording area of the diskette.
3. Do not place heavy materials on or write on the diskette with other than a felt-tip marker.
4. Do not place the diskette near strong magnetic fields.

1-34. Diskettes are inserted into the drives as follows:

1. Insert the diskette as far as it will go into the disk unit slot. The recording slot should be to the rear and the label should be on the right-hand side.
2. Slowly close the door until it latches.

1-35. Diskettes are removed from the disk unit by depressing the latch button. The disk unit door should spring open and the diskette should be pushed out of the unit.

CAUTION: Do not power up or power down the system with a diskette inserted in a disk unit. Doing so may destroy the integrity of the data on the diskette.

NOTE: It is recommended that all user files be backed up on separate diskettes whenever changes are made. This precaution guards against loss of a file in case a non-recoverable disk error occurs.

1-36. START UP PROCEDURES

1-37. Configure the hardware system as explained in the System Operations Manual. Power up. Insert the FLP-80DOS diskette into the right-hand disk drive, disk unit zero (DK0:), and close the door. Depress the 'carriage return' key on the console device. There should be a slight delay while the system software is read into RAM from disk. Then the Monitor prompt should be

printed on the console:

```
MOSTEK FLP-80DOS V2.1
$
```

A. PLEASE ENTER DATE (DD-MMM-YY) -->

B. The user enters the date by typing first the day of the month, followed by the first three letters of the month, and then by the last two digits for the year; each item is separated from the next by a hyphen. The entered line can be edited using rub-out, backspace, and control-u. If the user enters an invalid date, a syntax error message is printed, and the date is ignored. If the user does not wish to use the date option he can enter just a carriage return.

Example: PLEASE ENTER DATE (DD-MMM-YY) 7-APR-79 (CR)

1-38. Figure 1-5 shows the relationships among the programs in FLP-80DOS. The user initializes the system by depressing the 'RESET' button on the system and 'carriage return' on his console device. The Boot Procedure reads the system software into RAM from disk and gives control to the Monitor. From the Monitor, any system program can be executed by entering its name (plus any other required information) from the console device.

The Debugger, Text Editor, and Peripheral Interchange Program can be exited by entering 'Q' (for a 'Quit'), at which point control is given back to the Monitor. The Z80 Assembler and Linker return control to the Monitor when their tasks are completed. In the system programs the system can be rebooted by entering CNTL-X (Monitor Escape) except EDIT. The Debugger can be entered

FIGURE 1-5. RELATIONSHIP OF SYSTEM PROGRAMS IN FLP-80DOS

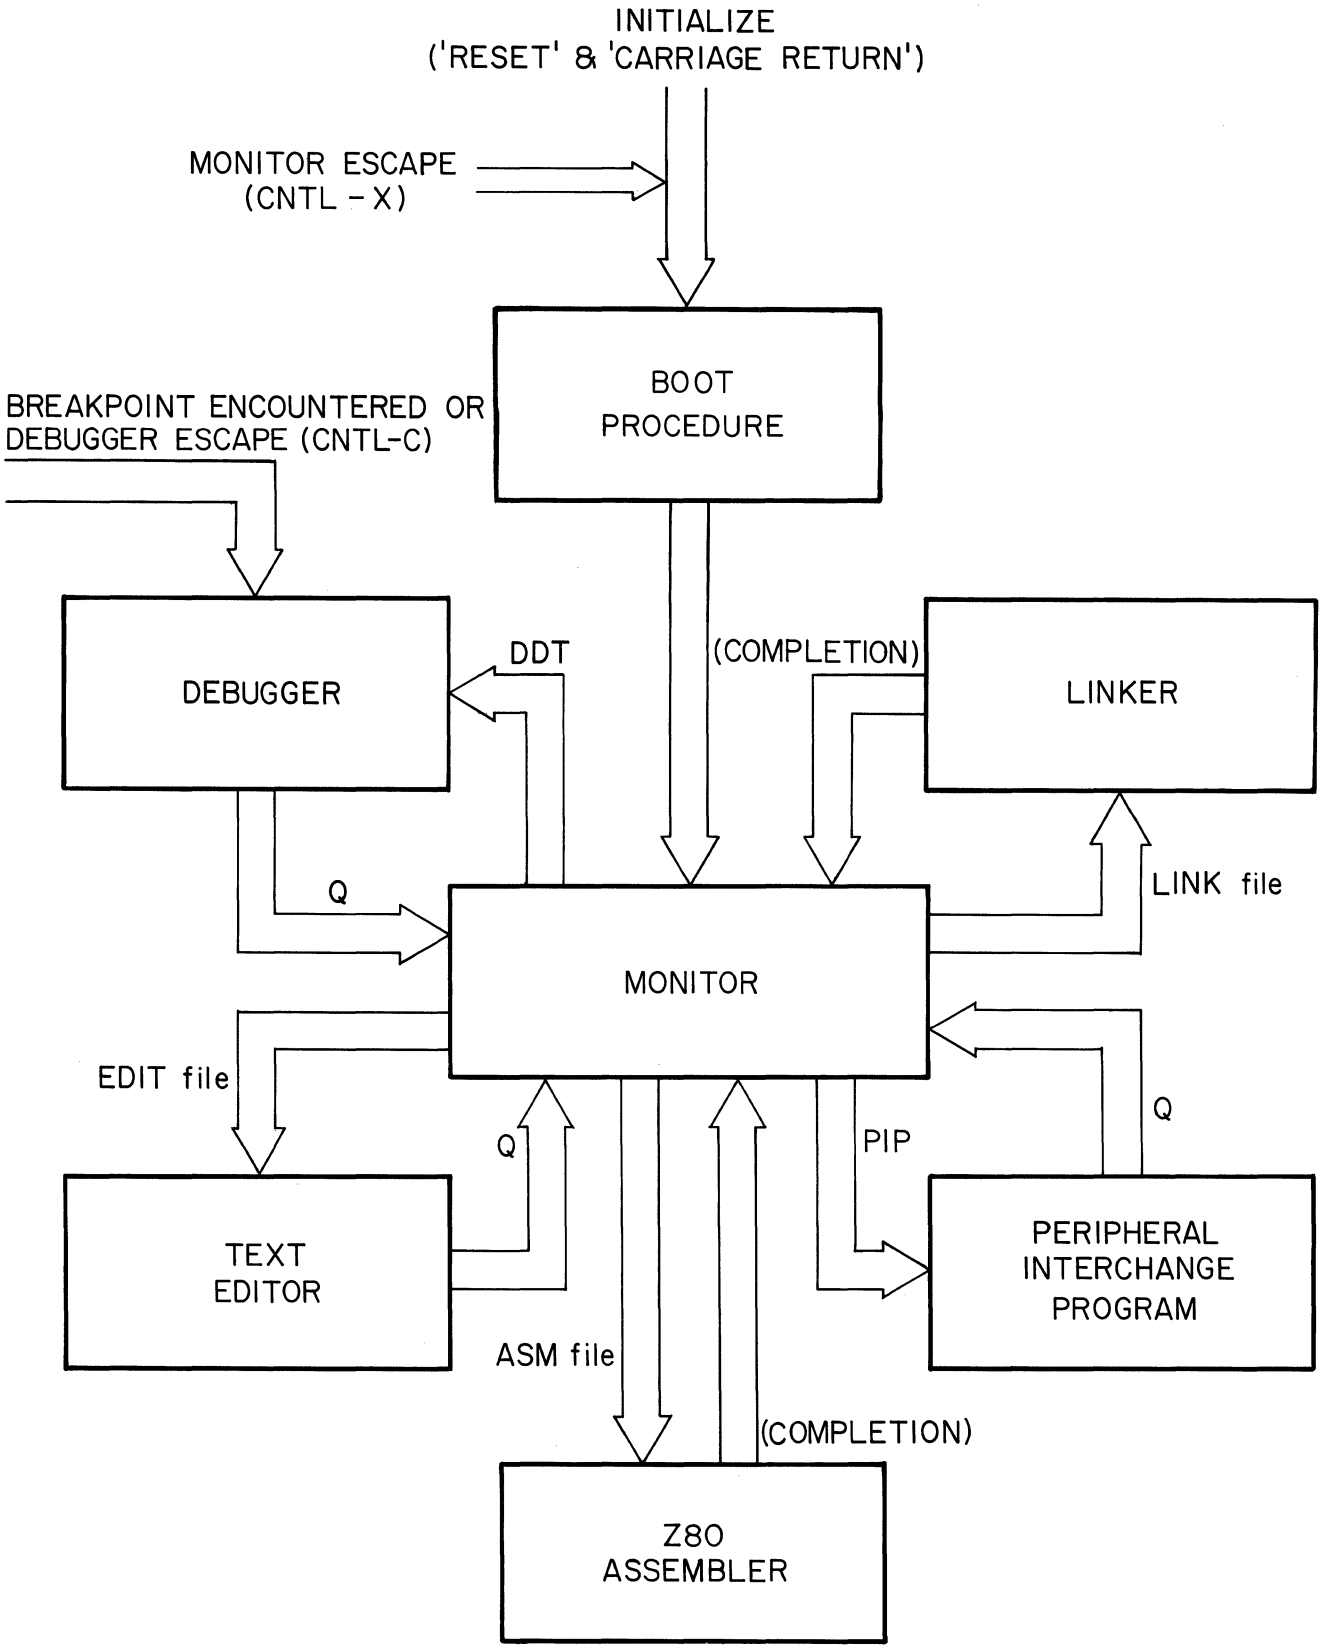

1-39. You now have one of the most powerful Z80 development systems at your finger tips. You will probably first wish to create a file on diskette. If so, proceed to Section 4 of this manual.

1-40. If the prompt does not appear on the console, see the troubleshooting section (Appendix D).

1-41. MEMORY SUMMARY

1-42. MEMORY MAP. Figure 1-5 depicts the memory map of the FLP-80DOS software. The standard system is supplied with 32K of RAM starting at address zero, 4-1K PROM's starting at $E000_H$, and 256 bytes of "scratchpad" RAM starting at $FF00_H$.

1-43. The PROM located at $EC00_H$ is the Disk Controller Firmware. It has the responsibility of translating track and sector information into commands to control the FLP-80 board. The three PROM's starting at $E000_H$ contain the power up procedure and the DDT debugger. The rest of the system software is read into the upper 9K of RAM from disk. This leaves the first 23K of RAM free for user programs and debugging (in a 32K system). The Editor, Assembler, PIP and the Linker also use this area. The 256 byte "scratchpad" RAM, located at $FF00_H$, is used by the DDT debugger and the Monitor.

FIGURE 1-6. STANDARD FLP-80DOS MEMORY MAP

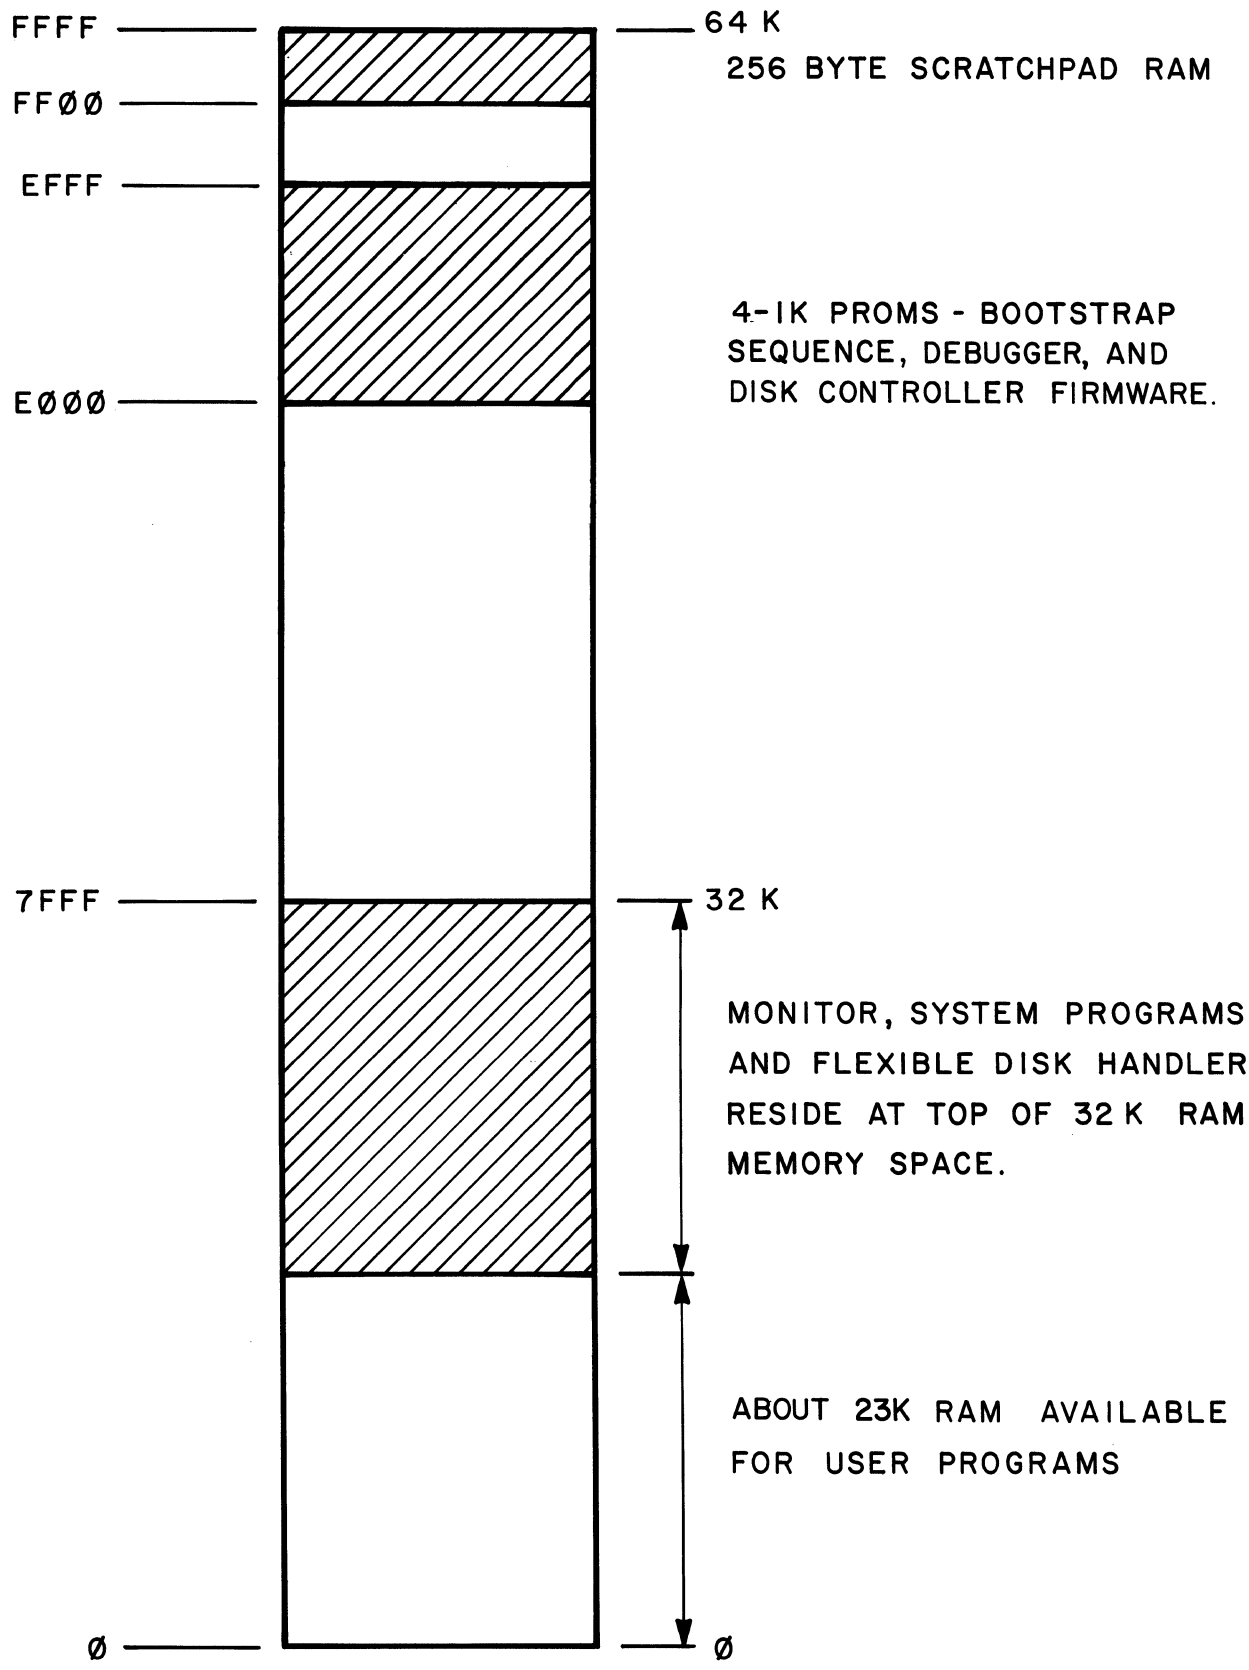

1-44. PORT MAP. Figure 1-6 defines the port allocation on the SDB-80. Ports D0-D7 are the PIO ports that come out to top edge connectors on the SDB-80. Ports D8-DB are the counter timer circuit ports; port D8 is the timer for the UART baud rate. Port DE is used for controlling dataset ready (DSR), clear to send (CTS), and reader step (RS). Also, Port DE is used for sensing the state of data terminal ready (DTR), request to send (RTS), and serial bit string of measuring baud rate (used by the operating system). Ports DC and DD are the UART ports. Ports E2-E7 are the disk controller ports. MOSTEK is reserving ports $E8_H$ thru FF_H for future expansion of its development system. Ports 7C-7D are also used by the FLP-80DOS Software Version 2.1 and above. It is recommended that the user limit his development system application to ports 00_H thru CF_H. Of course, for an OEM application all 256 ports are available to the user. In the event any development system add-on peripheral would exceed the assigned number of ports, MOSTEK would start with CF_H and work down.

FIGURE 1-7. OEM-80 PORT ALLOCATION

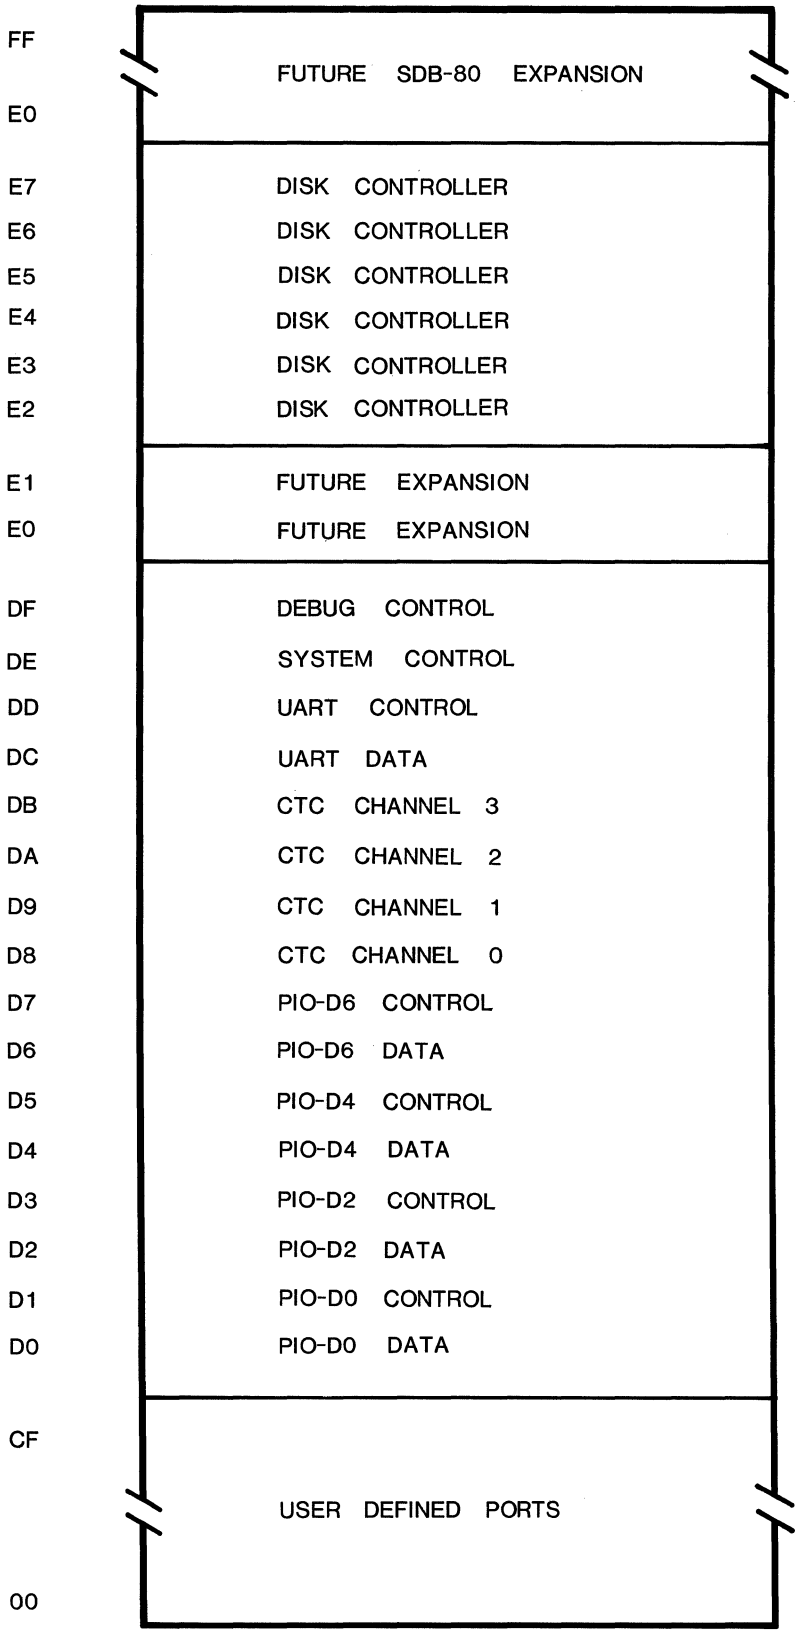

FIGURE 1-8. FLP-80DOS COMMAND SUMMARY

POWER UP OR RESET

Depress "CARRIAGE RETURN"

CONSOLE INTERACTON (Except DDT)

DEL	- delete the previous character
BACKSPACE	- delete the previous character.
CNTL-U	- delete the current line.
CNTL-C	- suspend operation.
CNTL-X	- abort to Monitor and reinitialize.
RETURN	- end of command line.
CNTL-I	- tab over 8 spaces.

MONITOR

$ASSIGN	lun, dataset	- assign dataset to LUN
$BEGIN	[aaaa]	- start execution at address aaaa.
$CLEAR	lun	- clear an assignment in the redirect table.
$DDT		- enter DDT, the debugger.
$DTABLE		- print default LUN table.
$DUMP	aaaa,bbbb,dataset[.OBJ]	- dump absolute object module to dataset.
$GET	dataset[.BIN]	- load binary file into RAM.
$INIT		- initialize disk.

```
      $RTABLE                                - print redirect table
                                               of LUN's.
      $SAVE      aaaa,bbbb,dataset[.BIN]     - save binary file from
                                               RAM.
```

ASSEMBLER

```
      $ASM   source dataset [TO listing dataset[,object dataset]]
```

OPTIONS

C - Print cross reference listing
K - no listing
L - listing (default)
N - no object output
O - object output (default)
P - pass 2 only
Q - quit - return to Monitor
R - reset symbol table (pass 2 only operation)
S - print symbol table.

DESIGNER'S DEVELOPMENT TOOL

```
      $DDT
```

NOTE: The console interaction for DDT is slightly different from the rest of FLP-80DOS.

Terminator = Carriage return, ^,/ , or dot.

The space between command and operands is printed by the system.

```
M aaaa,bbbb        -Display, update, or tabulate the contents of
                    memory.
P aa               -Display and/or update the contents of an I/O
                    port.
E [aaaa]           -Transfer control from DDT-80 to a user's
                    program.
```

H ±aaaa±bbbb=...	-Perform 16 bit hexadecimal addition and/or subtraction.
C aaaa,bbbb,cccc	-Copy the contents of a block of memory to another location in memory.
B aaaa	-Insert a breakpoint in the user's program.
R 1,X	-Display the contents of the user registers x=0 short, x=1-long.
O aaaa	-Set the offset constant.
L aaaa,bbbb,cccc	-Locate all occurrences of an 8 or 16 bit data pattern.
F aaaa,bbbb,cc	-Fill memory limits with an 8 bit data pattern.
V aaaa,bbbb,cccc	-Verify that 2 blocks of memory are equal.
W aaaa,nn,xxx	-Software single step (walk) for nn steps. xx=HD means print register heading.
Q	-Quit DDT-80 and return to the system Monitor.

EDITOR

$EDIT file

An	Advance n records
Bn	Backup n records.
Cn/string1/string2/	Change n occurrences of string 1 to string 2.
Dn	Delete n records, starting with current record.
En	Exchange n records with inserted records.
Fn	Flag print option: 0=no print, not 0=print
G dataset	Get dataset and insert after current record.
I	Insert records after current record.
Ln	Line: Access record number n.
Mn	Macro: Place command string into alternate command buffer 1 or 2.

Pn dataset	Put n records out to a different dataset (file).
Q	Quit: Save the file on disk and terminate the editor.
Sn/string/	Search for nth occurrence of the string.
T	Top: Insert at top of file before the first record.
Vn	Verify n records on the console device.
Wn	Write n records with record numbers to LUN 5.
Xn	Execute alternate command buffer n (1 or 2).

In all commands, except Fn and Ln, if n is zero or if n is not entered, it is assumed to equal one (1). n can take the form n_1 thru n_2 by entering n_1 - n_2.

LINKER

$LINK dataset 1 ,..,datasetn [TO dataset B [,dataset C]]
where dataset 1 and datasetn are object files, dataset B is binary file, and dataset C is a load map and cross reference listing.

A - enter starting link address.
C - global cross reference table output to dataset C.
L - Library search on a disk unit.
S - global symbol table output to dataset C.
U - print list of undefined global symbols.

PERIPHERAL INTERCHANGE PROGRAM

$PIP
APPEND dataset1 TO dataset 2 -append.

COPY	dataset2,...,dataset n TO dataset 1	-copy.
DATE		-examine/change date.
DIRECT	dataset 1 [TO dataset 2]	-print directory.
ERASE	dataset 1 ,...,dataset n	-erase a file.
FORMAT	name	-format a disk in disk unit 1.
INIT		-initialize disk units.
RENAME	dataset 1 TO dataset 2	-rename file.
STATUS	dataset 1 TO dataset 2	-print status of disk.
QUIT		-return to Monitor

SECTION 2

MONITOR

2-1. INTRODUCTION

2-2. The Monitor provides communication with the user via the console terminal enabling him to load and start execution of either system (e.g., PIP, EDITOR, ASM, LINKER) or user programs. In addition, the Monitor provides utility functions such as reassignment of logical unit devices and the creation of RAM image files. After power up or reset, the system automatically enters the Monitor environment awaiting entry of user commands. The prompting character for the Monitor is a $.

2-3. OPERATIONS SUMMARY

2-4. SYSTEM RESET.

2-5. The FLP-80DOS operating system may be reset by depressing the system RESET switch and then typing a "carriage return" on the console terminal. This starts the system reset sequence which first calculates the terminal baud rate and then loads the operating system into memory from the file OS.BIN[255] and begins execution at its starting address. The Monitor which is the first module in the operating system (See Figure 15-1) begins by initializing the following system parameters.

1. Default logical units 0-5
2. Logical unit redirect table
3. RAM mnemonic table (see Paragraph 15-10).
4. IOCS buffer allocation table (see paragraph 9-46)
5. All disk units containing diskettes (DK0,DK1 and etc.)

After the initialization sequence is completed, the Monitor

prints the system sign on message followed by the date or a prompt to enter the date if the system does not have a valid date stored, (this will always occur after power-up). Then a $ prompt will appear on the console.

2-6. POWER UP SEQUENCE. The power up sequence is identical to reset (See paragraph 2-4).

2-7. MONITOR COMMAND SUMMARY

2-8. Some of the Monitor commands utilize dataset specifications (See para. 1-21). A dataset can consist of device specifications (e.g. PR:) or file specifications (e.g. DK1:BINDEC.OBJ). When entering a monitor command name, only the number of characters required for uniqueness must be entered. These characters are underlined in the command syntax definition. Monitor commands can be divided into the following functional categories.

1. File Creation and Loading
   - SAVE - Saves a binary file on disk.
   - GET - Loads a binary file into RAM.
   - DUMP - Saves an absolute object file.
   - BEGIN - Begins execution of a loaded program.

2. Logical Unit Assignment and Table Functions.
   - $DTABLE - Lists the logical unit default table.
   - $ASSIGN - Assigns the redirect of a logical unit.
   - $CLEAR - Clears the redirect of a logical unit.
   - $RTABLE - Lists the logical unit redirect table.

3. Miscellaneous
   - $DDT - Enters DDT environment.
   - $INIT - Initialize system for newly inserted disket-tes.

2-9. IMPLIED RUN COMMAND. As the user types a command, its characters are entered directly into the command buffer. After a carriage return is entered, the Monitor compares the command name in the buffer with a list of Monitor commands. If a Monitor command is not entered, the Monitor assumes the command name is a binary file (extension = BIN) on the system disk. The system disk which is disk unit 0 (DK0:) is then searched for the specified file. If the file is not found, the following message is printed on the console.

```
****ERROR  04  FILE NOT FOUND
```

If the file is found, it is loaded and execution is started at its load address. The implied run command also enables the "minimal listener" which provides a console escape during program execution (see paragraph 2-45).

2-10. The implied run command provides the facility for loading and executing both system programs and user programs. The following commands transfer control from the Monitor to system programs which reside on the system disk (DK0:).

```
$EDIT     - Enter Editor
$PIP      - Enter Peripheral Interchange Program
$ASM      - Enter Assembler
$LINK     - Enter Linker
```

2-11. A user program can also be executed in an identical manner by entering a program filename. The filename must be a valid dataset (See Paragraph 1-21) and cannot contain imbedded blanks. A binary extension (BIN) or a blank extension which defaults to binary are the only allowed extensions. The file can reside on any supported disk unit (e.g. DK0, DK1). The following examples illustrate execution of user programs using the implied run command.

```
PROG1
DK1:PROG2.BIN
```

Upon entry into the user program, the DE register points to the next location (blank or carriage return) in the command buffer after the program name. Using the implied run command, a convenient facility is available for adding either new commands or user extensions to the Monitor.

2-12. COMMAND ENTRY. When entering a command from the terminal the command line may exceed the maximum terminal line length (usually 80 characters). If this occurs, the terminal output driver (TT) will automatically issue a CR and LF to enable continuation of the command on the next line. Since a carriage return input from the keyboard is interpreted by the Monitor to be the terminator of the command string, the user should not enter a carriage return until the entire command has been entered. The maximum command length is set by the command buffer size which is 160 characters.

2-13. DEFINITIONS.

1. DEFAULT TABLE - the default logical unit table. After power up or system reset a default logical unit table consisting of logical units 0 through 5 is created. This provides the user with 6 predefined I/O channels which can be used by application programs. The system subroutines RDCHR and WRCHR (see section 8) can be used for I/O transfers by specifying the logical unit in the E register. After power up or reset, logical unit 0 is always assigned the console input device (TK:) and logical unit 1 is assigned the console output device (TT:). Logical units 2-5 are initialized on power up or reset to values which are defined during the system SYSGEN procedure (See paragraph 15-12). At execution time the default table may be modified if a device is

opened after being redirected by the ASSIGN command (See paragraph 2-14). In this case system reset can be used to initialize the table.

2. REDIRECT TABLE - the logical unit redirect table. If the user wishes to change a logical unit device specification, he can redirect it to a new device using the Assign command. The redirect table consists of a list of all the currently redirected logical units.

3. BINARY FILE - A RAM-image file created by either the SAVE command or the Linker. A binary file generally contains executable machine code but may also contain data. A binary file has the extension BIN.

4. OBJECT FILE - a file created by the object output of either the Assembler or the DUMP command. The object module is in ASCII (See Mostek Object Format, Appendix B). The object module contains data and may also contain relocating and linking information for use by the Linker. An object file has the extension OBJ.

2-14. ASSIGN COMMAND

2-15. SYNTAX: ASSIGN N,Dataset

2-16. The ASSIGN command assigns a dataset to a logical unit number. This reassignment enables the user to change a logical unit device specification at run time. A dataset contains a device specification and a filename if the device is file structured. The logical unit number N is a hexadecimal number between 0 and FE (254 decimal). The ASSIGN command places the logical unit number and dataset into the Redirect Table. After an open

request (See IOCS Section 9) is executed, the assigned dataset is copied into the I/O vector being referenced. All future I/O transfers for the specified logical unit number use the newly assigned dataset.

EXAMPLE 1. Assign logical unit 2 to the paper tape reader device.

$ASSIGN 2,PR:(CR)

EXAMPLE 2. Assign logical unit 0 to a batch input file containing system commands (See Section 14 for batch mode operation).

$ASSIGN 0,DK0:BATCH.CMD(CR)

2-17. BEGIN COMMAND

2-18. SYNTAX: BEGIN [aaaa]

2-19. The BEGIN command starts execution of a previously loaded program. The hexadecimal address aaaa is the starting address which may be specified by the user. If this address is not specified, execution begins at the starting address of the previously loaded program. The program starting or execution address is stored in the user's PC (program counter) register (address $FFFE_H$) after loading a program with the GET command. The BEGIN command also enables the "minimal listener" providing a console escape during program execution (See paragraph 2-45).

EXAMPLE 1. Begin program execution at location 0100_H.

$BEGIN 100(CR)

2-20. CLEAR COMMAND

2-21. SYNTAX: CLEAR [N]

2-22. The CLEAR command removes logical unit N from the redirect

table. This cancels any previous reassignment of a logical unit made with the ASSIGN command. If N is not entered, all entries in the Redirect Table are removed.

EXAMPLE 1. Clear logical unit 3.

```
$CLEAR 3(CR)
```

2-23. DDT COMMAND

2-24. SYNTAX: DDT

2-25. The DDT command transfers control to the DDT environment (See Section 7).

2-26. DTABLE COMMAND

2-27. SYNTAX: DTABLE

2-28. The DTABLE command lists the default logical unit table on the console output device. After power up or reset the default logical unit table consisting of logical units 0 through 5 is created. Logical unit 0 is always assigned the console input device (TK:) and logical unit 1 is assigned the console output device (TT:). Default values for logical units 2-5 are defined when the operating system is created using the SYSGEN procedure (See Paragraph 15-12).

EXAMPLE List default logical unit table.

```
$DTABLE(CR)
LU DATASET
00 TKO:
01 TTO:
02 TKO:
03 CPO:
04 TKO:
05 CPO:
```

2-29. DUMP COMMAND

2-30. SYNTAX: DUMP aaaa,bbbb,Dataset

2-31. The DUMP command outputs the contents of memory in absolute object format (See Appendix B) to the specified output dataset. The hexadecimal address aaaa is the beginning address and bbbb is the ending address of the data in memory. The addresses aaaa and bbbb can be terminated by a comma or a space and any number of spaces may be entered between command elements. The dataset specification can be any supported output device. If the dataset is an output file, the extension must be either OBJ or blank. If the extension is not entered (blank), the Monitor assumes OBJ.

EXAMPLE 1. Create the object file BINDEC which resides between locations 1000 and 1400, then dump it to paper tape.

```
$DUMP 1000, 1400, BINDEC(CR)
$PIP(CR)
#C BINDEC.OBJ TO PP:(CR)
#Q(CR)
```

2-32. GET COMMAND

2-33. SYNTAX: GET Dataset

2-34. The GET command loads a binary file specified by the dataset into memory. The program execution address is also loaded into the user's PC (program counter) register. This enables program execution to be initiated using the BEGIN command (See Section 2-17) without specifying the starting address. The execution address of a binary file is the first address or lowest program address in memory. The dataset extension must be either BIN or blank. If the extension is not entered (blank), the Mon-

itor assumes BIN.

EXAMPLE 1. Load the binary file BINDEC from disk unit DK0.

```
$GET BINDEC(CR)
```

EXAMPLE 2. Load the binary file PROG22 from disk unit DK1 and begin execution at the starting address.

```
$GET DK1:PROG22.BIN(CR)
$BEGIN(CR)
```

2-35. INIT COMMAND

2-36. SYNTAX: INIT

2-37. THE INIT COMMAND MUST BE GIVEN ANYTIME A DISKETTE IS NEWLY INSERTED AND THE USER WISHES TO CONTINUE EXECUTING MONITOR COMMANDS. This guarantees that the proper sector and track maps are in memory during file operations on the newly inserted diskette. If the user fails to give this command, files on the newly inserted diskette may be irretrievably lost. During power up or reset the INIT command is automatically executed by the Monitor. The INIT command may also be given from the PIP environment (See Section 3).

2-38. RTABLE COMMAND

2-39. SYNTAX: RTABLE

2-40. The RTABLE command lists the logical unit redirect table on the console output device. The redirect table contains a list of all the currently redirected logical units.

EXAMPLE List redirected logical units.

```
$RTABLE(CR)
LU DATASET
02 CR0:
05 DK1:FILE22.MAC[1]
```

2-41. SAVE COMMAND

2-42. SYNTAX: SAVE aaaa,bbbb,Dataset

2-43. The SAVE command outputs the contents of memory in a RAM image form to the disk file specified by the dataset. The hexadecimal address aaaa is the beginning address and bbbb is the ending address of the data in memory. The addresses aaaa and bbbb can be terminated by a comma or a space and any number of spaces may be entered between command elements. The dataset extension must be either BIN or blank. If the extension is not entered (blank), the Monitor assumes BIN.

EXAMPLE 1. Save the memory contents from 0 to 0100 by creating a binary file FILE1.BIN.

```
$SAVE 0,100,FILE1(CR)
```

EXAMPLE 2. Create the binary file BINDEC.BIN on disk unit 1.

```
$SAVE 1000,1400,DK1:BINDEC.BIN(CR)
```

2-44. The SAVE command creates a binary file which can be up to 255 sectors in length. Each sector contains 124 bytes allowing a maximum file length of 31620 decimal or 7B84 hexadecimal bytes. When loading a binary file the GET command loads a fixed number of sectors into memory. A save block size (bbbb-aaaa) will not always equal an integral number of sectors. This can cause (worst case) up to 123 extra bytes to be loaded beyond the end address bbbb.

2-45. CONSOLE ESCAPE

2-46. The "Minimal Listener" is a background interrupt processor which detects the console input codes Control-X and Control-C. This provides the facility for a console exit from an executing

program to either the Monitor or DDT. The console escape can be a very useful tool during program debugging. The console input of Control-X suspends execution of a program and reboots the operating system returning control to the Monitor (prompt=$). A console input of Control-C suspends execution and enters DDT (prompt=.). DDT displays the program registers (similar to breakpoint) and execution can be resumed from DDT using the E command. (See Section 7-45).

2-47. The Minimal Listener is enabled only by the BEGIN and IMPLIED RUN commands (See paragraphs 2-9 and 2-17). It is disabled within the Monitor enviroment, and in the Editor and DDT.

SECTION 3

PERIPHERAL INTERCHANGE PROGRAM (PIP)

3-1. INTRODUCTION

3-2. The transferring of files and data between devices is the primary function of the Peripheral Interchange Program (PIP). PIP uses the device independent features of the I/O control system (IOCS), allowing data to be transferred from any system input device to any output device. In addition, PIP performs utility functions such as listing disk directories, renaming files, and formatting diskettes.

3-3. ENTERING PIP

3-4. The user can enter the PIP environment by typing the file name PIP as a command in the Monitor environment. The Monitor then loads the file PIP.BIN from disk unit DK0 and starts its execution. The PIP prompting character is a #. To return to the Monitor the operator enters the QUIT command as illustrated in the following example.

```
EXAMPLE    $PIP(CR)          ;Enter PIP environment
           #Q(CR)            ;Return to Monitor
```

3-5. PIP COMMAND SYNTAX

3-6. Each PIP command contains a command name followed by a command operand field. The command names which are up to 6 characters in length denote the function to be performed. Only the first character of each name has to be entered to execute the selected function.

COMMAND NAMES

APPEND	DIRECT	INIT	QUIT
COPY	ERASE	RENAME	
DATE	FORMAT	STATUS	

COMMAND SYNTAX

NAME Input Datasets(1...N) TO Output Dataset

3-7. The second part of each command is the command operand field which consists of a single dataset or a series of datasets depending upon the selected command. The keyword 'TO' has special significance in the command operand field. A dataset appearing to the right of 'TO' is defined as an output dataset. A dataset on the left of 'TO' is defined as an input dataset. There can be only one output dataset designation although there can be any number of input datasets (limited only by the command line length of 160 characters). The character '>' can be used in place of the keyword 'TO', performing the identical function.

3-8. A dataset can contain a single device (e.g. PR:) or a device, filename, extension and user number (e.g. DK1:FILE22.MAC [2]) if the device is file structured. The form of a dataset is described in paragraph 1-21. An asterisk can be used to replace the filename, extension or user number in an input dataset, but it is illegal in the output dataset. The asterisk specifies all occurrences of an element.

3-9. **APPEND COMMAND**

3-10. SYNTAX: APPEND Dataset 1 TO Dataset 2

3-11. The Append command attaches a copy of dataset 1 to the end of dataset 2. Dataset 1 remains unchanged. Both datasets must contain file structured devices (e.g.DK) and neither can be a binary file (Extension = BIN).

EXAMPLE

Append the file F1 on disk unit DK0 to the file F2 on DK0.

#APPEND F1 TO F2(CR)

3-12. COPY COMMAND

3-13. SYNTAX: COPY Dataset 2,.....Dataset N TO Dataset 1

3-14. The Copy command can be used for a variety of purposes such as listing files, concatenating individual files, or copying all the files from one device (e.g. DK0) to a second device (e.g. DK1). The Copy command copies the contents of the input datasets (Datasets 2,..,N) to the output dataset (Dataset 1). If the file in the output dataset already exists, the following message appears on the console:

```
Dataset, ALREADY EXISTS
ERASE?
```

If the operator responds by entering a Y (followed by a carriage return) PIP deletes the file in the output dataset. The input datasets are then copied to the output dataset, assuming its name. No action is performed if a response other than Y is given. If a file specified in the input datasets does not exist, the following message is sent to the console:

```
Dataset, NO SUCH FILE
```

3-15. The Copy command does not permit binary (extension = BIN) and non-binary file types to be mixed. If an attempt to copy a binary file to a source file is made, the error message INCOMPATIBLE EXTENSIONS is output to the console.

3-16. If a Copy is executed to a file-structured device with no filename (e.g.DK1), then the filename, extension and user number of the input dataset remains unchanged after transfer to the output device. However, if a filename is specified in an output dataset, the input datasets are concatenated and copied to the output file. In any case the file date of the output file will be the same as in the input file.

3-17. An asterisk can be used to replace the filename, ex-

tension, or user number in a Copy input dataset. The asterisk specifies all occurrences of an element. If an asterisk is specified in an input dataset, PIP automatically prints on the console each input file as it is copied. In order to illustrate the many possible uses of the Copy command, the following examples are given, classified according to output dataset types.

EXAMPLE 1. Copy to a non-file structured output device.

a. Transfer data from the paper tape reader to the paper tape punch. Input data from the paper tape reader is terminated by either an EOF mark of 04_H or by 50 trailing nulls after the end of data.

```
#COPY PR: TO PP:(CR)
```

b. List the contents of FILE1 on DK1 to the line printer.

```
#C DK1:FILE1 TO LP:(CR)
```

EXAMPLE 2. Copy to a file structured device with no filename (e.g.DK1:).

a. Transfer the files F1, F2 and F3 from disk unit DK0 to disk unit DK1.

```
#C F1,F2,F3 TO DK1:(CR)
```

b. Transfer all files from disk unit DK0 to disk unit DK1. The diskette in DK0 contains 5 files.

```
#C *.*[*] TO DK1:(CR)
DK0:ASM   .SRC[1]
DK0:ASM   .BIN[1]
DK0:PIP   .BIN[1]
DK0:EDIT  .SRC[1]
DK0:EDIT  .BIN[1]
```

c. Copy all the files with the extension SRC from user number 1 to user number 2.

```
#C *.SRC[1] TO DK0:[2] (CR)
```

DK0:ASM .SRC[1]
DK0:EDIT .SRC[1]

EXAMPLE 3. Copy to a specified filename on a file structured device.

a. Copy FILEA.OBJ on DK1 to FILEB.OBJ on disk unit DK0.
#C DK1:FILEA.OBJ TO FILEB.OBJ(CR)

b. Concatenate the three source files F1,F2 and F3 and copy them to F123.
#C F1,F2,F3 TO F123(CR)

3-18. DATE COMMAND

SYNTAX: DATE

The DATE command is used to examine and/or modify the system's date. After entering the command, the date on the system will be printed if it exists and the following message will allow you to change it if desired:

ENTER DATE (DD-MMM-YY)

If only a carriage return is entered then the current system date is retained. Otherwise, type the day of the month first, then the first 3 letters of the month, and then the last 2 digits of the year with each item separated by a dash (-). This date will be stored in the directory of non-binary files when they are created or updated for reference by the user and will be displayed by a Directory command (see DIRECT).

3-19. DIRECT COMMAND

3-20. SYNTAX: DIRECT [Dataset 1 TO Dataset 2]

3-21. The DIRECT command is used to list the directory of disk devices. The input dataset (Dataset 1) is used to specify the disk unit (DK0,DK1 and etc.) for which the directory listing will be generated. If the input dataset is omitted, DK0 is assumed. If a filename, extension or user number is specified, only those files with the specified filename, extension and user number will be listed. An asterisk can replace a dataset element (e.g.Filename=*) to specify all or every occurrence of that element (e.g. All Filenames). The output dataset (Dataset 2) is optional and can be used to output the directory listing to any specified device. The default output device is the console.

3-22. The heading of the directory listing contains the disk unit (e.g. DK0) and the Diskette Name which were entered when the disk was formatted (See Paragraph 3-27). A file is identified in the directory by its filename, extension and user number. The directory listing also specifies the number of records used by each file and the starting track and sector location of the file, and the date of creation or last update.

To prevent information from being scrolled off the screen when listing large directories to a video terminal, the listing may be stopped by entering a space from the keyboard. The listing will resume when a second space is entered. The following examples illustrate the DIRECT command.

EXAMPLE 1. List entire directory of system disk on the console device.

```
#D(CR)
DIRECTORY DK0: DISKETTE BACK UP 1     Listed on 8-MAR-79
FILENAME EXT USER RECORDS TRK SECT        Date
PIP      .BIN    1     25   09H 01H
BINDEC   .SRC    1      5   0BH 04H         4-MAR-79
```

```
BINDEC  .OBJ    1      3    OBH OBH          4-MAR-79
BINDEC  .BIN    1      2    OBH OEH
#
```

EXAMPLE 2. List all files of disk unit 1 with the extension OBJ on the line printer.

```
#D DK1:*.OBJ[1] TO LP:(CR)
DIRECTORY DK1: DISKETTE BACK UP 2        On 15-Jun-79
FILENAME EXT USER RECORDS TRK SECT          Date
FADD     .OBJ    1      3    09H 01H        10-APR-79
FMUL     .OBJ    1      3    09H 04H        1 -JUN-79
#
```

3-23. ERASE COMMAND

3-24. SYNTAX: ERASE Dataset 1 [, Dataset 2 ,...,Dataset N]

3-25. The Erase command removes the specified file or files from the disk unit and makes the space available for use. A filename must be entered for the ERASE command. The extension and user number if not entered will default to a blank extension and a user number of 1. After the ERASE command is entered, PIP will print the following message on the console:

ERASE?

If the operator responds by entering a Y (followed by a carriage return) PIP deletes the specified file or files. No action is performed if a response other than Y is given. If the file specified in the dataset does not exist, the following message is sent to the console:

Dataset, NO SUCH FILE

3-26. An asterisk can be used to replace the filename, extension or user number in the dataset to be erased. The asterisk specifies all occurrences of an element. The following examples

illustrate the ERASE command:

EXAMPLE 1. Erase the files F1 and F2 on the disk in DK0. Note the device defaults to DK0 and the user number to 1.

#ERASE F1,F2(CR)

EXAMPLE 2. Erase an object file from DK1 with a user number of 3.

#ERASE DK1:F1.OBJ[3](CR)

EXAMPLE 3. ERASE all binary files (EXT=BIN) with a user number of 1 on DK1.

#ERASE DK1:*.BIN(CR)

EXAMPLE 4. Erase all files on disk DK0.

#ERASE *.*[*](CR)

3-27. FORMAT COMMAND

3-28. SYNTAX: FORMAT Name

3-29. The Format command formats each track and sector of a diskette in unit DK1 with the information necessary for proper accessing of data from the disk. The operand name used by the Format command gives each formatted disk an identifier for future reference. The name is eleven characters in length and can contain any printable characters. The DIRECT and STATUS commands output this name as a part of their headings to aid in referencing individual diskettes. After the FORMAT command is entered, PIP will print the following message on the console:

FORMAT?

If the operator responds by entering a Y (followed by a carriage return) PIP formats the diskette in unit DK1. No action is performed if a response other than Y is given.

3-30. To provide additional file protection, it is recommended

that each diskette be formatted with a unique name. The disk operating system prior to an Erase or Close operation verifies that the name of the diskette in a unit (DK0 or DK1) agrees with the name of the last previously initialized diskette in that unit. All disk units are initialized when entering PIP from the Monitor or after execution of the INIT command (See paragraph 3-34).

3-31. Formatting of a diskette initializes all sectors making them available for use (See STATUS paragraph 3-41). A disk must be formatted before it can be used the first time in the system. An unformatted diskette should not be inserted into the the system until just prior to execution of the format command. A previously used diskette can be reformatted; however, any files on the diskette will be destroyed.

3-32. The format command requires that an operational system disk is resident in unit DK0. A system disk is defined as a previously formatted disk containing the required operating system programs. The diskette to be formatted is placed in disk unit 1. The system programs are automatically copied to the new diskette in DK1 during the execution of format.

3-33. The following examples illustrate the Format command:

EXAMPLE 1. Format the disk in unit DK1 giving it a name of BACK UP 1.

#FORMAT BACK UP 1(CR)

EXAMPLE 2. Format a new disk and also copy the FLP-80DOS Assembler, Editor, Linker and PIP programs to the newly-formatted disk.

#FORMAT SYS DISK 1(CR)

#C ASM.BIN, EDIT.BIN, LINK.BIN, PIP.BIN TO DK1:(CR)

NOTE: Using the above procedure the user can generate his own system disks containing only the system application programs (E.G.ASM and PIP) which he desires.

3-34. INIT COMMAND

3-35. SYNTAX: INIT

3-36. The Init command should be issued any time a new diskette is inserted and the user wishes to continue executing PIP commands. This guarantees that the proper sector and track maps are in memory during file operations on the newly inserted diskette. When entering PIP from the Monitor, the Init command is automatically executed by PIP.

3-37. RENAME COMMAND

3-38. SYNTAX: RENAME Dataset 1 TO Dataset 2

3-39. The Rename command is used to change the name of a specified file. The filename, extension and user number in Dataset 1 is changed to the filename, extension and user number in Dataset 2. If the file in the output dataset (Dataset 2) already exists, the following message appears on the console:

```
Dataset, ALREADY EXISTS
ERASE?
```

If the operator responds by entering a Y (followed by a carriage return) PIP deletes the file in Dataset 2. The file in Dataset 1 is then renamed to the name specified in Dataset 2. No action is performed if a response other than Y is given.

3-40. The RENAME command does not permit a binary extension (BIN) to be changed to a nonbinary extension or a nonbinary extension to be changed to a binary extension. The following examples illustrate the Rename command:

EXAMPLE 1. Rename the file FILE1 on disk unit DK0 to FILE2.SRC.

```
#RENAME FILE1 TO FILE2.SRC(CR)
```

EXAMPLE 2. Rename the file FILEX1.OBJ on disk unit DK1.

```
#RENAME DK1:FILEX1.OBJ[1] TO DK1:FILEX2.OBJ[3](CR)
```

3-41. STATUS COMMAND

3-42. SYNTAX: STATUS [Dataset 1 TO Dataset 2]

3-43. The Status command is used to list the diskette name, the total number of sectors available, the number of sectors used and the number of bad sectors. The diskette name which identifies the individual disk is entered when the disk is formatted (See paragraph 3-27). The input dataset (Dataset 1) of the status command identifies the disk unit (DK0 or DK1) for which status is desired. The output dataset is optional and can be used to output the status listing to any output device. The default is the console device. The following examples illustrate the STATUS command.

EXAMPLE 1. List the status of disk unit DK1 to the line printer.

```
#STATUS DK1: TO LP:(CR)
STATUS DK1: DISKETTE BACK UP 2
SECTORS AVAILABLE   1668
SECTORS USED         152
SECTORS BAD            0
```

EXAMPLE 2. List the status of disk unit DK0. Note if the input dataset is not specified it defaults to DK0.

```
The diskette name is 'BACK UP 1'
#S(CR)
STATUS DK0: DISKETTE BACK UP 1
SECTORS AVAILABLE   1020
SECTORS USED         800
SECTORS BAD            0
```

3-44. QUIT COMMAND

3-45. SYNTAX: QUIT

3-46. The Quit command exits PIP and returns control to the FLP-80DOS Monitor.

SECTION 4

FLP-80DOS TEXT EDITOR (EDIT)

4-1. INTRODUCTION

4-2. The FLP-80DOS Text Editor assists the user in origination and modification of assembly language source programs and English text documentation. The Editor resides on the FLP-80DOS System Diskette. It permits random access editing of ASCII diskette files. The Editor is designed for usage with the MOSTEK FLP-80 system, but it can be adapted to other systems for OEM uses.

4-3. CAPABILITIES

4-5. The FLP-80DOS Text Editor permits random access editing of ASCII diskette files on a line and character basis. Whole lines and character strings embedded within lines can be accessed, changed, deleted, or added to an existing or new diskette file. The size of the file to be edited is limited only by diskette capacity. All I/O operations to the diskette are transparent to the user.

4-5. SOFTWARE CONFIGURATION

4-6. The Editor is resident on diskette. When loaded, it starts at RAM address zero. Figure 4-1 shows the memory map for the Editor. Editor buffers and variables are placed in RAM between the top of the Editor and bottom of the Flexible Disk Handler.

4-7. The Editor uses Logical Unit Numbers 0 and 1 for console interaction and Logical Unit Number 5 for outputting records with

line numbers. Logical Unit Number 5 is typically assigned to a line printer device. All I/O to the disk is via LUN FF_H, which cannot be reassigned via the Monitor 'ASSIGN' command. Figure 4-2 depicts this structure.

4-8. DEFINITIONS

1. SOURCE - ASCII characters comprising a Z80 assembly language program or some other text.

2. RECORD - A single source statement ending with a carriage return.

3. FILE - A diskette file which contains the source.

4. POINTER - the position in the source where the next action of the Editor will be initiated.

5. CURRENT RECORD - the record in the source pointed to by the pointer.

6. RECORD NUMBER - the decimal number of a record, beginning at one (0001) for the first record in a file and increasing sequentially for each record.

7. INSERT - Installation of record(s) in a file immediately following the current record. Inserted records are assigned sequentially increasing line numbers.

8. DELETE - removal of the current record from a file.

FIGURE 4-1. EDITOR MEMORY MAP

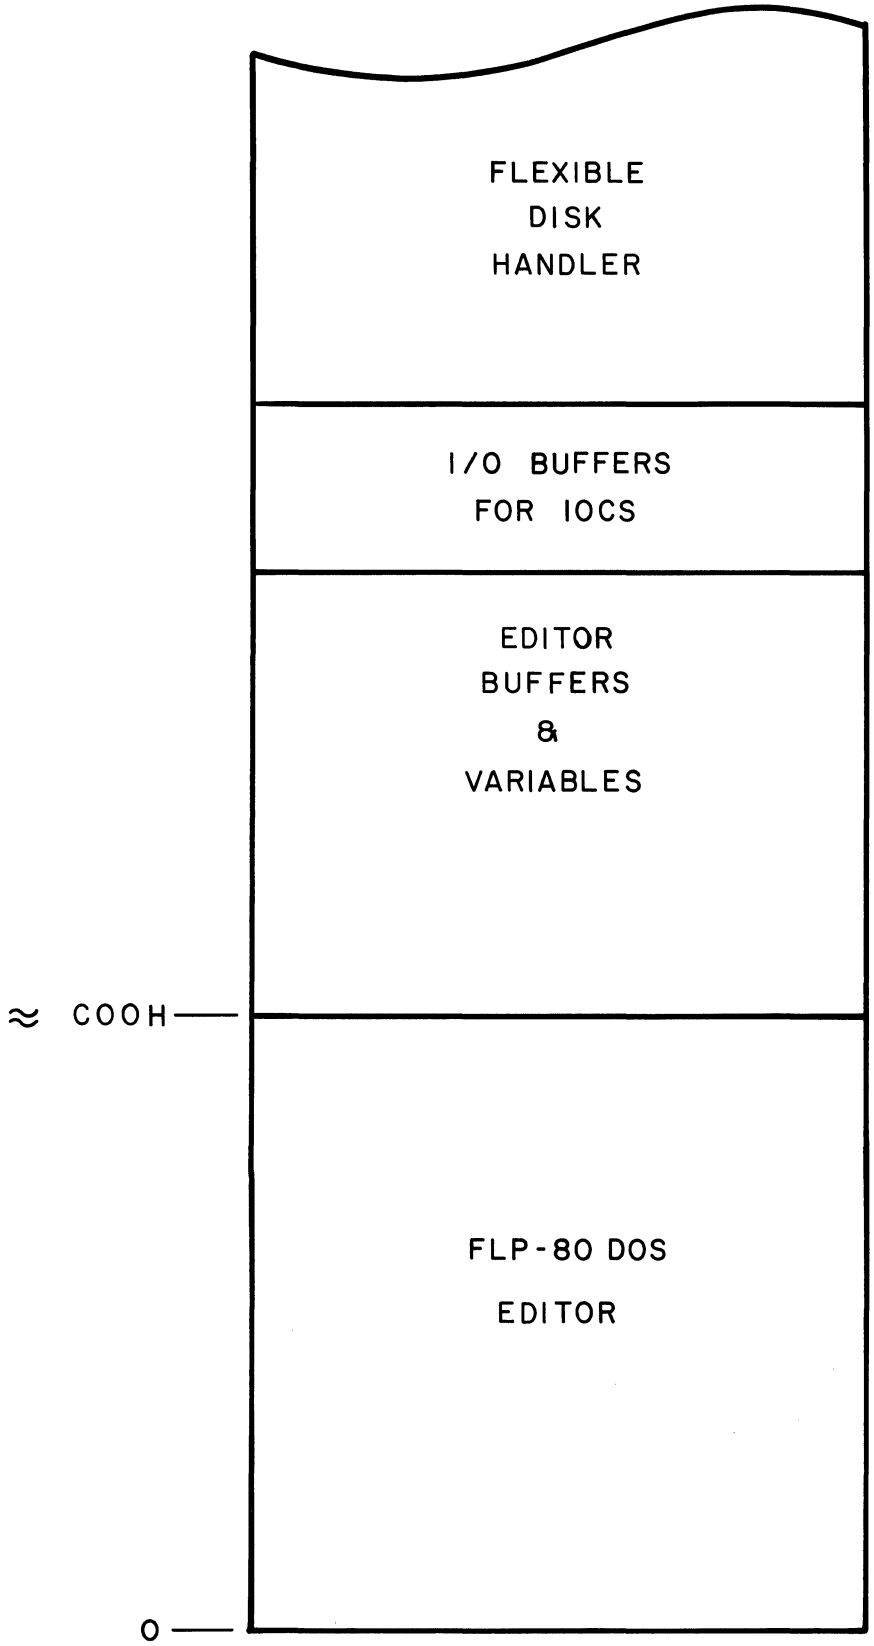

FIGURE 4-2. LOGICAL UNIT NUMBER STRUCTURE

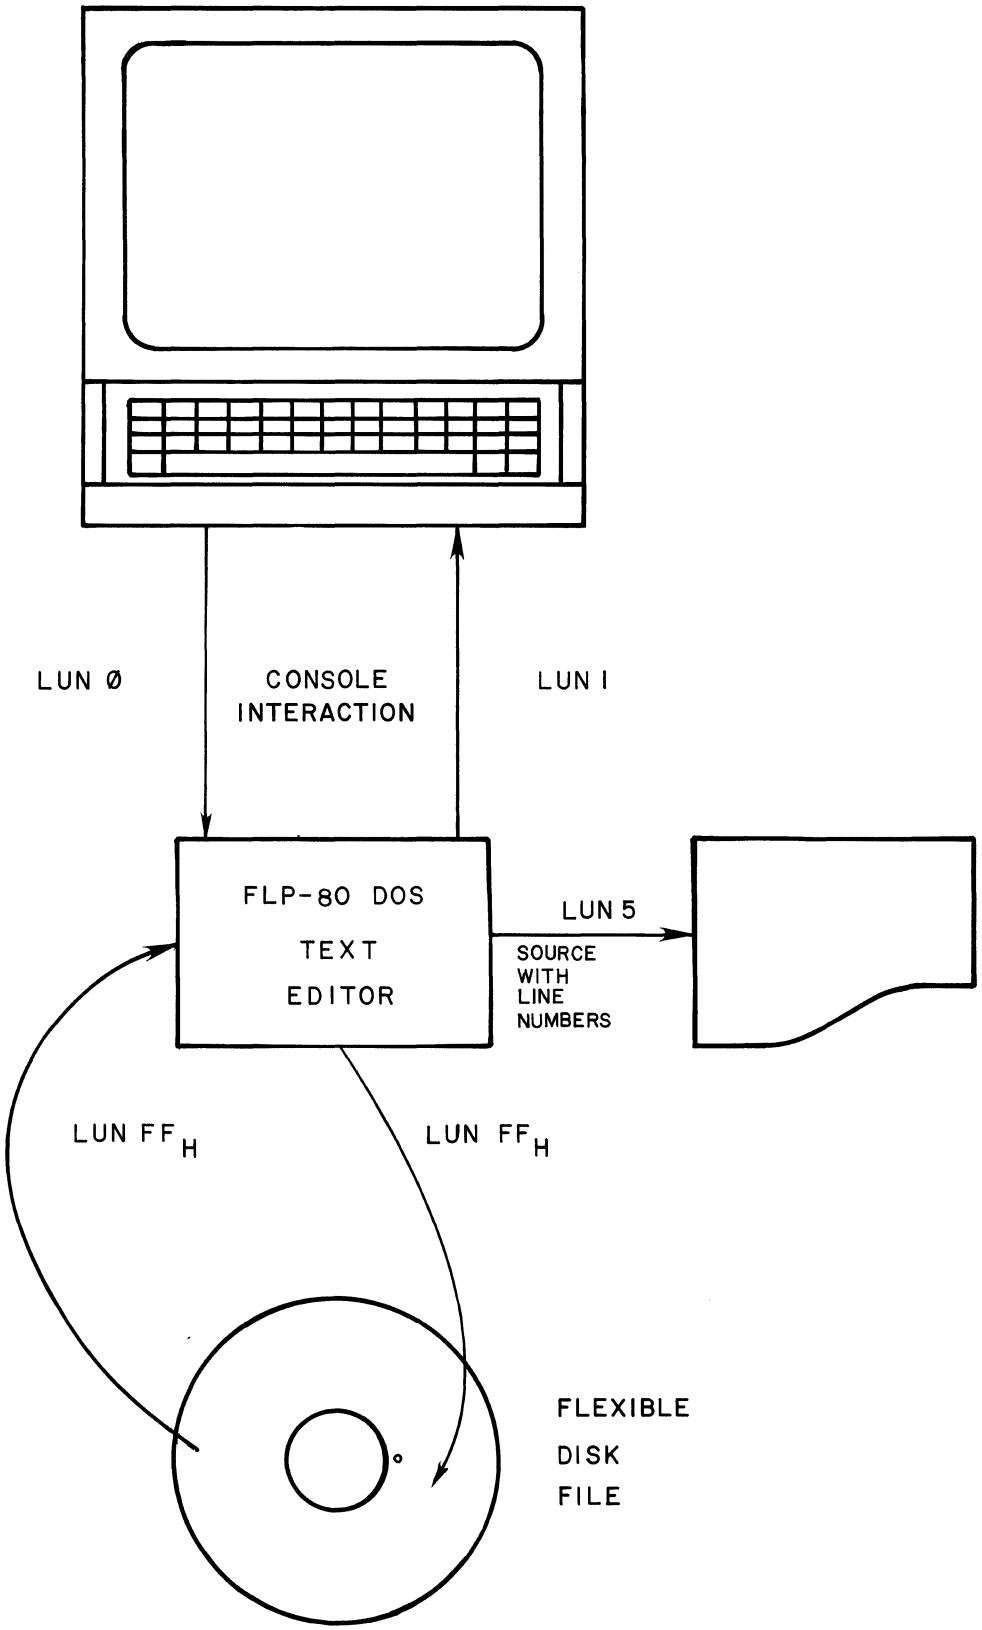

4-9. USING THE TEXT EDITOR - CONSOLE INTERACTION

4-10. All user interaction with the EDITOR is via the console device. The Editor issues prompts and messages to direct the user. The user responds by entering commands or data via the console keyboard. Each command or data record is terminated by a carriage return. The user can modify a record before depressing carriage return with the following console keys:

1. DEL: RUBOUT (ASCII $7F_H$). Delete the previous character. Successive characters may be deleted by entering more than one 'rubout'. The characters which are deleted will be printed on the console device between two backslash characters (\).

2. CNTL-H: BACKSPACE (ASCII 08_H). Performs the same function as RUBOUT, but the backslash is not printed on the console device.

3. CNTL-U: NEGATIVE ACKNOWLEDGE (ASCII 15_H). Deletes the current line of entered information and reprompts the user for a new record of input.

4-11. USING THE TEXT EDITOR - ENTERING COMMANDS

4-12. When the Editor prompts for a command (>), the user may enter commands via the console. Modification of the input is allowed with RUBOUT, BACKSPACE, and CNTL-U functions. All commands can be entered in lower case as well as upper case. Multiple commands may be entered on one line if they are separated from each other by blanks or commas. A command line is terminated by a carriage return. A command line may have up to 80 characters in it, including carriage return.

EXAMPLE
```
>I(CR)
        - insert mode command
>B  I(CR)
        - backup and insert
>b  i(CR)
        - backup and insert
>L10(CR)
        - go to line number 10.
>L 10,I(CR)
        - go to line 10 and insert.
```

Several commands allow an operand n to be entered with the command. The operand may be a decimal number in the range 0-9999. It may be entered immediately following the command or separated from the command by one or more blanks or commas.

EXAMPLE
```
>L 10(CR)
>L10(CR)
        - go to line number 10.
```

Alternatively, the operand may be two decimal numbers separated by a minus sign. In this case, the line number specified by the first number is accessed, then the operation is performed from that line through and including the line specified by the second number. If the first number is greater than the second number, then an error prompt is printed and the command is not done.

EXAMPLE >V10-20(CR)

- verify lines numbered 10 through 20 on the user console.

4-13. USING THE TEXT EDITOR - FIRST STEPS

4-14. The FLP-80DOS Text Editor is executed by the following monitor command:

$EDIT filename(CR) - where filename is the name of the disk file to be edited.

The Editor responds with the following message:

FLP-80DOS EDITOR V2.1

If the user does not enter the filename with the EDIT command, then the Editor requests it:

ENTER FILE NAME TO BE EDITED>

The user then types in the name of the file to be edited. If the file does not exist, then a new one with that name is created.

EXAMPLE: $EDIT DK1:MYFILE(CR)

EXAMPLE: $EDIT NEWFIL.SRC(CR)

- defaults to device DK0:.

EXAMPLE: $EDIT(CR)

ENTER FILE NAME TO BE EDITED>NEWFILE(CR)

The only restriction on the file name is that it cannot have extension 'BIN' or extension 'TMP'. Further, files with extension 'OBJ' are reserved for object files.

If the file does not exist, then the Editor outputs the following message:

```
-->NEW FILE
0001<
```

- Editor prompts for insert records (see "INSERT COMMAND").

At the end of Editing, the new file will automatically be created. If the file does exist on disk, then editing of that file will be done. The Editor prompts for a command:

```
>
```

- Editor prompts for a command. See list of commands.

4-15. USING THE TEXT EDITOR - BASIC COMMANDS

4-16. I - INSERT

FORMAT: >I(CR)

or

>i(CR)

This command is used to insert records following the current record or to build new files.

The Editor responds with:

```
-->INSERT MODE
```

The user then enters records ending with carriage returns. After each record which is inserted, the Editor reprompts with the next line number. To terminate the insertions, the user enters a sin-

gle carriage return. Note that blank lines must be entered as 'space, carriage return' because a single carriage return terminates the insert mode. If an unprintable character is entered, than a warning message is printed on the console. After the user terminates the insert mode, the Editor prompts for a new command (>).

```
EXAMPLE  >I(CR)                              -user selects in-
                                              sert mode.
         -->INSERT MODE                      -Editor prompts user.
         0002<THIS IS AN INSERTED LINE (CR)  -user enters record
                                              to be inserted.
         0003<(CR)                           -user terminates in-
                                              sert mode.
         >                                   -Editor prompts for
                                              another command.
```

Note that modification of entered records can be done with RUB-OUT, BACKSPACE, and CNTL-U. Inserted records are automatically assigned sequential record numbers. Inserted records can be up to 160 characters long, including the carriage return.

4-17. An - ADVANCE

4-18. This command is used to advance the record pointer a specified number of records.

Format: or > An(CR)
> an(CR)

If n is zero or if n is omitted, the pointer will be positioned to the next record in the file. The record which is accessed is printed on the console after this command.

EXAMPLE > A5(CR) - advance record pointer 5 records.
0015 ANY STATEMENT - the new current record of the file is printed on the console device by the Editor.
EXAMPLE > A(CR) - advance to next record.
0016 NEXT STATEMENT - the next record in the file is printed.

4-19. Bn - BACKUP
FORMAT: or > Bn(CR)
> bn(CR)

This command is used to backup the record pointer a specified number of records.

If n is zero or if n is omitted, then the pointer is position to the previous record in the file. The record which is accessed is printed on the console after this command.
EXAMPLE > B3(CR) - backup record pointer 3 records.
0012 SOME STATEMENT - the new current record of the file is printed on the console device by the Editor.
EXAMPLE > B(CR) - backup to previous record.
0011 A STATEMENT - the previous record in the file is printed.

4-20. Dn - DELETE
FORMAT: or > Dn(CR)
> dn(CR)

This command deletes the specified number of records from the file starting with the current record.

If the the constant n is not entered or if n is equal to zero, only the current record will be deleted.

EXAMPLE > D5(CR) - the current record and the following 4 records will be deleted from the file.

EXAMPLE > D(CR) - only the current record will be deleted from the file.

4-21. Ln - GO TO RECORD NUMBER n

FORMAT: or > Ln(CR)
> ln(CR)

This command positions the pointer to the record numbered n.

The constant n must be entered and it must be greater than zero. The record which is accessed is printed on the console device.

EXAMPLE > L10(CR)
0010 LINE NUMBERED 10.

If the record number cannot be found because it is larger than the last record number in the file, then the pointer will be positioned at the last record of the file.

EXAMPLE > L2001(CR)
-->EOF
0943 LAST LINE OF FILE

4-22. Vn-VERIFY

FORMAT: or > Vn(CR)
> vn(CR)

This command prints the specified number of records on the console device. The record pointer is updated to the last record printed. If n is zero or if n is not entered, one record (the current record) is printed on the console. Unprintable characters are printed as dots (.) to identify them.

EXAMPLE > V2(CR)
0005 CURRENT STATEMENT
0006 NEXT STATEMENT
- two records are verified, i.e., printed on the console device. The current record is number 6.

4-23. TEXT EDITOR ADVANCED COMMANDS

4-24. Cn /string1/string2/- CHANGE

FORMAT: > Cn /string 1/string 2/(CR)
or > cn /string 1/string 2/(CR)

where n indicates the number of occurrences to change, string 1 represents the characters to be changed, string2 represents the substitute or new characters, and / represents a delimiter character which does not appear in either string.

This command changes the next n occurrences of character string 1 to string 2 starting with the current record. Any character which does not appear in either string 1 or string 2 may be used as a delimiter. All three delimiters must be identical. If n is zero or if n is not entered, then only one occurrence of string 1 is changed. Each record which is changed will be printed on the console device. If string 2 is not entered, then string 1 will be deleted when it is found. The record pointer will be positioned at the record of the last occurrence of the change. If n

is one or is not entered, then only the current record will be searched for string 1. If string 1 is not present, then a question mark prompt will be printed and the record pointer will remain at the same record:

```
?>
```

For n greater than 1, if string 1 is not found before the end of the file, then an end-of-file warning message is printed on the console and the pointer will be positioned at the last record in the file.

```
EXAMPLE     > V(CR)
            0010 THIS IS A RECORD.
            > C /THIS/THAT/(CR)
            0010 THAT IS A RECORD.
            > C /IS/WAS/(CR)
            0010 THAT WAS A RECORD.
            > C /WAS A /(CR)
            0010 THAT RECORD.
            > C2 /T/V/(CR)
            0010 VHAV RECORD.

EXAMPLE     > C2/XENON/ARGON/(CR)
            --> EOF
                  -The string 'XENON' cannot be found by the
                   Editor.
```

4-25. En - EXCHANGE

```
FORMAT:     > En (CR)
        or > en (CR)
```

This command exchanges the specified number of records (starting with the current record) with records to be inserted. It is exactly equivalent to the command sequence:

```
>Dn (CR)          - delete n records.
>B1 (CR)          - back up one record.
>I (CR)
-->INSERT MODE    - enter insert mode.
```

4-26. Fn - PRINT FLAG OPTION

```
FORMAT:    >F0 (CR)       - n=0, inhibit printing after all but
       or  >f0 (CR)         the 'Vn-VERIFY' command.
           >Fn (CR)       - n not=0, allow printing after all
                            change
           >fn (CR)         or access commands.
```

The Editor normally prints on the console device any record which is accessed or changed. Thus, the following commands print out a record: An, Bn, Cn, Ln, Sn, Vn. In order to reduce print out time on a slower console device (such as a teleytype), this command can be used to inhibit print out on all of the commands except Vn - VERIFY.

4-27. G dataset - GET RECORDS FROM DATASET

```
FORMAT:    >G dataset (CR)
       or  >g dataset (CR)
```

The command inputs records from a dataset (which must be a disk file) and inserts then in sequence after the current record. A carriage return must follow the dataset specification.

```
EXAMPLE   > G FILEX(CR)
            -get records from FILEX in DK0: and insert them
             after the current record in the file being
             edited.
```

4-28. Mn - MACRO

> M1(CR)
or> m1(CR)
> M2(CR)
or> m2(CR)

This command allows a command string to be entered into one of two alternate command buffers (labeled '1' and '2'). The alternate command buffers will accept character strings of 80 characters or less. The Editor responds with the following prompt:

EXAMPLE > M1 (CR)
1>S /OLD/ D1 B1 (CR)

- The user enters into alternate command buffer 1 the commands which:
  1. Search for the 1st occurrence of the string 'OLD', starting with the next record.
  2. delete that record.
  3. backup one record.

4-29. Pn dataset - PUT N RECORDS TO DATASET

FORMAT: > Pn dataset (CR)
or > pn dataset (CR)

This command outputs the specified number of records (starting with the current record) to a dataset which must be a disk file. If n is zero or n is not entered, then only the current record is output. The records which are output are not deleted. If the file being

output to exists, it will be erased before any records are written to it. This command may be used with the G(GET) command to move records around in a file. A carriage return must follow the dataset specification.

EXAMPLE

>P25 XFILE (CR)

- output the next 25 lines in the file being edited to a new file named XFILE on DK0:

>P100-125DK1:FILE1(CR)

- output lines 100 through 125 from the file being edited to file DK1:FILE1.

4-30. Sn /source image/ - SEARCH

FORMAT: > Sn /source image/ (CR)

or> sn /source image/ (CR)

where n is the number of the occurrence, source image represents any set of characters which is to be search for, and / represents a delimiter character which does not appear in the string.

This command searches the file, starting with the next record, for the nth occurrence of the character string between the delimiters. The pointer is then positioned at the record in which the string is found. This command always searches forward in the file. Any character which does not exist in the source image may be used as delimiter. Both the starting and terminating delimiters must be identical. If n is zero or n is not entered, then the first occurrence of the source image will be sought. The record in which the source image is found will be printed on the console. If the string is not encountered before the end of the file, then an end-of-file warning is printed on the console device and the pointer will be positioned at the last record in the file.

EXAMPLE > S /ORD/ (CR)
0023 SOME RECORD DATA
- Editor searches forward for the character string 'ORD', finds the 1st occurrence, and prints the record on the console.

EXAMPLE > S10 /9AH/(CR)
-->EOF
0048 LAST RECORD -Editor could not find the tenth occurrence of the string '9AH'. A warning is printed indicating end-of-file and the last record in the file is printed.

4-31. T - INSERT AT TOP

FORMAT: >T(CR)
or >t(CR)

This command inserts records at the top of the file before the first record. See the 'I - INSERT' command for proper usage.

4-32. Wn - WRITE

FORMAT: >Wn (CR)
or >wn (CR)

This command performs the same function as the VERIFY command, except that output is directed to LUN 5 which is typically assigned to a line printer device via the following monitor command before the Editor is used:

$ASSIGN 5,LP:(CR)

4-33. Xn - EXECUTE

> X1 (CR)
or > x1 (CR)
> X2 (CR)
or > x2 (CR)

This command executes the commands stored in the alternate command buffer numbered 1 or 2. After an alternate command buffer has been executed, control is returned to the Editor which prints a prompt for a new command (>). The alternate command buffer is not destroyed during the operation. If n is equal to zero or is not entered, then alternate command buffer 1 is selected.

EXAMPLE
```
> M1 (CR)
> S /OLD/ D1 B1 (CR)
> X1 (CR)
0010 FIRST OCCURRENCE OF OLD.
     - 'OLD' is located and the record is deleted.
0009 LINE NUMBER 9.
     - Backup command prints its record.
```

NOTE The pseudo-macro command capability is executed by the 'M' and 'X' commands. The user puts his macro command string into alternate buffer 1 or 2 and executes that macro string via the 'X' command.

4-34. EDITING LARGE FILES

4-35. Editing of larges file is no different than editing small files. All commands are fully functional. However, diskette access may be required for certain operations and a delay may be apparent before the Editor responds.

4-36. EDITOR MESSAGES

4-37. If the user enters on unrecognizable file name, a syntax error will be indicated and the Editor will reprompt for another file name.

EXAMPLE ENTER FILE NAME TO BE EDITED>LAST=1(CR)

```
*****SYNTAX ERROR
ENTER FILE NAME TO EDITED>
```

4-38. If the user enters an unrecognizable command, then the Editor will print a question mark and another prompt.

EXAMPLE
```
> R20 (CR)
?>
```

If the user enters the same name for a put file as the name of the file being edited during a PUT command, the Editor will print: -->USE DIFFERENT FILE NAME FOR PUT and it will reprompt for a new command: ?>

4-39. All I/O errors to and from disk result in termination of the Editor with an appropriate error message. The original file should be backed up on another diskette before using the Editor.

4-40. The Editor prompts the user with several messages to the console device.

--> NEW FILE
- indicates that a new file is being created rather than editing of an old file.

--> INSERT MODE
- indicates that records of data are to be entered rather than Editor commands.

--> TOF
- indicates that the top of file (beginning of file) has been encountered.

--> END OF EDITING
- indicates that the Editor has successfully completed. Control is then returned to the FLP-80DOS Monitor.

--> PLEASE WAIT.
- indicates that a long disk access is taking place.

--> END OF WINDOW. USE 'ADVANCE' TO SEE NEXT RECORD.
- occurs only with VERIFY command. Follow the directions.

-->IS THE OUTPUT DEVICE READY ? (Y/N)

- occurs after the issue of a W command to alert the user that the I/O device assigned to LUN 5 must be configured to his system.

-->THERE MAY NOT BE ENOUGH SPACE IN DISK TO EDIT YOUR FILE.
DO YOU WISH TO CONTINUE? (Y/N)

- occurs only if at the start of the editing session the free space on the diskette unit of the input file is not at least equal to 125% of the size of the input file. It serves as a warning against the possible loss of that file because of a disk-full error. (Error 0B).

4-41. SAMPLE EDITING SESSION

4-42. The user is urged to follow the steps given here to become acquainted with the FLP-80DOS Editor.

$EDIT NEWONE(CR)

-user selects to use FLP-80DOS Editor.

(There will be a slight delay while the Editor is read into RAM from disk.)

FLP-80DOS EDITOR V2.1

- user selects to create a new file on DK0: (disk unit zero), with file name 'NEWONE' and no extension.

--> NEW FILE

--> INSERT MODE

0001 < TITLE ECHO PROGRAM (CR)

- Editor prompts for records to be input via the console. User begins keying in a program.

0002< ; THIS PROGRAM READS A CHARACTER (CR)
0003< ; FROM THE CONSOLE AND ECHOS IT.(CR)
0004< ; CNTL-U RETURNS CONTROL TO THE MONITOR.(CR)
0005< ; (CR)

```
0006<   INCLUDE SYSLNK (CR)
0007<   LD E,0 ; CONSOLE LUN (CR)
0008<LOP CALL RDCHR ; READ A CHARACTER (CR)
0009<   CP 15H ; CHECK FOR CNTL-U (CR)
0010<   JP Z,7A00H ; IF SO, RETURN TO MONITOR(CR)
0011<   CALL WRCHR ; ELSE ECHO IT (CR)
0012<   JR LOOP-$ ; AND LOOP FOR MORE (CR)
0013<   END (CR)
0014<(CR)
```

- user terminates insert mode operation

```
>B99V20(CR)
```

- user goes to beginning of file and verifies 20 records in the file.

.
.
.

```
-->EOF
```

- Editor shows that end of file has been encountered.

```
>L8 (CR)
0008    LOP CALL RDCHR ; READ A CHARACTER
```

- user verifies line 8 and observes an error.

```
>C /LOP/LOOP/(CR)
0008   LOOP CALL RDCHR ; READ A CHARACTER
```

- user modifies line.

```
>S  /7A00/(CR)
0010    JP Z,7A00H ; IF SO, RETURN TO MONITOR
```

- user searches for the string 7A00.

```
>C /7A00H/REBOOT/(CR)
0010    JP,Z REBOOT ; IF SO, RETURN TO MONITOR
```

- user changes the record.

```
>Q (CR)
```

- user terminates editing session. The new file will now be on disk unit 0 (DK0) with file name NEWONE.

TABLE 4-1. SUMMARY OF FLP-80 EDITOR COMMANDS

CONSOLE INTERACTION

BACKSPACE - Delete the previous character.

CNTL-U - Delete the current line.

COMMAND PROMPT >

INSERT PROMPT <

MESSAGE IDENTIFIER -->

COMMAND	DESCRIPTION
An	Advance n records.
Bn	Backup n records.
Cn /string1/string2/	Change n occurrences of string 1 to string 2
Dn	Delete n records, starting with current record.
En	Exchange n records with inserted records.
Fn	Flag print option: 0 = no print, not 0 = print.
G dataset	Get records from dataset and insert them after current record.
I	Insert records after current record.
Ln	Line: Access record number n.
Mn	Macro: Place command string into alternate command buffer 1 or 2.
Pn dataset	Put n records out to dataset.
Q	Quit: Save the file on disk and terminate the editor.
Sn /string/	Search for nth occurrence of the string.
T	Top: Insert at top of file before the first record.
Vn	Verify n records on the console device.
Wn	Write n records with record numbers to LUN 5
Xn	Execute alternate command buffer n (1 or 2).

In all commands, except Fn and Ln, if n is zero or if n is not entered, it is assumed to equal one (1). The operand n may be entered as n_1 - n_2 which performs the operation on lines n_1 through n_2.

SECTION 5

FLP-80DOS ASSEMBLER (ASM)

5-1. INTRODUCTION

5-2. The Mostek FLP-80DOS Assembler is provided on flexible diskette. In conjunction with the resident Text Editor and the Linker it provides the means for editing, assembling, and linking Z80 programs. The Assembler reads Z80 source mnemonics and pseudo-ops and outputs an assembly listing and object code. The object code is in industry standard hexadecimal format modified for relocatable, linkable assemblies.

5-3. The Assembler recognizes all standard Z80 source mnemonics. It supports conditional assemblies, global symbols, relocatable programs, and a printed symbol and cross reference table. The Assembler can assemble any length program, limited only by the symbol table size (which is based on available RAM) and available disk space. In a 16K RAM system, the Assembler supports a symbol table size of about 150 symbols. In a 32K RAM system, the size is over 700 symbols.

5-4. Figure 5-2 shows the Assembler with typical device usage. The source module is read from a disk file, the object output is directed to a disk file, and the assembly listing is directed to a line printer. User interaction is via the console device. Note that the Assembler can interact with any dataset.

5-5. DEFINITIONS

1. SOURCE MODULE - the user's source program. Each source module is assembled into one object module by the Assembler. The end of a source module is defined by an EOT

character (04_H) on input or an 'END' pseudo-op.

2. OBJECT MODULE - the object output of the Assembler for one source module. The object module contains linking information, address and relocating information, machine code, and checksum information for use by the MOSTEK Linker. The object module is in ASCII. A complete definition of the MOSTEK object format is in Appendix B. The object module is typically output to a disk file with extension 'OBJ'.
3. LOAD MODULE - the binary machine code of one complete program. The load module is defined in RAM as an executable program or on disk as a binary file (extension 'BIN'). It is created by the MOSTEK Linker from one or more object modules (extension 'OBJ').
4. LOCAL SYMBOL - a symbol in a source module which appears in the label field of a source statement.
5. INTERNAL SYMBOL - a symbol in a source (and object) module which is to be made known to all other modules which are loaded with it by the Linker. An internal symbol is also called global, defined, public, or common. Internal symbols are defined by the GLOBAL pseudo-op. An internal symbol must appear in the label field of the same source module. Internal symbols are assumed to be addresses, not constants, and they will be relocated by the Linker.
6. EXTERNAL SYMBOL - a symbol which is used in a source module but which does not appear in the label field of a statement. External symbols are defined by the GLOBAL pseudo-op. External symbols may not appear in an expression which uses operators. An external symbol is a reference to a symbol that exists and is defined as internal in another program module.
7. GLOBAL DEFINITION - both internal and external symbols are defined as "GLOBAL" in a source module. The Assembler determines which are internal and which are external.
8. POSITION INDEPENDENT - a program which can be placed anywhere in memory. It does not require relocating informa-

tion in the object module.

9. ABSOLUTE - a program which has no relocation information in the object module. An absolute program which is not position independent can be loaded only in one place in memory in order to work properly.
10. RELOCATABLE - a program which has extra information in the object module which allows the Linker to place the program anywhere in memory.
11. LINKABLE - a program which has extra information in the object module which defines internal and external symbols. The Linker uses the information to connect, resolve or link, external references to internal symbols.

5-9. ASSEMBLY LANGUAGE SYNTAX

5-10. An assembly language program (source module) consists of labels, opcodes, pseudo-ops, operands, and comments in a sequence which defines the user's program. The assembly language conventions are described below.

5-11. DELIMITERS. Labels, opcodes, operands, and pseudo-ops must be separated from each other by one of more commas, spaces, or tab characters (ASCII 09_H). The label may be separated from the opcode by a colon, only, if desired.

5-12. LABELS. A label is composed of one or more characters. If more than 6 characters are used for the label, only the first 6 are recognized by the Assembler. The characters in the label cannot include ' ( ) * + , - 1 = . / : / < > or space. In addition, the first character cannot be a number (0-9). Table 5-1 summarizes the allowed characters in a label or symbol. A label can start in any column if immediately followed by a colon (:). It does not require a colon if started in column one.

FIGURE 5-1. ASSEMBLER MEMORY MAP

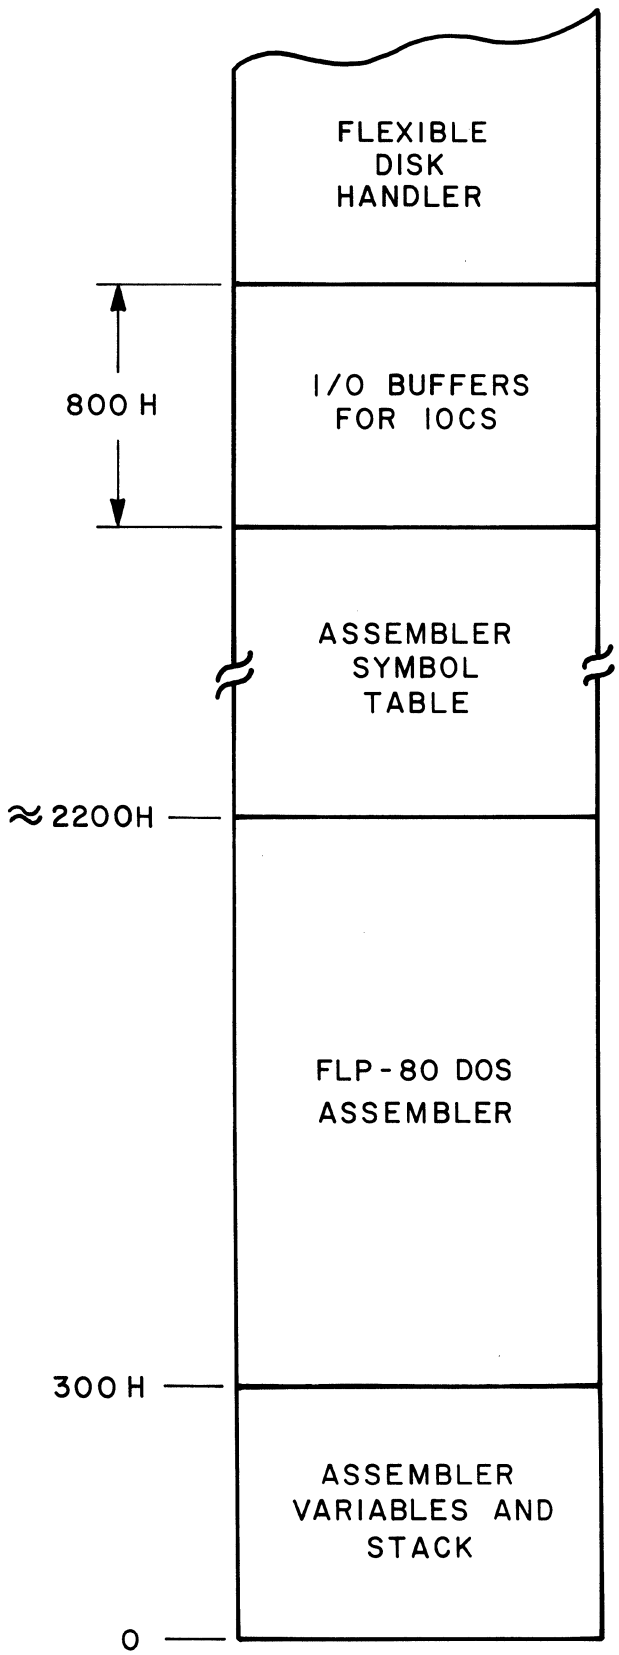

FIGURE 5-2. LOGICAL UNIT NUMBER STRUCTURE

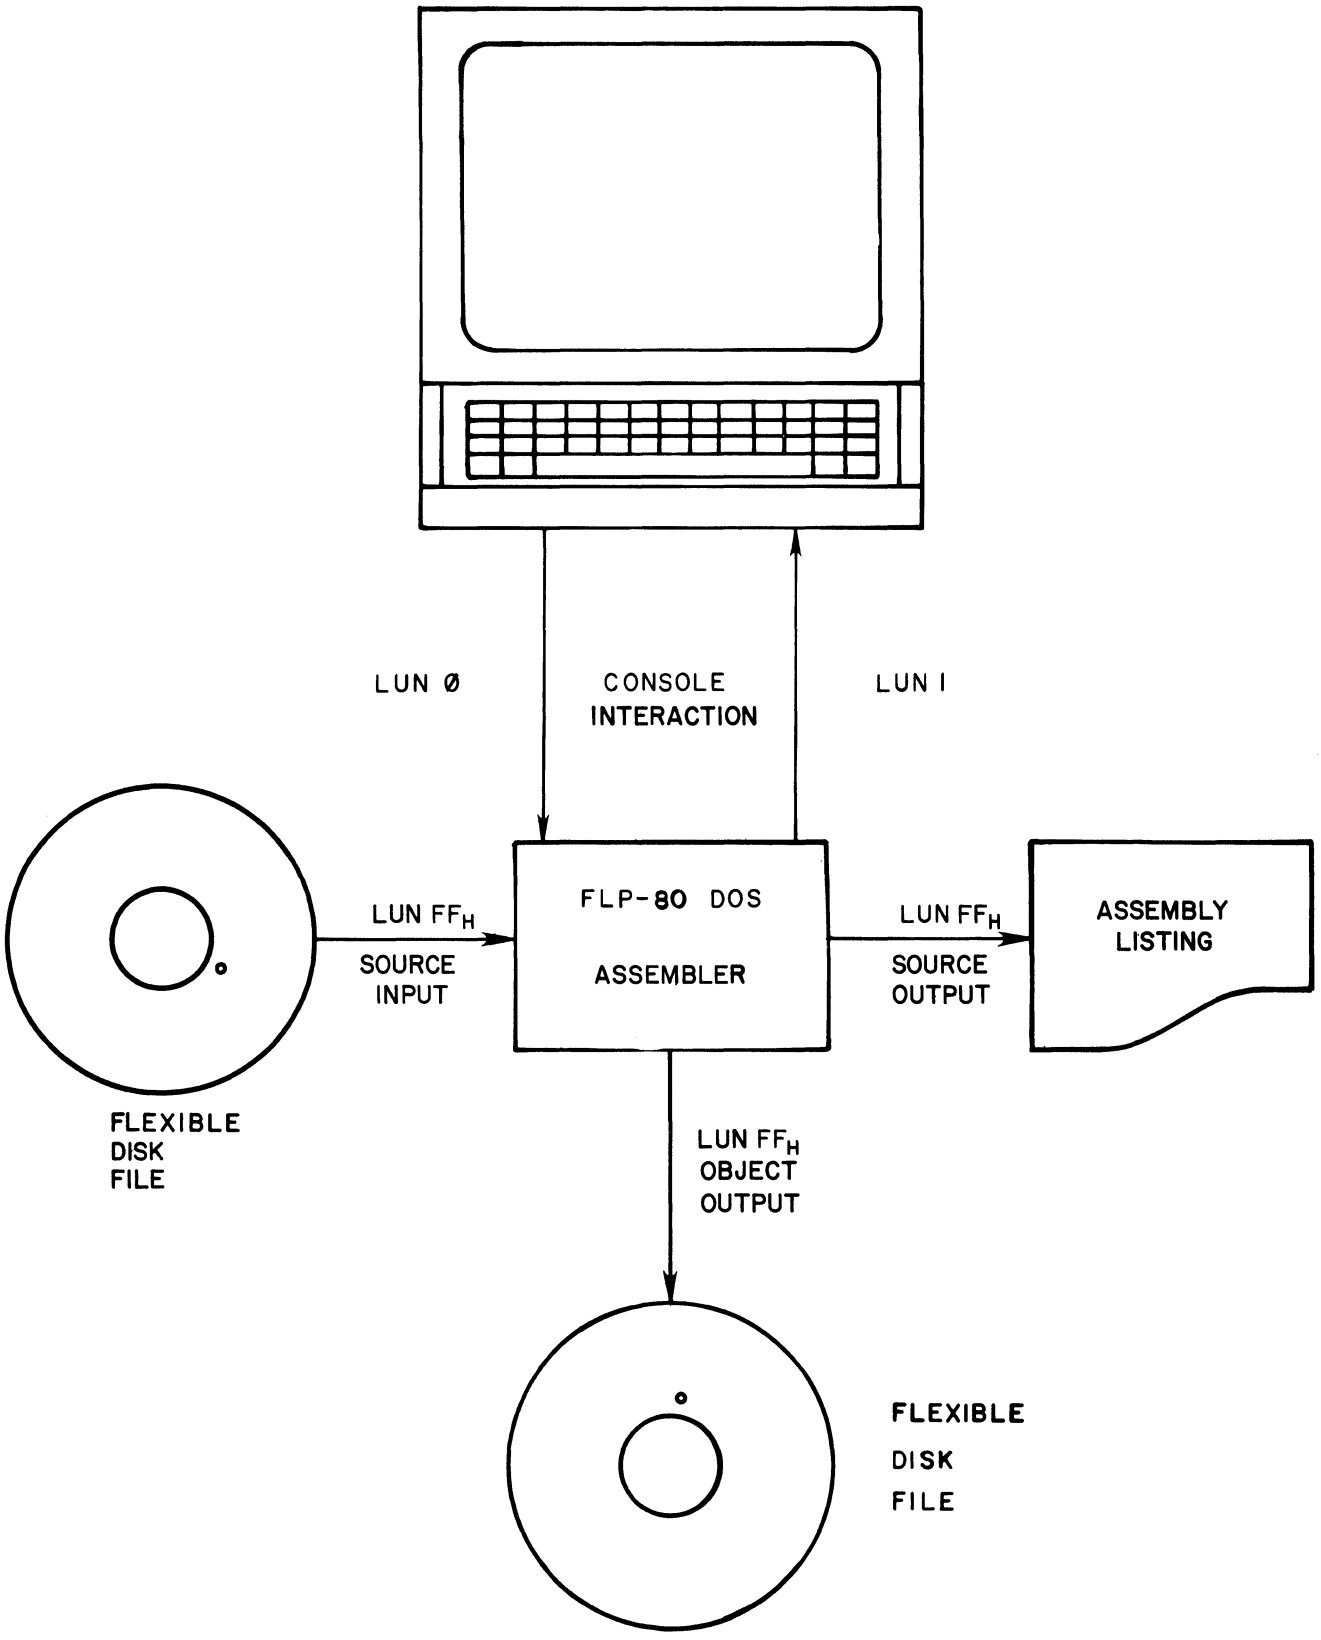

EXAMPLE allowed

```
LAB
L923
$25
ACCOUNT_PAYABLE

A25E:
```

not allowed

```
9LAB    ;STARTS WITH A NUMBER
L)AB    ;ILLEGAL CHARACTER IN LABEL
L:ABC   ;ILLEGAL CHARACTER IN LABEL
```

5-13. OPCODES. There are 74 generic opcodes (such as 'LD'), 25 operand key words (such as 'A'), and 693 legitimate combinations of opcodes and operands in the Z80 instruction set. The full set of these opcodes is documented in the "Z80 CPU TECHNICAL MANUAL" and listed in Appendix A of this manual. The FLP-80DOS Assembler allows one other opcode which is not explicitly shown in the Z80 CPU Technical Manual:

```
IN F,(C)    ;SET THE CONDITION BITS ACCORDING
            ;TO THE CONTENTS OF THE PORT DEFINED BY THE
             C-REGISTER
```

5-14. PSEUDO-OPS. Pseudo-ops are used to define assembly time parameters. Pseudo-ops appear like Z80 op-codes in the source module. Several pseudo-ops require a label. The following pseudo-ops are recognized by the Assembler:

1. ORG nn -orgin - sets the program counter to the value of the expression nn. Each origin statement in a program must be greater than the first origin of the program to assure proper program link-

ing. (See Section 6).

2. label EQU nn -equate - sets the value of a label to nn in the program, where nn is an expression; can occur only once for any label.

3. label DEFL nn -define label - sets the value of a label to nn in the program, where nn is an expression. This may be repeated in the program with different values for the same label. At any point in the program, the label assumes the last previously defined value.

4. DEFM 'aa' -define message - defines the contents of successive bytes of memory to be the ASCII equivalent code of characters within quotes. Maximum length of the message is 63 characters. The delimiting quote characters are required. A quote character may be placed in a message by a sequence of two quotes ('').

5. DEFB n,n,n... -define byte - defines the contents of bytes located at the current program counter address to be n, where n is any expression.

6. DEFW nn,nn,nn,...-define word - defines the contents of two-byte words to be the value of any expression nn. The least significant byte is located at the current program counter address. The most significant byte is located at the program counter address plus one.

7. DEFS nn -define storage - reserves nn bytes of memory starting at the current program counter, where nn is an expression. When loaded, these bytes are not overwritten, i.e., they will contain what was previously in memory. This pseudo-op cannot be used at the end of a program to reserve storage.

8. END nn -end statement - defines the last line of the program. The 'END' statement is not required. The expression nn is optional and represents the transfer address (starting execution address) of the program. The transfer address defaults to the first address of the program. Note that for binary files the transfer address must be the same as the starting address of the program.

9. GLOBAL symbol -define global symbol - any symbol which is to be made known among several separately assembled modules must appear in this type of statement. The Assembler determines if the symbol is internal (defined as a label in the program), or external (used in the program but not defined as a label).

10. NAME symbol -module name -This pseudo-op defines the name of the program (source and object). The name is placed in the heading of the assembly listing and is placed in the first record of the object module to identify it. This pseudo-op is designed primarily to

TABLE 5-1. ALLOWED CHARACTERS

LSD \ MSD		0 000	1 001	2 010	3 011	4 100	5 101	6 110	7 111
0	0000	NUL	DLE	SPACE	0	@	P	`	p
1	0001	SOH	DC1	!	1	A	Q	a	q
2	0010	STX	DC2	"	2	B	R	b	r
3	0011	ETX	DC3	#	3	C	S	c	s
4	0100	EOT	DC4	$	4	D	T	d	t
5	0101	ENO	NAK	%	5	E	U	e	u
6	0110	ACK	SYN	&	6	F	V	f	v
7	0111	BEL	ETB	'	7	G	W	g	w
8	1000	BS	CAN	(	8	H	X	h	x
9	1001	HT	EM	)	9	I	Y	i	y
A	1010	LF	SUB	*	:	J	Z	j	z
B	1011	VT	ESC	+	;	K	[	k	{
C	1100	FF	FS	,	<	L	\	l	|
D	1101	CR	GS	-	=	M	]	m	}
E	1110	SO	RS	.	>	N	^	n	~
F	1111	SI	US	/	?	O	_	o	DEL

NOT ALLOWED

ADDITIONAL CHARACTERS NOT ALLOWED AS FIRST CHARACTER

facilitate future compiler design. The name of the module defaults to 6 blanks.

11. PSECT op -program section - This pseudo-op may appear only once at the start of a source module. It defines the program module attributes for the following operands:
    REL - relocatable program (defaults).
    ABS - absolute program. No relocating information is generated in the object module by the Assembler. The module will be loaded where it is origined.
12. IF nn -conditional assembly - If the expression nn is true (non-zero), the IF pseudo-op is ignored. If the expression is false (zero), the assembly of subsequent statements is disabled. 'IF' pseudo-ops cannot be nested.
13. ENDIF -end of conditional assembly - re-enables assembly of subsequent statements.
14. COND nn -same function as IF pseudo-op.
15. ENDC -same function as ENDIF pseudo-op.
16. INCLUDE dataset-include source from another dataset - allows source statements from another dataset to be included within the body of the given program. The file is searched for first on DK0:, then on DK1:. If the dataset cannot be opened properly, then assembly is aborted.

The source module must not end with an 'END' pseudo-op (otherwise, assembly would be terminated). The source module must end with an EOT character (04), which is true for all FLP-80DOS ASCII datasets. The INCLUDE pseudo-op cannot be nested, but it can be chained. The means that an included dataset can have an INCLUDE pseudo-op at the end of it. At the end of the last included dataset, assembly continues in the original module.
Note: The INCLUDE pseudo-op cannot be followed by a comment on the same line.

LIST - turn listing on.
NLIST - turn listing off.
EJECT - eject a page of listing.
TITLE S - print title 'S' at top of each page of listing. 'S' may be up to 32 characters long.

5-15. OPERAND. There may be zero, one, or more operands in a statement depending on the opcode or pseudo-op used. Operands in the Assembler may take the following forms:

5-16. GENERIC OPERAND. Such as the letter 'A', which stands for the Accumulator. Table 5-2 summarizes these operands and their meanings.

5-17. Constant. The constant must be in the range 0 through OFFFFH. It can be in the following forms:

1. Decimal -this is the default mode of the Assembler. Any number may be denoted as decimal by following it with the letter 'D'. E.g., 35, 249D.

2. Hexadecimal -must begin with a number (0-9) and end with the letter 'H'. E.g., 0AF1H.
3. Octal -must end with the letter 'Q' or 'O'. E.g., 377Q, 277O.
4. Binary -must end with the letter 'B'. E.g., 0110111B.
5. ASCII -letters enclosed in quote marks will be converted to their ASCII equivalent value. E.g., 'A' = 41_H.

5-18. A LABEL which appears elsewhere in the program. Note that labels cannot be defined by labels which have not yet appeared in the user program (this is an inherent limitation of a two-pass assembler).

not allowed

```
L EQU H
H EQU I

I EQU 7
```

allowed

```
I EQU 7
H EQU I
L EQU H
```

TABLE 5-2. GENERIC OPERANDS

A	_____	A register (accumulator)
B	_____	B register
C	_____	C register
D	_____	D register
E	_____	E register
F	_____	F register
H	_____	H register
L	_____	L register
AF	_____	AF register pair
AF'	_____	AF'register pair
BC	_____	BC register pair
DE	_____	DE register pair
HL	_____	HL register pair
SP	_____	SP Stack Pointer register
$	_____	Program Counter
I	_____	I register (interrupt vector MS byte)
R	_____	Refresh register
IX	_____	IX index register
IY	_____	IY index register
NZ	_____	Not zero
Z	_____	Zero
NC	_____	Not Carry
C	_____	Carry
PO	_____	Parity odd/not overflow
PE	_____	Parity even/overflow
P	_____	Sign positive
M	_____	Sign negative

5-19. AN EXPRESSION-the MOSTEK FLP-80DOS Assembler accepts a wide range of expressions in the operand field of a statement. All expressions are evaluated left to right constrained by the hierarchies shown in Table 5-3. Parentheses may be used to ensure correct expression evaluation. Table 5-3 shows the allowed operators and their hierarchies. The symbol '$' is used to represent the value of the program counter of the current instruction. Note that enclosing an expression wholly in parentheses indicates a memory address. The contents of the memory address equivalent to the expression value will be used as the operand value. Integer two's complement arithmetic is used throughout. The negative (2's complement) of an expression or quantity may be formed by preceding it with a minus sign. The one's complement of an expression may be formed by preceding it with the '.NOT.' operator.

In doing relative addressing, the current value of the program counter must be subtracted from the label if a branch is to be made to that label address.

EXAMPLE:

JR LOOP-$

...will jump relative to 'LOOP'.

The allowed range of an expression depends on the context of its use. An error message will be generated if this range is exceeded during its evaluation. In general, the limits on the range of an expresson are 0 through $0FFFF_H$. The limits on the range of a relative jump ('JR' or 'DJNZ') are -126 bytes and +129 bytes. The Assembler monitors the number of items in an expression. If an expression is too long, an error message will be output. This limit will probably never be reached by a typical program. For relocatable programs, the Assembler will output relocation information in the object module for those addresses which are to be relocated by the Linker. Expressions are determined to be relocatable addresses or non-relocatable constants

according to the following rules:

(constant)	(operation)	(constant)	=	(constant)
(constant)	(operation)	(relocatable)	=	(relocatable)
(relocatable)	(operation)	(constant)	=	(relocatable)
(relocatable)	(operation)	(relocatable)	=	(constant)

```
EXAMPLE   I EQU 1         ;CONSTANT DEFINITION
            DEFW  I       ;CONSTANT WHICH WILL NOT BE RELOCATED
            LAB EQU $     ;RELOCATABLE DEFINITION
            .
            .
            .
            JP  LAB       ;RELOCATABLE OPERAND
            JR  LAB-$     ;CONSTANT OPERAND
            JR  +5+(I)    ;CONSTANT OPERAND
```

For a further discussion of relocatable values, see paragraph 5-27.

5-20. COMMENTS. A comment is defined as any characters following a semicolon in a line. A semicolon which appears in quotes in an operand is treated as an expression rather than a comment starter. Comments are ignored by the Assembler, but they are printed in the assembly listing. Comments can begin in any column. Note also that the Assembler ignores any statements which have an asterisk (*) in column one.

TABLE 5-3. ALLOWED OPERATORS AND HIERARCHIES IN FLP-80DOS ASSEMBLER

.RES.		0
-reset overflow. Anytime the .RES. operator is found, the overflow indicator will be unconditionally reset after the expression is evaluated. This can be used to prevent overflow errors in certain arithmetic expressions.		
Unary plus	(+)	1
Unary minus	(-) (2's complement)	1
Logical NOT	(.NOT.) (1's complement)	1
Multiplication	(*)	2
Division	(/)	2
Addition	(+)	3
Subtraction	(-)	3
Logical AND	(.AND.)	4
Logical OR	(.OR.)	4
Logical XOR	(.XOR.)	4
Logical shift right	(.SHR.)	4
Logical shift left	(.SHL.)	4
Shift right 8	(.)	4

The shift operators (.SHR. and SHL.) shift their first argument right or left by the number of bit positions given in their second argument. Zeros are shifted into the high-order or low-order bits respectively. The dot operator (.) may be placed at the end of an expression. Its effect is to shift a 16 bit value right by 8 bits so the most significant byte can be accessed. Zeros are shifted into the higher order bits.

5-21. OBJECT OUTPUT

5-22. The object module of the Assembler can be loaded by an Intel hexadecimal loader for non-linkable programs. Extra information is inserted into the object module for linkable and relocatable programs for using the MOSTEK Linker. For a complete discussion of the object format, see Appendix B.

5-23. ASSEMBLY LISTING OUTPUT

5-24. The user must insert tabs in the source to obtain columns in the assembly listing. The value of each equated symbol will be printed with a pointer (>) next to it. Any address which is relocatable will be identified with a quote (') character. The statement number and page number are printed in decimal. Listing control pseudo-ops do not appear in the listing but they are assigned statement numbers. If the listing option is not selected, errors will be output to the console device.

5-25. ABSOLUTE MODULE RULES

5-26. The pseudo-op 'PSECT ABS' defines a module to be absolute. The program will be loaded in the exact addresses at which it is assembled. This is useful for constants, a common block of global symbols, or a software driver whose position must be known. This method can also be used to define a list of global constants.

```
EXAMPLE         PSECT    ABS          ;ABSOLUTE ASSEMBLY
                GLOBAL   AA
             AA EQU      0
                GLOBAL   AB
```

```
AB   EQU      0E3H
     GLOBAL   AC
AC   EQU      25H
     GLOBAL   AD
AD   EQU      0AF3H
     END
```

All symbols in the above module will assume constant values which may be used by any other program.

5-27. RELOCATABLE MODULE RULES

5-28. The following rules apply to relocatable programs.

1. Programs default to relocatable if the 'PSECT ABS' pseudo-op is not used or if 'PSECT REL' is specified.
2. Only those values which are 16-bit address values will be relocated. 16-bit constants will not be relocated (internal symbols are exceptions).

```
EXAMPLE   AA   EQU      0A13H      ;ABSOLUTE VALUE
               LD       A,(AA)     ;AA NOT RELOCATED
          AR   EQU      $          ;RELOCATABLE VALUE
               LD       A,(AR)     ;AR WILL BE RELOCATED UPON
                                    LOADING
```

5-29. Relocatable quantities may not be used as 8-bit operands. This restriction exists because only 16-bit operands are relocated by the Linker.

```
EXAMPLE   LAB  EQU      $          ;RELOCATABLE DEFINITION
               DEFB     LAB        ;NOT ALLOWED
               LD       A,LAB      ;NOT ALLOWED
               LD       A,(LAB)    ;ALLOWED
               LD       HL,LAB     ;ALLOWED
```

5-30. Labels equated to labels which are constants will be treated as constants. Labels equated to labels which are relocatable values will relocated. Internal symbols are exceptions.

```
EXAMPLE  B8  EQU   20H       ;ABSOLUTE VALUE
         C8  EQU   B8        ;ABSOLUTE VALUE
             LD    A,(C8)    ;C8 WILL NOT BE RELOCATED
         AR  EQU   $         ;RELOCATABLE VALUE
         BR  EQU   AR        ;RELOCATABLE VALUE
             LD    A,(BR)    ;BR WILL BE RELOCATED
```

5-31. Internal symbols will always be marked relocatable. This point is important because an internal symbol will be relocated even though it looks like a constant. This point is discussed further, below.

5-32. External symbols will always be marked relocatable, except for the first usage in the program.

5-33. GLOBAL SYMBOL HANDLING

5-34. A global symbol is a symbol which is known by more than one module. A global symbol has its value defined in one module. It can be used by that module and any other module. A global symbol is defined as such by the GLOBAL pseudo-op. For example:

```
GLOBAL SYM1
    - SYM1 is a symbol which is defined as "global".
```

An internal symbol is one which is defined as global and also appears in the label field of a statement in the same program.

```
EXAMPLE  GLOBAL SYM1
         CALL   SYM1
         .
         .
         .
         END
                        -SYM1 is an external symbol
EXAMPLE
                GLOBAL  SYM1
         SYM1   EQU     $
                LD      A,(SYM1)
                .
                .
                .
                END
                        -SYM1 is an internal symbol.  Its value is
                         the address of the LD instruction.
```

If these two programs were linked by the MOSTEK Linker, all global symbol references would be "resolved". This means that each address in which an external symbol was used would be modified to the value of the corresponding internal symbol. The loaded programs would be equivalent (using our example) to one program written as follows.

```
EXAMPLE          CALL   SYM1
                 .
                 .
                 .
         SYM1    EQU    $
```

```
        LD      A,(SYM1)
        .
        .
        .
        END
```

5-35. Global symbols are used to allow large programs to be broken up into smaller modules. The smaller modules are used to ease programming, facilitate changes or allow programming by different members of the same team. The Assembler has several rules which apply to global symbols. The examples in the following paragraphs should be studied carefully.

5-36. GLOBAL SYMBOL BASIC RULES. Both passes of the Assembler must be done in their entirety if global symbols are used. This restriction exists because symbols are defined as global during pass 1, and an external reference link list is built up during pass 2.

1. Global symbols follow the same syntax rules as labels. They may not start with a number (0-9) or a restricted character. They may not contain restricted characters.

EXAMPLE <u>allowed</u>

```
        GLOBAL SYM1
        GLOBAL A&&
        GLOBAL $BB
```

<u>not allowed</u>

```
        GLOBAL 1AB      ;STARTS WITH A NUMBER
        GLOBAL A=B      ;CONTAINS A RESTRICTED CHARACTER
```

2. An external symbol may not appear in an expression.

EXAMPLE

```
        GLOBAL  SYM1            ;EXTERNAL SYMBOL
        CALL    SYM1            ;OK
```

```
            LD      HL, (SYM1)    ;OK
            LD      HL,SYM1+25H   ;NOT ALLOWED
            JP      SYM1+2        ;NOT ALLOWED
```

3. An external symbol is always considered to be a 16-bit address. Therefore, an external symbol may not appear in an instruction requiring an 8-bit operand. It may not be used for a displacement or an 8-bit constant.

```
EXAMPLE     GLOBAL  SYM1          ;EXTERNAL SYMBOL
            CALL    SYM1          ;OK
            LD      A,(SYM1)      ;OK
            LD      A,SYM1        ;NOT ALLOWED
            LD      (IX+SYM1),A   ;NOT ALLOWED
            BIT     SYM1,A        ;NOT ALLOWED
```

4. In relocatable assembly, a global symbol is always considered to be a relocatable 16-bit address. This applies to both internal and external symbols. It does not apply to absolute assemblies (PSECT ABS).
5. By definition, an external symbol cannot also be an internal symbol.
6. For a set of modules to be linked, no duplication of internal symbol names is allowed. That is, an internal symbol can be defined only once in a set of modules to be linked together.

5-37. GLOBAL SYMBOL ADVANCED RULES.

1. An external symbol cannot appear in the operand field of a 'EQU' or 'DEFL' pseudo-op. Thus, an external symbol must be explicitly defined as global.

```
EXAMPLE     GLOBAL  SYM1          ;EXTERNAL SYMBOL
      SYM2  EQU     SYM1          ;NOT ALLOWED
      SYM3  DEFL    SYM1          ;NOT ALLOWED
```

2. All references to an external symbol are marked relocatable, except the first reference in a program. The object code for these references is actually a backward link list, terminating in the constant $OFFFF_H$. (See definition of object format in Appendix B) (This rule does not apply to absolute assemblies).
3. An internal symbol is always marked relocatable, except for absolute assemblies. This point is important, because an internal symbol will be relocated even though it looks like a constant.

```
EXAMPLE    PSECT  REL       ;RELOCATABLE MODULE
           GLOBAL YY        ;INTERNAL SYMBOL
        YY EQU    0AF3H     ;YY WILL ALWAYS BE MARKED RELOCATABLE
           LD     A,(YY)    ;YY WILL BE RELOCATED WHEN LOADED.
     ;THE ABOVE INSTRUCTION LOADS THE CONTENTS OF THE ADDRESS YY,
     ;RELOCATED, INTO THE A-REGISTER.
EXAMPLE    PSECT  ABS       ;ABSOLUTE ASSEMBLY
           GLOBAL YY        ;INTERNAL SYMBOL
        YY EQU    0AF3H     ;YY IS AN ABSOLUTE VALUE
           LD     A,(YY)    ;THIS LOADS THE CONTENTS OF ADDRESS
                            ;0AF3H INTO THE A-REGISTER
```

4. All other rules that apply to local symbols also apply to internal symbols.

5-38. USE OF THE "NAME" PSEUDO-OP.

5-39. The NAME pseudo-op can be used to identify both a source module and an object module. The name of the module being assembled can be assigned by the NAME pseudo-op. The name is placed in the heading of the assembly listing. The name is also placed in the first record of he object module. The first record is the module definition record (record type 05), and it is described in Appendix B. The name of a module follows the same rules as a local symbol.

5-40. USING THE ASSEMBLER

5-41. The FLP-80DOS Assembler is resident on the FLP-80DOS system flexible diskette. The user first prepares his source modules using the FLP-80DOS Editor. Then the source file may be assembled. The command to invoke the Assembler is:

$ASM dataset 1 [TO datasetL [,dataset0]](CR)

where

dataset 1 = source input dataset.

dataset L = assembly listing output dataset (optional).

dataset 0 = object output dataset (optional).

The Assembler can interact with any dataset. Dataset1 must be a disk file. DatasetL and a dataset0 are optional in the command. DatasetL defaults to the same unit and filename as dataset1 with an extension of 'LST'; dataset0 defaults to the same unit and filename as dataset1 with an extension of 'OBJ'. DatasetL and dataset0 can be specified in the command. If dataset0 is a disk file, it must have an extension of 'OBJ' or a blank extension which defaults to 'OBJ'. Dataset1 and datasetL may not have the following extensions: OBJ, BIN, or CRS. The Assembler then outputs the following message to the console output device:

MOSTEK FLP-80DOS ASSEMBLER V2.1. OPTIONS?

Options are described in paragraph 5-67. If no options are to be entered, the use enters "carriage return". The Assembler then reads the source module for pass 1. During pass 1, the symbol table and external references are defined. The name of the module is defined, and the external symbol link list is built. At the end of reading, the source dataset is rewound, and the following message is printed on the console device:

PASS 1 DONE

The Assembler proceeds into pass 2 automatically. During pass 2,

the assembly listing and object module are output. At the end of pass 2, the following message is output on the console output device:

```
ERRORS = nnnn
```

where nnnn is the total number of errors (in decimal) which were found by the Assembler. Control is then returned to the FLP-80DOS Monitor.

5-42. ASSEMBLER OPTIONS

5-43. The Assembler allows the user to select the following options from the console. When the Assembler outputs the message:

```
MOSTEK FLP-80DOS ASSEMBLER V2.1. OPTIONS?
```

The user may enter any of the following codes. A carriage return terminates the options. Normal editing of a line is allowed.

C-Cross Reference Listing. This option prints a symbol cross reference table at the end of the assembly listing.

K-No listing. This suppresses the assembly listing output. All errors will be output to the console device.

L-Listing (default). The assembly listing is normally output.

N-No object output. This suppresses object output from the Assembler.

O-Object output (default). The object output is normally output.

P-Pass 2 only. This selects and runs only pass 2 of the Assembler.

Q-Quit. This returns control to the FLP-80DOS Monitor.

R-Reset the symbol table. This option clears the symbol table of all previous symbol references. This operation is automatically done for pass 1. It is used primarily for single pass operations (described in paragraph 5-78).

S-Symbol table. The symbol table is normally not output by the Assembler. This option prints a symbol table at the end of the assembly listing.

EXAMPLE

OPTIONS? NS(CR)

- the user has selected no object output and a printed symbol table.

5-44. ERROR MESSAGES

5-45. Any error which is found is denoted in the assembly listing. A message is printed immediately after the statement which is in error. Appendix E defines all Assembler error codes and messages.

EXAMPLE

```
H2:  LC A,B
*****ERROR 41 INVALID OPCODE
```

Several errors abort the Assembler when they are encountered. These are noted in Appendix E. Abort error messages are output only to the console output device. Control is immediately returned to the FLP-80DOS Monitor. Abort errors may occur during pass 1 or pass 2.

5-46. ADVANCED OPERATIONS

5-47. PASS 2 ONLY OPERATION (SINGLE PASS OPERATION). The FLP-80DOS Assembler can be used as a single pass assembler under the following restrictions:

1. No GLOBAL symbols are defined.
2. No forward symbol references occur.
3. The NAME pseudo-op is not in the source.

The Assembler will correctly assemble Z80 programs under the

above restrictions during pass 2. This is useful for assembling data tables and certain types of programs. The Assembler symbol table should be initialized to assure proper operation in this mode. This may be done by using the 'R' option to reset the symbol table prior to assembling using pass 2 only as follows:

```
$ASM MYFILE(CR)
 MOSTEK FLP-80 ASSEMBLER V2.1.  Options?  PR(CR)
        -user selects pass 2 only operation and resets the
         symbol table prior to assembly.
    .
    .
    .
```

The symbol table initialization described above only has to be done after power up and after symbols are left in the table from a previous assembly.

5-49. ASSEMBLING SEVERAL SOURCE MODULES TOGETHER. Several source modules may be assembled together to form one object module. The 'INCLUDE' pseudo-op may be used several times in one module to properly sequence a set of source modules.

EXAMPLE

```
        NAME      MYFILE       ;name of final object module
        INCLUDE   FILE1
        INCLUDE   FILE2
        INCLUDE   FILE3
        END
              -the object module named 'MYFILE' will be built by
               the assembly of FILE1 + FILE2 + FILE3.
```

5-50. **SAMPLE ASSEMBLY SESSION**

5-51. Assume that the file to be assembled is named PROG1. The diskette on which PROG1 exists is in disk unit 1 (DK1). The object output of the Assembler is to be directed to file PROG1.OBJ on disk unit 1. The assembly listing is to be directed to a line printer (LP:). A printed symbol table is to be obtained. The following sequence will perform the assembly:

EXAMPLE

```
$ASM DK1:PROG1 TO LP:  (CR)
MOSTEK FLP-80 ASSEMBLER V2.1. OPTIONS?  S(CR)
        -user selects a printed symbol table.
        .
        .
        .
  ERROR = 0000
        - indication of zero assembly errors
  $
        -indication that assembly is done, and control is
         returned to the Monitor.
```

SECTION 6

LINKER

6-1. INTRODUCTION

6-2. The Linker program provides the capability for linking object files together and creating a binary (EXT=BIN) or RAM image file. The Linker concatenates modules together and resolves global symbol references which provide communication between modules. A starting link address may be entered to position a linked module anywhere in the memory map. The Monitor GET or Implied Run command can be used to load binary files allowing fast access of linked modules.

6-3. LINKER COMMAND

6-4. SYNTAX: LINK Dataset 1,..... Dataset N TO Dataset B [,Dataset C](CR)

6-5. The input datasets (Dataset 1....Dataset N) are object files produced by either the Assembler or the Monitor DUMP command. The object files must be on a supported disk unit (e.g. DK0 or DK1). In the Linker command the object input datasets must have an extension of OBJ or blank. If a blank extension is entered the Linker will assume an extension of OBJ. Dataset B is the binary output file which is created by the linker. Specification of Dataset B by the user is optional. If Dataset B is not specified it automatically defaults to a file having an extension of BIN and a filename of Dataset 1 which is the first input dataset. If Dataset B is specified it must be on a supported disk unit (e.g. DK0, DK1) and must have an extension of BIN or blank. If a blank extension is entered, the Linker will assume an extension of BIN. Dataset C is the output file for

the global cross reference table and symbol table when the C and S options are specified (See Paragraph 6-9 and 6-11). Dataset C can be any supported output device (e.g. LP:,TT:). Specification of Dataset C is optional. If Dataset C is not specified it automatically defaults to a file having the extension of CRS and the filename of Dataset B.

6-6. When entering the Linker command if a large number of input datasets are specified the command line may exceed the maximum terminal line length (usually 80 characters). If this occurs, the terminal output driver (TT) will automatically issue a CR and LF to enable continuation of the command on the next line. Since a carriage return input from the keyboard is interpreted by the Linker to be the terminator of the command string, the user should not enter a carriage return until the entire Linker command has been entered. The maximum length of the Linker command string is 160 characters, however, the library search option (See Paragraph 6-10) may be used if the user wishes to link additional datasets.

6-7. After a valid command is entered the Linker outputs the following message on the console.

```
OPTIONS?
```

The user can then enter any of the supported Linker options (A,C,L,U,S). A carriage return terminates the options list.

6-8. A OPTION. The A option enables the user to enter a starting link address. After the A option is entered the following message is output to the console.

```
ENTER STARTING LINK ADDRESS >
```

The user may then specify the starting link address for the first object module. The beginning load address of the first relocatable module is the starting link address plus the module starting address defined by the Assembler ORG pseudo-op. If the

ORG pseudo-op is omitted or its address is 0, then the starting link address equals the beginning load address. If an object module is absolute the A option is ignored and the module is always loaded at its starting address as defined by the ORG pseudo-op. The PSECT pseudo-op of the Assembler defines a module as either relocatable or absolute. If the A option is not specified the Linker assumes a starting link address of 0. The beginning and ending address of each module is printed on the console by the Linker during Pass 2.

6-9. C OPTION. The C option causes the global cross reference table (See Figure 6-1) to be generated and output to the device specified in Dataset C. The global cross reference table contains the symbol name, definition address and reference addresses. A global symbol can be defined only once but can be referenced many times. A symbol is defined by a module if it occurs in the label field of the module and is specified by the GLOBAL pseudo-op. A global symbol is referenced within a module when it occurs in the operand field. When the C option is specified a load map is also output which specifies the object input files linked and their beginning and ending addresses.

6-10. L OPTION. The L option enables the user to perform a library search for undefined global symbols. If any symbols are undefined after linking the input datasets (Dataset 1.... Dataset N) during Pass 1, the Linker prints out the number of undefined symbols. (The U option prints out a list of undefined symbols.) If the L option has been selected the Linker prints the following message on the console.

SEARCH DISK UNIT 1/0?

The user may then initiate a library search by entering a 1 or 0 followed by a carriage return. Any other response terminates the search and Pass 2 execution is started. If a library search has been requested the Linker searches the disk unit specified for

an object file having the filename of the first undefined symbol. If the file is found, it is linked into the binary output file and any global references which are defined are resolved. This process is repeated for each undefined symbol in the original list. After the search has been completed for the first list of symbols, the sequence can be repeated for a new list if any symbols remain undefined. After the original list has been searched more undefined symbols might actually exist if a file from the previous list contains additional undefined symbols. Each time the search is repeated either disk unit may be searched. Disks should not be removed or inserted between library searches. The library search option may be used to minimize the number of input files that must be typed in the Link command. This can be done by giving an object file the same name as a global symbol definition within the module.

6-11. S OPTION. The S option causes the global symbol table (See Figure 6-1) to be generated and outputted to the device specified in Dataset C. The global symbol table contains the symbol name and definition address. A symbol is defined by a module if it occurs in the label field of the module and is specified by the GLOBAL pseudo-op. If a global symbol is referenced but not defined it is marked undefined (UNDEF=****). A global symbol is referenced within a module when it occurs in the operand field. When the S option is specified a load map is also output which specifies the object input files linked and their beginning and ending addresses.

6-12. U OPTION. The U option prints out a list of undefined global symbols after the Linker has completed Pass 1.

6-13. LINKER OPERATION

6-14. During Pass 1 the Linker reads the specified object files

and places the global symbol definitions in the symbol table. In Pass 2 the global symbols are defined and a binary or ramimage output file is produced. As each object module is read in Pass 2 its beginning and ending address in memory is printed on the console. The module type is also listed as either absolute or relocatable (ABS/REL). Absolute modules are always positioned at their starting address in memory as defined by the ORG pseudo-op. Relocatable modules are positioned at the next location after the end address of the previous module. If the first input module is relocatable, it is positioned by the starting link address (See Para. 6-8). If the starting link address is not specified by the A option it assumes a value of 0.

6-15. LINKER RESTRICTIONS

6-16. When absolute modules are being linked together, the files in the LINK command must appear in sequential order according to their starting addresses in memory. If an absolute module is encountered having a starting address lower in memory than a previous module the following error message is printed on the console.

```
****ERROR 35    MODULE SEQUENCE ERROR
```

The maximum size allowed for an individual object input module is limited by the linker buffer size which is dynamically allocated depending upon the size of the memory. On the standard system having 32K of RAM, it is 18K bytes in length and on the minimum system having 16K of RAM it is 4.5K bytes. There is no restriction on the length of the binary output file.

When loading a binary file using the Monitor GET or Implied Run commands the entire memory space is available except for 48 bytes in scratchpad RAM starting at 0FF60H. This space is reserved for the Monitor I/O vector and cannot be overlayed during a load sequence.

6-17. EXAMPLES OF LINK COMMAND

EXAMPLE 1. Link the relocatable object modules MAIN1.OBJ, SUB1.OBJ,SUB2.OBJ and SUB3.OBJ together starting at 2000H and produce the binary file TEST.BIN. Also generate a symbol table, cross reference table and load map and store them in the file TEST.CRS. This file may be printed using the PIP copy command (See Figure 6-1).

```
$LINK MAIN1,SUB1,SUB2,SUB3 TO TEST(CR)
      OPTIONS? A C S(CR)
      ENTER STARTING LINK ADDRESS   2000
      DK0:MAIN1   .OBJ[1]
      DK0:SUB1    .OBJ[1]
      DK0:SUB2    .OBJ[1]
      DK0:SUB3    .OBJ[1]
      UNDEFINED SYMBOLS 00
      PASS 2
      DK0:MAIN1   .OBJ[1]    REL    BEG ADDR 2000    END ADDR 2033
      DK0:SUB1    .OBJ[1]    REL    BEG ADDR 2034    END ADDR 20DB
      DK0:SUB2    .OBJ[1]    REL    BEG ADDR 20DC    END ADDR 20F6
      DK0:SUB3    .OBJ[1]    REL    BEG ADDR 20F7    END ADDR 2120

      $
```

EXAMPLE 2. Link the absolute file MAIN.OBJ and the relocatable subroutines SUB1.OBJ, SUB2.OBJ, SUB3.OBJ together producing the binary file MAIN.BIN. Access the object files DK0:SUB1.OBJ, DK0:SUB2.OBJ and DK1:SUB3.OBJ using the library search option.

```
$LINK MAIN (CR)
OPTIONS? L U (CR)
DK0:MAIN   .OBJ[1]
MODNO   MSGBEG   MSGEND   MSGMAI   PRINT
SUB1    SUB2     SUB3
UNDEFINED SYMBOLS 08
```

```
SEARCH DISK UNIT 1/O ? 0 (CR)
DK0:SUB1  .OBJ[1]
DK0:SUB2  .OBJ[1]
MODNO  SUB3
UNDEFINED SYMBOLS 02
SEARCH DISK UNIT 1/O ? 1(CR)
DK1:SUB3  .OBJ[1]
UNDEFINED SYMBOLS 00
PASS 2
DK0:MAIN  .OBJ[1]    ABS    BEG ADDR 1000    END ADDR 1025
DK0:SUB1  .OBJ[1]    REL    BEG ADDR 1026    END ADDR 10CD
DK0:SUB2  .OBJ[1]    REL    BEG ADDR 10CE    END ADDR 10E8
DK1:SUB3  .OBJ[1]    REL    BEG ADDR 10E9    END ADDR 1115
```

FIGURE 6-1. EXAMPLES OF LOAD MAP, GLOBAL CROSS REFERENCE, AND GLOBAL SYMBOL TABLE

```
LOAD MAP

DK0:MAIN1 .OBJ[1]    REL    BEG ADDR 2000    END ADDR 2033
DK0:SUB1  .OBJ[1]    REL    BEG ADDR 2034    END ADDR 20DB
DK0:SUB2  .OBJ[1]    REL    BEG ADDR 20DC    END ADDR 20F6
DK0:SUB3  .OBJ[1]    REL    BEG ADDR 20F7    END ADDR 2120

GLOBAL CROSS REFERENCE TABLE

SYMBOL ADDR  REFERENCES
CRLF   2030  211A 20F4
MAIN   2000
MODNO  2109  20E2 20DF 203A 2037 2011 200E
MSGBEG 204D  2006
MSGEND 2073  2023
MSGMAI 2098  2014
MSGMOD 20D0  210F
MSGSB2 20A3  20E5
MSGSB3 20A9  2100
PRINT  20EE  2103 204A 2040 2026 2017 2009
PTEST  2046  2106 20EB
SUB1   2034  201A
SUB123 211D
SUB2   20DC  201D
SUB3   20F7  2020

GLOBAL SYMBOL TABLE

CRLF   2030    MAIN   2000    MODNO  2109    MSGBEG 204D
MSGEND 2073    MSGMAI 2098    MSGMOD 20D0    MSGSB2 20A3
MSGSB3 20A9    PRINT  20EE    PTEST  2046    SUB1   2034
SUB123 211D    SUB2   20DC    SUB3   20F7
```

SECTION 7

DDT-80 DEBUG SYSTEM

7-1. INTRODUCTION

7-2. This section describes the functions and operation of DDT-80 (Designer's Development Tool 80) resident in the FLP-80DOS system. The DDT software provides a complete facility for interactively debugging relative and absolute Z80 programs. Standard commands allow displaying and modifying memory and CPU registers, setting breakpoints, and executing programs. Additional commands allow use of the MOSTEK AIM-80 to interactively debug a target system. Mnemonics are used to represent Z80 registers, thus simplifying the command language.

7-3. SOFTWARE CONFIGURATION

7-4. DDT-80 is a program that resides in PROM (located from $E000_H$ to $EFFF_H$) on the SDB-80 board. In addition to the PROM, DDT uses 256x8 of RAM for scratch RAM and temporary storage. This RAM resides at locations FF00H - FFFFH.

7-5. The 256x8 Scratchpad RAM is used by the DDT for temporary storage and a push down stack (for return address, etc.). This RAM also holds an image (or map) of all the user's internal CPU registers. Figure 7-1 is a detailed memory map of the 256x8 Scratchpad RAM.

7-6. An important concept in DDT is preservation of the user's internal CPU registers. The state of the CPU is described by the contents of the registers. To preserve the state of the CPU for a user's program while debugging, DDT keeps an image or map of all the user's registers. This image or map is referred to as the

User Register Map throughout this documentation. DDT installs or makes the CPU registers equal to the user register map when control is transferred from DDT to a user program (as in the E command discussed in paragraph 7-45). DDT-80 saves the user register map when DDT is commanded (breakpoint command discussed in paragraph 7-34) to interrupt a user program. DDT allows modification to this register map with the display and/or update memory command (M command, discussed in paragraph 7-57). The user register map resides in the 256x8 Scratchpad, locations $FFE6_H$ thru $FFFF_H$, as shown in Figure 7-1. Figure 7-2 shows the data paths between the user register map and the CPU registers. Also shown is the modification path between DDT and the User Register Map.

FIGURE 7-1. DDT USER REGISTER MAP

MEMORY LOCATION	USER REGISTER		
FFFF	PC	PROGRAM	MSB
FFFE		COUNTER	LSB
FFFD		A	
FFFC		F	
FFFB		I	
FFFA		IF	
FFF9		B	
FFF8		C	
FFF7		D	
FFF6		E	
FFF5		H	
FFF4		L	
FFF3		A'	
FFF2		F'	
FFF1		B'	
FFF0		C'	
FFEF		D'	
FFEE		E'	
FFED		H'	
FFEC		L'	
FFEB		IX	MSB
FFEA			LSB
FFE9		IY	MSB
FFE8			LSB
FFE7	SP	STACK	MSB
FFE6		POINTER	LSB

FIGURE 7-2. DDT DATA PATHS

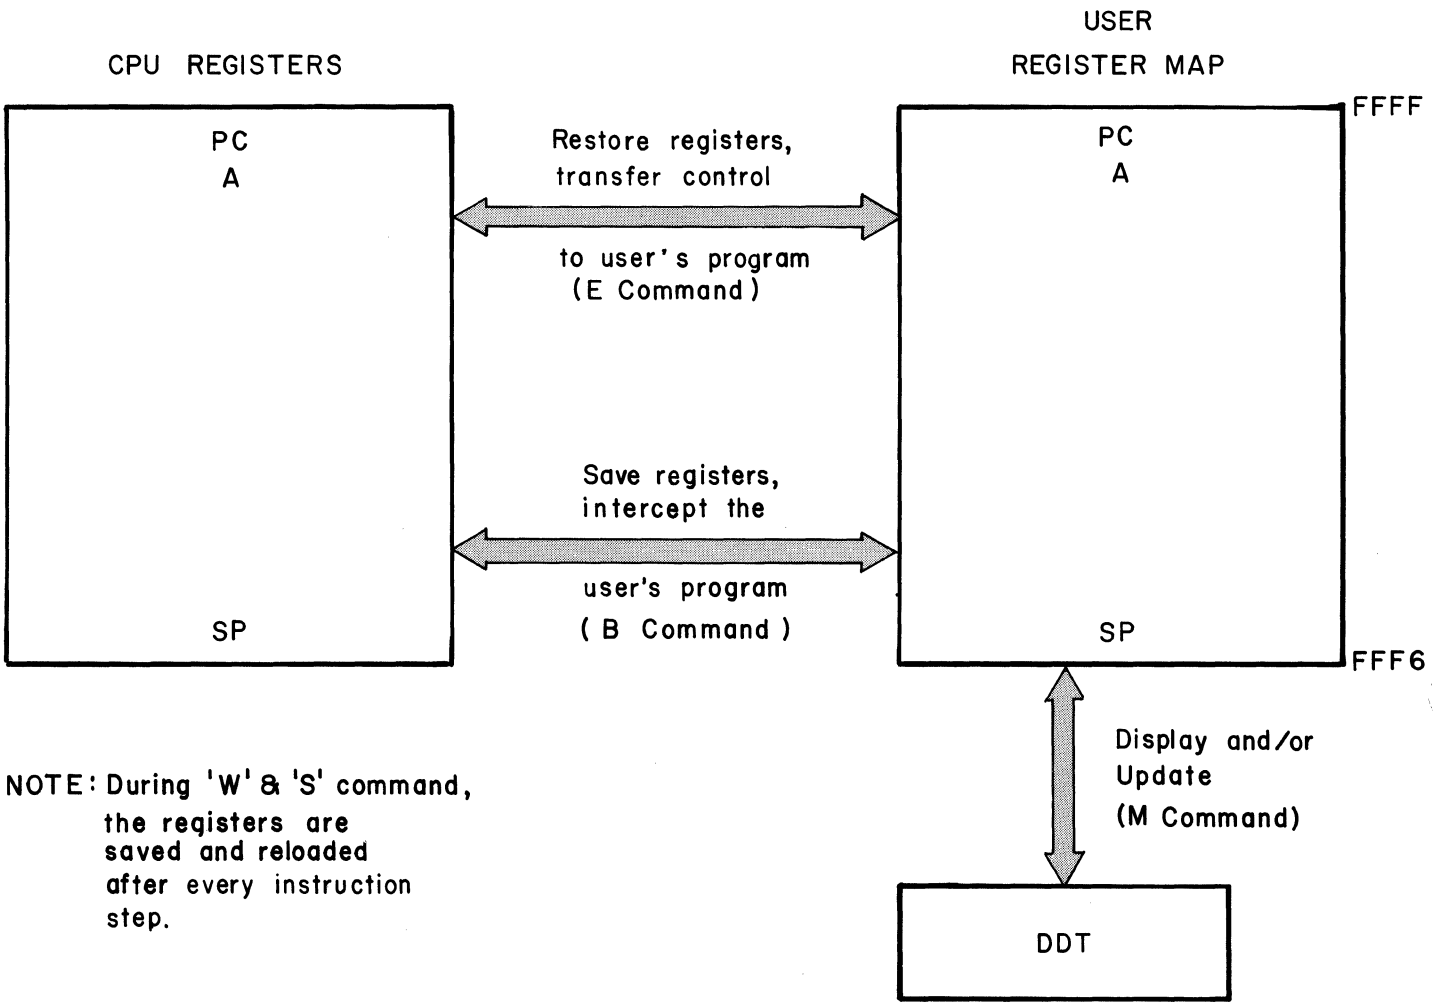

TABLE 7-1. MNEMONICS RECOGNIZED BY DDT-80

Unrecognized mnemonics are resolved with a value of zero.

MNEMONIC	ADDRESS REPRESENTED BY THE MNEMONIC	DATA SAVED AT THAT ADDRESS
:PC*	FFFE	User's PC Register
:A	FFFD	User's A Register
:F	FFFC	User's F Register
:I	FFFB	User's I Register
:IF	FFFA	User's IFF Register
:B	FFF9	User's B Register
:C	FFF8	User's C Register
:D	FFF7	User's D Register
:E	FFF6	User's E Register
:H	FFF5	User's H Register
:L	FFF4	User's L Register
:A'	FFF3	User's A' Register
:F'	FFF2	User's F' Register
:B'	FFF1	User's B' Register
:C'	FFF0	User's C' Register
:D'	FFEF	User's D' Register
:E'	FFEE	User's E' Register
:H'	FFED	User's H' Register
:L'	FFEC	User's L' Register
:IX*	FFEA	User's IX Register
:IY*	FFE8	User's IY Register
:SP*	FFE6	User's SP Register

* = 2 byte mnemonics

7-7. COMMAND SUMMARY

Table 7-2 lists all the DDT commands for reference.

7-8. CONVENTIONS

7-9. Hexadecimal numbers are denoted by the number followed by a subscript H. E.g., $AF3_H$. In a command sequence user input is underlined. (CR) means carriage return. Bracketed items [] in a command line are optional. Items in a command line which must be entered exactly as they appear are shown as upper case. Items in a command line which are variables are shown as lower case.

TABLE 7-2. DDT COMMAND SUMMARY

TO INVOKE DDT:

$DDT(CR)

CONSOLE INTERACTION:

.	prompt character
(CR)	terminate a command
. or cntl-U	abort

COMMANDS:

B	aaaa	insert a breakpoint in user's program.
C	aaaa,bbbb,cccc	copy memory aaaa thru bbbb to cccc and above
E	aaaa	execute user's program
F	aaaa,bbbb,cc	fill memory aaaa thru thru bbbb with data cc.
H	...	hexadecimal arithmetic.
L	aaaa,bbbb,cccc	locate all occurrences of data cccc in memory aaaa thru bbbb.
M	aaaa,bbbb	display, update, or tabulate memory or registers.
O	aaaa	set offset constant for relocatable programs.
P	aa	display and update port.
Q		quit - return to Monitor.
R	a,bb	display user registers.
W	aaaa ,bb	single step starting at address aaaa for bb steps.
V	aaaa,bbbb,cccc	verify that two blocks of memory are identical.

7-10. PREPARATION

7-11. Create, assemble, and link your Z80 program as described in Section 4, 5, and 6 of this manual.

7-12. You should now be ready to debug a binary file which has your Z80 program on it. To debug the program, use the Monitor GET command to load the program into RAM:

$GET file(CR)

where file is the name of the binary file created by the LINK process.

Then execute DDT:

$DDT(CR)

.

The dot (.) indicates that DDT is ready to accept commands.

7-13. DESCRIPTION OF DDT COMMANDS

7-14. COMMAND FORMAT.

7-15. DDT recognizes commands which consist of three parts:

1. A single letter command.
2. An operand or operands separated by commas or blanks.
3. A terminator to either abort the command or cause it to be executed.

EXAMPLE

.M 100,102(CR)

1. 2. 3.

7-16. In the command mode DDT prompts on the user console with a dot (.). The user may enter any single letter command. A space is then printed on the console. The user may then enter any required operands and a terminator. Operands are separated from each other by a space or a comma. The terminator may be a

carriage return, dot (.) or control-U. Carriage return causes execution of the command. A dot or control-U aborts the command, and the user is prompted again.

NOTE The format of entering commands in DDT differs from FLP-80DOS Monitor commands in that DDT automatically inserts a space after a command to separate it from the operands.

7-17. OPERANDS

7-18. Operands are separated from each other by a space or comma. An operand may take any one of the following forms.

7-19. Hexadecimal number. Leading zeros need not be entered. The last four digits are used for the value entered for address values. The last two digits are used for data values.

7-20. ASCII literal value. Any characters preceded by the letter "L" are converted to their ASCII equivalent value. E.G., LA(=41_H), LAB(=4142_H).

7-21. Relative Address. A hexadecimal number preceded by the character "R" causes the offset specified by the O command to be added to the number. A relative address is identified by an apostrophe next to it. E.g., (assuming offset = 100_H) R0(=100_H), R4FF(=$5FF_H$).

7-22. The offset and relative address functions are useful when debugging modules of a program which have been relocated by the Linker.

7-23. Program Counter. The character "$" is used to represent the current address. It is used with the M command to calculate relative branch displacements.

7-24. Added or subtracted numbers. Hexadecimal numbers may be added to or subtracted from each other to represent an operand. E.g., A + A ($=14_H$), 5A + A - 10 ($=54_H$).

7-25. Equal Sign. An equal sign (=) may be entered at any time to display the current value of an operand as 4 hexadecimal digits. E.G., 5A + A -10 = 0054, LAC = 4143.

7-26. Mnemonic. A mnemonic consists of one or two characters following a colon (:). Mnemonics are used to represent Z80 CPU registers. Table 7-1 lists all the allowed mnemonics in DDT and their meanings.

7-27. OPERAND EXAMPLES

4F7F	The operand value is equal to $4F7F_H$.
:PC	The mnemonic PC is equivalent to the save location of the user's program counter.
5038-5000	The operand value is 38_H,
5038-5000=0038	The same as above except "=" was entered to display the operand value.
5038-$	If current address = 5000_H, then $\$=5002_H$ and the operand value equals 36_H for relative jump instructions.
5038-$=0036	The same as above except the equal sign was entered.
305038	More than 4 digits entered, therefore only the last 4 have meaning. Operand value = 5038_H.
305038=5038	The same as above except the equal sign was entered.
LAB=4142	Operand is equal to the ASCII value of "AB".
LA=2041	Operand is equal (LSB) to ASCII vlue of 'A'.
R100=1100	Assumes offset = 1000.

7-28. COMMAND TERMINATORS

7-29. The command terminator immediately follows the operand(s) and signals DDT that the command has been entered. Depending on the terminator, DDT will do one of the following

Terminator	Action
(CR)	Carriage return. DDT executes the entered command.
. OR CNTL-U	Period or CNTL-U. DDT aborts the command. The user is prompted for another command.
^	Carat or up arrow. This terminator is valid only for the M and P commands. When updating a memory location (M) or a port (P), it signals DDT to display the contents of the location or port just updated, or if the location was not updated, the previous location.
/	Slash. This terminator is valid only for the M command. This causes the data entered to replace the old data and then return to the command mode. If no data was entered, it is treated as a period.

7-30. SPECIAL KEYS

7-31. Several keys have special meaning in DDT:

period (.)	memory printouts on the console (L,M, or V commands) may be aborted by entering a period. Single stepping (W Command) may also be aborted this way. DDT then enters the command mode.

Space bar	The space bar may be used to start and stop single stepping (W command).

7-32. ERRORS

7-33. Any time erroneous input is detected, a question mark (?) is printed and DDT returns to the command mode.

7-34. B COMMAND, BREAKPOINT COMMAND

7-35. Format:

.B aaaa(CR)	Set breakpoint at memory address aaaa.
.B (CR)	Clear previous breakpoint.

7-36. Overview. When the breakpoint command is used, a "trap" which consists of three bytes is placed into the user's program. The original program bytes are automatically saved.

7-37. The user then uses the E (execute) command to start execution of the program. When the trap is encountered, DDT is signalled and execution is stopped. The registers from the CPU are then transferred to DDT and printed out on the user console. To resume execution of the program, the user must use the E (execute) command again or the W (single step) command.

7-38. Description. The user types the command identifier B followed by the address where it is desired to place a breakpoint "trap". DDT proceeds to remove any pre-existing breakpoint, extracts and saves 3 bytes of the user's program at the breakpoint address, and places a 3 byte trap into the address. DDT then returns to the command mode. The user may start program execution via the E(execute) command. When the breakpoint trap is encountered, execution is stopped and control is transferred back to DDT. DDT then restores the three bytes of user code at the breakpoint address, reads all the target CPU registers and prints them out(see R-register command).

7-39. DDT then waits for the user to enter one of the following characters:

1. Period (.) returns DDT to the command mode.
2. Carriage return causes one program instruction to be

stepped. After the instruction is executed, the target registers will be printed again and DDT will again wait for user input.

3. Line feed has the same effect as carriage return, but a heading to identify the registers will be printed out.
4. Space bar starts automatically single stepping. Single stepping will continue for 256 steps or until the space bar is pressed again. The user can thus start and stop single stepping of his target program. (See W-Step command).

NOTE: The contents of the registers reflect the effect of the last instruction before the breakpoint was encountered.

7-40. One breakpoint can be set at a time before execution is begun. A breakpoint can be reset by entering the B command with no operands. A breakpoint at a specific address can be cleared by executing that address.

7-41. There are certain characteristics of the DDT breakpoint facility which the user should be aware of during debugging:

1. The trap sequence used by DDT-80 is as follows:
   ```
   JP DDT      Jump to DDT Breakpoint Processor
   ```

2. Since DDT replaces three bytes of the user program, a breakpoint should be set such that when the user program is executed, control can only be transferred to the first byte of the trap sequence. In addition, the breakpoint must reference the first byte of an instruction. For example in the following sequence:
   ```
   L1 JR NZ,L3-$
   ```

```
L2 LD A,0
L3 LD B,0FH
```

A breakpoint should not be set at L2 because if the branch condition at L1 is met, control would be transferred to the third byte of the trap sequence.

3. No error indication is given if one attempts to set a breakpoint in ROM.

4. After a breakpoint has been set, it can be changed simply by entering a new breakpoint. The act of entering a new breakpoint automatically clears the previous breakpoint.

5. When a breakpoint is encountered in a user program, DDT-80 saves the state of interrupts (through IFF) in the :IF register. The state of interrupts is restored or set according to the content of :IF when control is transferred to the user program.

6. Breakpoint will not work in areas where executable code is modified by the program.

EXAMPLE

.B 24E(CR)

-Set a breakpoint at location $24E_H$.

.O 100(CR)

-Set offset.

.B R4F3(CR)

-Set breakpoint at relative address $4F3_H$ ($=5F3_H$ absolute).

7-42. C-COPY MEMORY BLOCKS COMMAND

7-43. Format.

.C aaaa,bbbb,cccc(CR)	Copy locations aaaa through bbbb inclusive to the memory block starting at address cccc.

7-44. Description. The user enters the command identifier C followed by the starting address aaaa and ending address bbbb of the block to be moved, followed by the starting address cccc of the block receiving the data. The operands may be absolute or relative and are separated by commas or blanks. Upon terminating with a carriage return, DDT performs the requested copy operation, and returns to the command mode. The copy command permits any block of memory data to be moved to any area of memory. The move may be forward or backward and the new block may or may not overlap with the original memory block. Entire programs or subroutines may be moved around in this way. Care should be taken to copy complete instructions on both ends of the block when copying programs, and any relative jump instructions contained within a block to be moved should not jump outside the block. If the second operand entered (bbbb) is smaller than the first (aaaa), a question mark (?) is printed and control returns to the command mode.

EXAMPLE.

.C 100,200,1200(CR)	Copy memory locations 100H through 200H inclusive to locations 1200H through 1300H.
.C 100,200,150(CR)	Copy memory locations, 100H through 200H inclusive to locations 150H through 250H. (overlapping copy)
.O 100(CR)	Set relative offset to 100H.
.C R0,R100,R50(CR)	This would be the same as the previous example.

7-45. E-EXECUTE COMMAND

7-46. Format.

.E aaaa(CR)	Transfer control to the program starting at address aaaa.
.E (CR)	Transfer control to the address specified by register:PC.

7-47. Description. To cause execution of a program the user types the identifier E followed by the desired entry address of his program. Upon typing carriage return DDT loads the Z80 CPU registers and then transfers control to the program entry point. The contents of the register map reflect the effect of the last instruction before the breakpoint was encountered. If no entry address is specified after the E command, DDT will transfer control to the address specified by the :PC register (program counter).
Example.

.E 1200(CR)	Execute the program starting at location 1200H.

To return control to DDT the user's program must encounter a breakpoint (see B-Breakpoint Command).

.M :PC(CR)	Examine user's program counter (PC).
:PC 62FF 1220(CR)	Set user's PC to 1220H.
.E (CR)	Execute program starting at location 1220H.

The execute command may be used together with the breakpoint command to execute portions of programs while debugging.

7-48. F-FILL MEMORY COMMAND

7-49. Format:

.F aaaa,bbbb,cc(CR)	Fill memory locations aaaa through bbbb inclusive with cc.

7-50. Description. the user enters the command identifier F followed by the starting address aaaa and ending address bbbb, followed by the data cc. The operands are separted by commas or blanks. Upon terminating with a carriage return, DDT performs the requested fill operation and then prints a "." to indicate that DDT is ready to accept another command.

Example

.F 100,1FF,5A (CR)	Insert a 5A in every memory location from 100_H through $1FF_H$.
.O 100(CR)	Set relative offset to 100_H.
.F R0,RFF,5A(CR)	Fill same addresses as first example.
.	DDT waiting for next command.

7-51. H-HEXADECIMAL ARITHMETIC

7-52. Format.

.H +aaaa-bbbb+...+yyyy=zzzz(CR) Perform hexadecimal arithmetic.

7-53. Description. The user enters the command identifier and then enters the arithmetic expression. Only + and - are legal operations. If the sign of the first operand is omitted, it is assumed +. The equal sign causes the 4 digit (least significant 4 digits) result to be displayed. When the terminator is entered DDT returns to accept another command.

EXAMPLES.

.H 5000-4FFF=0001(CR)	Subract 4FFFH from 5000H.
.H 5000+4FFF=9FFF(CR)	Add 4FFFH to 5000H.
	The equal sign caused the 4 digit result to be printed.
.	DDT waiting for next command.

7-54. L-LOCATE 8-BIT DATA PATTERN COMMAND

7-55. Format.

.L aaaa,bbbb,cccc(CR) Locate and print the address of every occurrence of cccc from aaaa to and including bbbb.

7-56. Description. The user enters the command identifier L followed by the starting address aaaa and ending address bbbb, followed by the data cccc to be located. Upon terminating with a carriage return, DDT prints every address between aaaa and bbbb which contains cccc. If cccc is less than 100_H, then a one byte comparison is made. If cccc is greater than or equal to 100_H, then a two byte comparison is made. The data to be located should be entered with the most significant two digits of data first followed by the least significant two digits of data (if location 1000_H contained 13 and location 1001_H contained 92, the user would enter 9213 as the data to locate).
EXAMPLE:

.L 0,750,35(CR)	Locate every occurrence of 35H between address 0 and 750H.
0052 35	Every location containing 35 is printed between (and including) 0 and 750_H.
00F3 35	
0542 35	
0750 35	
.L 750,35FF(CR)	Locate every occurrence of the 2 byte value $FF35_H$ between address 0 and 750_H.
00F3 35	Every address where 35FF is found is printed out. The location previous to the location printed out contains the least significant two digits.
0542 35	

7-57. M-DISPLAY AND UPDATE MEMORY OR REGISTER COMMAND

7-58. Format:

.M aaaa(CR)

7-59. Description. The user enters the command identifier M and the operand aaaa followed by a carriage return. DDT prints the memory address or mnemonic on the next line, followed by the contents of that particular address in hexadecimal. If the content is to be changed, the new value is entered. Any number of digits may be entered, but only the least significant two (or four) digits are accepted.

7-60. Terminators. When the user is examining and/or modifying a register or memory location, the accompanying terminator signals the action DDT is to take. The possible operand (new value entered) and terminator combinations are:

Terminator	Meanings
(CR)	No operand entered, display next address or register.
^	No operand entered, display previous address or register.
/	No operand entered, display next address or register.
aa.	Operand aa entered but "." aborts command with no change to value at address.
aa(CR)	Operand aa entered, change value at address to aa and step to next address.
aa^	Operand aa entered, change value at address to aa and display same address with the new value aa displayed.
aa/	Operand entered, change value at address to aa then exit to command mode.

7-61. Memory display. Memory locations are accessed as follows:

M 16A(CR)	Examine memory location $016A_H$.
016A 3F(CR)	It contains $3F_H$ do not change, step to next location.
016B 92 ^	Next location contains 92_H, do not change, go back to previous locaton.
016A 3F 34FF^	Change contents of 016A to FF_H and display same location. Note that only the last 2 digits typed are stored in 016A (the entry 34 was in error).
016A FF(CR)	New contents displayed, step to next.
016B 92 .	
.	DDT waiting for next command.

7-62. When accessing relative memory locations, the user sets the offset with the "O" command and uses the "R" prefix with the memory address. Assuming the offset was set to 1000:

.M RO(CR)	
'0000 1000 xx.	The relative address, absolute address and data are printed out.
.	DDT waiting for next command.

7-63. Register display. The user may examine and change his CPU registers. They may be initialized, for example, prior to program execution, or after a breakpoint has been encountered in the program to be debugged. The contents of the user's registers may be accessed through the use of the mnemonics discussed in paragraph 7-26.

M :A(CR)	Examine user's accumulator.
:A 18 25(CR)	Change register A to 25H, examine next location.
:PC 0010 .	User's PC Register, return to command mode.
.M :PC(CR)	Examine user's PC (program counter) register.

```
:PC 0010 .          Return to command mode.
.                   DDT waiting for next command.
```

7-64. When resuming execution of the user's program, these new values will be inserted into the user's Z80 CPU registers.

7-65. Relative branches. A special feature of DDT allows the user to conveniently compute relative addresses used in relative branch instructions. The value of the symbol "$" is defined as the value of the current location and only has meaning during display and update commands.

7-66. This example shows the entering of a jump relative instruction at location 0_H to branch to location 38_H.

```
.M 0(CR)              Examine location 0H.
0000 20 18(CR)        Insert First byte of jump (JR 38H-$)
0001 F8 38-$=0036^    Compute and display relative dis-
                      placement for branch from 0H to
                      38H.
0001 36 .             Branch displacement of 36 shown.
.                     DDT waiting for next command.
```

7-67. It should be noted that the maximum allowed displacement value for forward branches is $7F_H$ and for backward is 80_H. It is simple to determine if the relative branch is within its range by examining the most significant two digits of the computed displacement. For forward branches, the most significant two digits should be 00_H and for backward branches, the most significant two digits should be FF_H.

7-68. M-TABULATE MEMORY COMMAND

7-69. Format

.M aaaa,bbbb(CR) Display memory location aaaa through bbbb.

7-70. Description. The user enters the command identifier M followed by the starting (aaaa) and ending (bbbb) addresses of the memory block. Upon terminating with a carriage return DDT prints a line feed, and then prints the contents of aaaaH to bbbbH inclusive with up to 16 values per line. DDT then returns to the command mode. The tabulation may be stopped at any time by entering "." on the console. When the 'R' prefix is used, the relative address is printed before absolute.

EXAMPLE

.M 4100,4127(CR) display memory locations 4100_H through 4127_H inclusive

```
4100 2B 90 12 20  00 B7 A5 21  10 94 04 20  CA B7 44 18
4110 81 11 34 21  07 94 17 45  12 55 A5 18  21 80 C5 55
4120 90 0C A5 81  09 21 40 22
```

```
:0 4100(CR)          set offset to 4100.
.M R0,R27(CR)
'0000 4100  2B 90 12 20  00 B7 A5 21  10 94 04 20  CA B7 44 18
'0010 4110  81 11 34 21  07 94 17 45  12 55 A5 18  21 80 C5 55
'0020 4120  90 0C A5 81  09 21 40 22
```

7-71. O-SET OFFSET CONSTANT COMMAND

7-72. Format:

.O aaaa(CR)	Set offset equal to aaaa.

7-73. Description. The user enters the command identifier O followed by the offset aaaa. Upon terminating with a carriage return, DDT saves the 16 bit offset. After the offset has been set, both relative and absolute addresses are printed any time addresses are displayed and until the offset is cleared. The offset can be cleared by entering the O command with no operands.

EXAMPLE

.O 200(CR)	Set offset.
.H R0=0200(CR)	Display value of offset.
.	DDT waiting for next command.

7-74. P-DISPLAY AND UPDATE PORTS COMMAND

7-75. Format.

.P aa(CR)

7-76. Description. the user enters the command identifier P followed by the port address aa and a carriage return. DDT responds by printing the port address and the value at that port. If the value at that port is to be changed, the user enters the new value. The new value entered is a 2 hexadecimal digit operand. When the user is examining and/or modifying a port, the terminator signals the action DDT is to take. The possible operand (new value entered) and terminator combinations are:

Terminator	Meaning
(CR)	No operand entered, display next port.
	No operand entered, display previous port.
.	No operand entered, return to command mode.
aa.	Operand aa entered, but "." aborts command with no change to the port.
aa(CR)	Operand aa entered, change the port value to aa and step to display the value at the next port.

EXAMPLE

.P E2(CR)	User displays port $E2_H$.
E2 00 12(CR)	User changes value to 12_H.
E3 15 .	Return to command mode.
.	DDT waiting for next command.

7-77. Q-QUIT COMMAND

7-78. Format

.Q CR)

7-79. Description. The user enters Q to exit DDT and return to the FLP-80DOS Monitor. The Monitor prints $ upon entry.
EXAMPLE.

```
.Q(CR)      exit DDT.
$           enter Monitor (Monitor prompts $)
```

7-80. R-DISPLAY CPU REGISTERS COMMAND

7-81. Formats.

.R (CR)	Print the contents of the CPU registers.
.R 1(CR)	Print a heading to label the CPU registers on one line, on the next line print the contents of the CPU registers.
.R 1,aa(CR)	Print a heading to label the CPU registers and set the long/short flag as follows. aa=0 SHORT, aa=1 LONG. Long causes all registers to be printed after breakpoint and single step. Short causes only PC and AF to be printed. The LONG/SHORT FLAG remains set until changed by the 'R' command.

7-82. Description. The user enters the comma command identifier R. If the user wants a heading to be printed that labels the register contents, an operand of 1 is entered. If no heading is desired, then no operand is entered. If the 'O' command has been used to set an offset, the relative PC is also printed (PC'). The second operand is optional and has the following meaning:

aa=0 - short form: only the Z80 program counter and AF register will be displayed.

aa=1 - long form. All CPU registers will be displayed.

7-83. Note that aa remains set to the value entered during all following commands until it is reset.

Examples.

```
        .R (CR)
A000 0100 0104 CFB3 C09A FFEE EDF6 9C3E C3DC FE9B D6ED F1BE FFB4

       .R 1(CR)
PC   AF   IIF  BC   DE   HL  A'F' B'C' D'E' H'L'  IX   IY   SP
A000 0181 0104 CFB3 0010 C09A FFEE EDF6 C3DC FE9B D6EC F1BE FFB4
```

```
                                        bit
      PC contains A000H          7                       0
       A contains 01H     F =  1  0  0  0  0  0  0  1
       F contains 81H          S  Z  X  H  X P/V  N  C
       I contains 01H
      IF contains 04   (Bit 3 = 1 implies IFF = 1)
            .
            .
            .                  S = sign flag
      IY contains F1BEH        Z = zero flag
                               X = indeterminate flag
                               H = half carry (for BCD operations)

      SP contains FFB4H        P/V = parity or overflow flag
                               N = BCD add/subtract flag
                               C = carry flag
```

7-84. V-VERIFY MEMORY COMMAND

7-85. Format.

.V aaaa,bbbb,cccc(CR)	Compare memory location aaaa to bbbb with the memory starting at cccc.

7-86. Description. The user enters command identifier V followed by the starting address aaaa and ending address bbbb, followed by the starting address cccc of the second memory block. The operands are separated by commas or blanks. Upon terminating with a carriage return, every address from aaaa to bbbb is compared with the corresponding address starting at cccc. Any discrepancies are printed on the console. ("address data address data"). When the comparison is complete, DDT is ready to accept another command. Printing of addresses may be aborted by entering a period (.) from the user console at anytime.
Example.

.V 0,FF,1000(CR)	Compare every location from 0 to FFH inclusive.
.O 100(CR)	Set offset.
.V R0,RFF,R1000(CR)	Compare relative address.
'0000 0100 BC '1000 1100 CC	Relative and absolute address on non-matches.

7-87. W-WALK THROUGH A PROGRAM COMMAND

The walk command, also known as software single-step, allows stepping through a program which is contained in RAM. The user's registers are saved and displayed after each step.

7-88. Format.

.W aaaa,nn,xxx(CR)	Begin software single-step at address aaaa, for nn_H steps, xxx = HD requests register heading, xxx = DIS requests disassembly (AIM-80 required for DIS).
.W Raaaa,nn,xxx(CR)	Relative address.

7-89. Description. The user enters the command identifier W followed by the starting address aaaa, the number of steps to take nn, and the options operand xxx. The operands are separated by commas or spaces. Upon terminating with a carriage return, the DDT begins "walking" through the user's program (RAM resident). After each step the user's registers are displayed (See 'R' command). When nn steps have been taken, DDT waits for the user to enter a carriage return, line feed, space, or ".". A carriage return causes the next instruction to be executed and wait again for input. A line feed causes the register heading to be printed before executing the next instruction. A space causes single stepping to continue for 256 instructions or until another space is entered to stop stepping. If nn is omitted, the default is 1. If aaaa is omitted, the last value of the user's program counter (:PC) is used to begin "walking". The stepping may always be stopped by entering any of the characters described above. When the address entered is relative, the 'PC is also printed (relative PC).

7-90. Restrictions to W Command.

1. Only operates with programs in RAM.
2. Cannot CALL or RESTART to an address one or two locations before the CALL or RESTART.
3. Walking through self modifying code is not allowed.

7-91. DEBUGGER ESCAPE (CNTL-C)

7-92. During normal use of DDT the Debugger Escape is not enabled because the minimal listener is not enabled. However, if execution of the user program is begun with the Monitor Implied Run Command or by the Monitor BEGIN command, the minimal listener is enabled. Debugger Escape can be used to trap out of the executing program as if a breakpoint had been encountered. The CPU registers will be saved and all DDT commands can be used. In this mode, Debugger Escape can be used any number of times.

EXAMPLE

$FILE1(CR)

-user uses Implied RUN command to load and execute his program from disk file FILE1.

(cntl-C)

-user depresses cntl-C to cause Debugger Escape.

A000 0100 0103 CFB3 C09A FFEE EDF6 9C3E C3DC FE9B D6ED F1BE FFB4

-DDT is entered as if a breakpoint had been encountered.

PART 2

TECHNICAL INFORMATION

SECTION 8

RDCHR AND WRCHR SUBROUTINES

8-1. INTRODUCTION

NOTE: These two routines allow the simplest way of performing device I/O on the FLP-80DOS system. It is suggested that the example shown in this section be programmed to acquaint the user with this system.

8-2. RDCHR and WRCHR are two subroutines which allow simplified byte I/O to any of the 6 default Logical Unit Numbers. RDCHR returns one byte from a device via LUN 0, 2, or 4. WRCHR writes one character to a device via LUN 1,3,or 5. Each subroutine assumes that the selected Logical Unit Number has been assigned to a device handler via the Monitor $ASSIGN command. The following paragraphs define entry and exit parameters. Users of DDT-80 V1.3 and ASMB-80 from the SDB-80 paper-tape system will recognize that this protocol is exactly the same as RDCHR and WRCHR in that software package. This allows current paper tape users to easily upgrade to the FLP-80DOS software.

8-3. RDCHR - READ ONE BYTE

8-4. CALLING SEQUENCE.

```
CALL RDCHR    ;RDCHR Address is specified in Appendix F.
```

8-5. ENTRY PARAMETERS.

E register:

- Bits 0-2 = LUN (0-5).
- Bits 3 = 1 to initialize or open the device.
- Bits 4,5 - reserved.
- Bit 7 = 1 for immediate return.

8-6. EXIT PARAMETERS.

A register and D register = byte which was read (ASCII).

E register:

Bit 3 reset after initialization.

Bit 6 = 1 if error occurred on input.

Bit 7 reset if operation was performed.

All other registers are maintained.

8-7. OPERATION. The driver uses LUN 0,2,4 or input. Lun's 1, 3 and 5 are modified to 0,2,4, respectively, within the subroutine. If the initialize bit (3) is set, OPENR request will be performed. Each READ request will return one byte (Byte Format I/O). Upon encountering 04H (EOT), the close request will be performed. Bit 6 will indicate if an I/O error occurred.

8-8. If bit 7 is set upon entry, the device status is read, but no read operation is initiated unless the device is ready. However control is always returned to the caller whether or not the operation was performed. This feature is not available with the disk.

8-9. WRCHR - WRITE ONE BYTE

8-10. CALLING SEQUENCE

```
CALL WRCHR   ;WRCHR Address is specified in Appendix F.
```

8-11. ENTRY PARAMETERS

E register:

Bits 0-2 = LUN (0-5).

Bits 3 = 1 for initialize.

Bits 4,5 - reserved.

Bits 7 = 1 for immediate return.

D register = byte to be output (ASCII).

8-12. EXIT PARAMETERS

A register - changed.

E register:

Bit 3 reset after initialization.

Bit 6 = 1 if error occurred on output.

Bit 7 reset if operation was performed.

All other registers are maintained.

8-13. OPERATION. The driver uses LUN 1,3 or 5 for output. LUN's 0,2, and 4 default to 1,3,5 respectively within the subroutine. If the initialize bit is set, OPENW request will be performed. If the unit is a disk unit and if the file exists, it will be erased and reopened. Each WRITE request outputs one byte (Byte Format I/O). If the byte is 04H (EOT), it will be output and a close request will be performed. Bit 6 indicates if an error occurred. The error number will be in the default vector for the correct LUN.

8-14. If bit 7 is set upon entry, the status port will be read, but no write operation is initiated unless the device is ready. However, control is always returned to the caller whether or not the operation was performed. This feature is not available with the disk.

8-15. DDT OPERATION

8-16. During execution of DDT (debugger) all I/O is directed to the console drivers without using the IOCS facilities. This allows the user to use all of available RAM and facilitates the AIM-80 memory map and operation. This mode can be forced by the programmer by setting location $FF12_H$ to the value 2.
EXAMPLE - See Figure 8-1.

CAUTION: When using RDCHR, the last character of a file, which

will be EOT (04_H), must be read in order to properly close the file. When using WRCHR, the last character output must be EOT (04_H) in order to properly close the file.

NOTE The calling addresses for RDCHR and WRCHR will not change in future versions of FLP-80DOS.

```
FIG8_1 EXAMPLE OF RDCHR & WRCHR          MOSTEK FLP-80 ASSEMBLER V2.0 PAGE 0001
 ADDR  OBJECT    ST # SOURCE STATEMENT          DATASET = DKC:FIG8D1.

                 0002          NAME    FIG8_1
                 0003 ;
                 0004 ; THIS PROGRAM READS CHARACTERS INTO A BUFFER UNTIL
                 0005 ; A CARRIAGE RETURN IS ENCOUNTERED.  THEN THE BUFFER
                 0006 ; IS PRINTED OUT ON THE CONSOLE DEVICE.
                 0007 ;
                 0008 ; THIS PROGRAM MUST BE LINKED WITH 'SYSLNK' IN ORDER
                 0009 ; TO RESOLVE THE EXTERNAL REFERENCES.
                 0010 ; E.G.:   $LINK FIG8D1,SYSLNK
                 0011 ;
                 0012 ; EXTERNAL LINKAGES TO SYSTEM ROUTINES
                 0013 ;
                 0014          GLOBAL  JTASK
                 0015          GLOBAL  RDCHR
                 0016          GLOBAL  WRCHR
                 0017 ;
'0000  212200'   0018          LD      HL,BUF   ;GET BUFFER ADDRESS
'0003  1E00      0019          LD      E,0      ;CONSOLE LOGICAL UNIT NUMBER
                 0020 ;
'0005  CDFFFF    0021 LOOP     CALL    RDCHR    ;READ ONE CHARACTER FROM CONSOLE
'0008  77        0022          LD      (HL),A   ;PLACE IT INTO THE BUFFER
'0009  23        0023          INC     HL       ;INCREMENT BUFFER POINTER
'000A  FE0D      0024          CP      0DH      ;CHECK FOR CARRIAGE RETURN
'000C  20F7      0025          JR      NZ,LOOP-$        ;IF NOT, LOOP FOR MORE
                 0026 ;
'000E  212200'   0027          LD      HL,BUF   ;REINITIALIZE BUFFER POINTER
 0011  1E01      0028          LD      E,1      ;CONSOLE OUTPUT LUN
                 0029 ;
'0013  56        0030 LOOP2    LD      D,(HL)   ;GET CHARACTER FROM BUFFER
'0014  CDFFFF    0031          CALL    WRCHR    ;WRITE IT OUT TO CONSOLE LUN
'0017  23        0032          INC     HL       ;INCREMENT BUFFER POINTER
'0018  7A        0033          LD      A,D      ;GET CHARACTER INTO A-REG
'0019  FE0D      0034          CP      0DH      ;CHECK FOR CARRIAGE RETURN
'001B  20F6      0035          JR      NZ,LOOP2-$       ;IF NOT, LOOP FOR MORE
                 0036 ;
'001D  3E01      0037          LD      A,1
'001F  C3FFFF    0038          JP      JTASK    ;ELSE RETURN TO MONITOR
                 0039 ;
                 0040 ; INPUT/OUTPUT BUFFER
                 0041 ;
'>0022           0042 BUF      DEFS    128
'00A2  00        0043          DEFB    0        ;DEFS CANNOT TERMINATE A MODULE
                 0044          END


ERRORS=0000
```

SECTION 9

INPUT/OUTPUT CONTROL SYSTEM (IOCS)

9-1. INTRODUCTION

9-2. The Input/Output Control System (IOCS) provides a general purpose means of accessing all types of I/O devices. It makes any differences between devices as transparent as possible to the user. IOCS may be used to access data from a device or write data to a device. This may be achieved in a user program by filling a vector within the user program with information regarding the type of I/O action required and calling IOCS. IOCS not only uses the information contained in the vector, but also returns information to the user in the vector. Several system routines exist to aid the user in working with IOCS and are described in Section 13.

9-3. VECTOR DEFINITION

9-4. IOCS requires that a 48 byte (30H) vector be filled with information regarding the type of I/O action to be performed and where that action is to take place. The vector may be filled within the user program or by using the $ASSIGN command previous to entering the program (see section 2 of this manual). If the $ASSIGN command is used, IOCS fills the vector pointed to by the IY register when an OPEN request is made (see Section 9-15). When a user makes a request to IOCS, the IY register must point to the first address of the vector being used. Bytes 0-29 of the vector are the user interface to IOCS. Bytes 30-39 are reserved for I/O device handler usage. Bytes 40-47 are reserved

for IOCS usage. Table 9-1 lists the sections of the vector and assigns a name to each section for easy reference. Each vector name contained in table 9-1 will be discussed in detail. The user may reference the sample program in section 9-71 to see how the vector and IOCS are used.

TABLE 9-1. VECTOR DEFINITION

FIELD	#BYTES	OFFSET	NAME	DESCRIPTION	FORM
1	1 (Binary)	*(IY+0)	LUNIT	Logical Unit Number	
2	2	*(IY+1)	DVCE	Device Mnemonic	(ASCII)
3	1	*(IY+3)	UNIT	Unit Number	(ASCII)
4	6	*(IY+4)	FNAM	File Name	(ASCII)
5	3	*(IY+10)	FEXT	File Extension	(ASCII)
6	1	*(IY+13)	VERS	File Version	(Binary
7	1	*(IY+14)	USER	User Number	(Binary
8	1	*(IY+15)	RQST	Request Code	(Binary
9	1	*(IY+16)	FMAT	I/O Format	(Binary
10	2	(IY+17)	HADDR	Device Handler Address	(Binary
11	2	*(IY+19)	ERRA	User Specified Error Return Address	(Binary
12	1	*(IY+21)	CFLGS	Control Flags	(Binary
13	1	(IY+22)	SFLGS	Status Flags	(Binary
14	1	(IY+23)	ERRC	Error Code	(Binary
15	1	(IY+24)	PBFFR	Physical Buffer Number	(Binary
16	2	*(IY+25)	UBFFR	User's Buffer Address	(Binary
17	2	*(IY+27)	USIZE	User's Buffer Size	(Binary
18	1	(IY+29)	NREC	Number of Records	(Binary
19	10	(IY+30)	HSCR	Device Handler Scratch	
20	8	(IY+40)	ISCR	IOCS Scratch	

where * appears indicates the parameter is to be set up by the user prior to calling IOCS.

9-5. The following paragraphs describe each field in the IOCS vector.

9-6. LUNIT. The LUNIT field in the vector is the Logical Unit Number. There may be as many as 256 logical units, numbered 0-FF_H. The number stored in the LUNIT field corresponds to the logical unit number used in the Monitor $ASSIGN command (See Section 2). When an OPEN request is made in IOCS, the REDIRECT TABLE is searched for a logical unit number which has been redirected via the $ASSIGN command corresponding to the number stored in the LUNIT field of the vector. LUN FF_H is never redirected. If a match is found, the data found in the REDIRECT TABLE is stored in the user vector and the requested operation is performed. Logical unit numbers 0 - 5 are the default logical units and are assigned by FLP-80DOS at power up and when FLP-80DOS is booted from disk into RAM (See Section 2 of this manual). Vectors for the default logical units already exist in RAM and the user need not set up additional vectors for them. The addresses of the default vectors may be accessed by loading the D-reg. with the default logical unit number and calling GETVEC (see Section 13). These vectors are used by FLP-80DOS utility programs, and they may also be used by user application programs. Lun's 0 and 1 are always assigned to the console input and console output devices respectively. All other LUN's require that memory space be allocated for the 48-byte vector by the program using the LUN.

9-7. Any LUN may be assigned to a device handler by setting up the device information in the vector. (See below). Any LUN (except FF_H) may be redirected to any device by the Monitor $ASSIGN command (See Section 2). LUN FF_H is never redirected: the device information placed in the vector is the information used by IOCS. In addition when LUN 0 and 1 are reassigned in the

Monitor they are closed and reopened immediately to facilitate batch mode operation (See Section 14).

9-8. The same LUN may be used in any number of different vectors. This can facilitate a multi-user system in which several different programs use a LUN with a separate vector for each program. Further, LUN FF_H can be used for any number of different vectors within the same program. The FLP-80DOS Text Editor uses this feature.

NOTE An LUN is redirected to a different device by using the Monitor $ASSIGN command. However, the redirection does not take place until the LUN is opened. (Except for LUN 0 and LUN 1). Section 2 describes this in more detail.

9-9. DVCE. The DVCE field is composed of two ASCII character mnemonic which represents an I/O device. IOCS calls an external routine which searches for the mnemonics in a table. The Mnemonic Lookup Table also contains the corresponding address of the device handler. FLP-80DOS provides an expandable Mnemonic Lookup Table with a number of pre-assigned device mnemonics in it. The list of available FLP-80DOS device mnemoncs is shown in Table 9-2.

TABLE 9-2. FLP-80DOS DEVICE MNEMONICS

MNEMONIC	DESCRIPTION
CP	Line Printer (Centronics compatible)
CR	Card Reader (Documation M200)
DK	Flexible Disk
LP	Line Printer (Data products compatible)
PP	Paper Tape Punch

PR	Paper Tape Reader
TI	Silent 700 digital cassette reader (ADC is required)
TK	Terminal Keyboard
TO	Silent 700 digital cassette write (ADC is required)
TR	Teletype paper tape reader (step control is required)
TT	Teletype Printer or CRT screen, or Silent 700 printer.

9-10. UNIT. The UNIT field specifies one of a number of devices having the mnemonic specified in DVCE. For example if the DVCE was 'DK' (Flexible Disk), the Unit field would specify which disk unit the I/O operation is directed to. The device handler is responsible for decoding and using the UNIT field. In FLP-80DOS, all supplied handlers access one device (UNIT=0) except the Flexible Disk Handler (FDH).

9-11. FNAM. The FNAM (Filename) field is used only when accessing file structured devices. The six (6) ASCII bytes of the filename to be accessed are filled in by the user in the user program previous to calling IOCS or by use of the $ASSIGN command (See Section 2). In FLP-80DOS, the filename starts at the beginning of the field and is padded with blanks.

9-12. FEXT. The FEXT is an extension on a filename. In FLP-80DOS the following system extensions are reserved:

OBJ	ASCII hexadecimal object format
BIN	Binary RAM Image format
CRS	Linker Cross Reference file
TMP	Editor or Assembler temporary file
LST	Assembler listing file

The user may define and use other extensions as required. If the $ASSIGN command was used to enter the filename, the extension defaults to three (3) blanks.

9-13. VERS. The VERS field (version) is another extension on the filename. FLP-80DOS system programs do not support the version number. However, IOCS and the Floppy Disk Handler (FDH) do support it, but it is used for the date implementation in version 2.1 of FLP-80DOS.

9-14. USER. The USER field can be used to further identify a file. FLP-80DOS system programs support the USER field, but they do not support a multi-user environment. OEM users may wish to use this facility to develop a multi-user system. The default user number is one.

9-15. RQST. The RQST field is the request code. This field defines which type of action will be performed by IOCS. How a device handler interfaces to these request codes is described later in this section. The FLP-80DOS Flexible Disk Handler (FDH) supports an extended range of request codes which may be passed to IOCS. These codes are described in Section 10 of this manual.

TABLE 9-3. GENERAL PURPOSE REQUESTS

RQST CODE (HEX)	NAME	DESCRIPTION
00	OPENR	OPEN this unit for READING
01	OPENW	OPEN this unit for WRITING
02	CLOSE	Close this logical unit
03	READ	Read data from this unit
04	WRITE	Write data to this unit
05	REWIND	Go to beginning of input/file
06	INIT	Initialize all units of this device type
07	ERASE	Erase this file

9-16. FMAT. The FMAT field in the vector describes the I/O format selected by the user (high order 4 bits of the FMAT field) as well as the number of physical records to be allocated by the physical buffer allocator when the unit is opened (low order 4 bits (x) of the FMAT field). The user must select the format code best suited for the type of action required and the type of file being used.

TABLE 9-4. FORMAT REQUEST CODES

FMAT CODE (HEX)	TYPE	DESCRIPTION
0X	Byte I/O	Pass single bytes through A-REG.
1X	ASCII Line	Read/Write until carriage return.
2X	Logical Buffer	Read/Write number of bytes specified by USIZE.
3X	Binary ram image	RAM IMAGE to/from disk for binary save or load.

9-17. In all formats except Binary Format, double buffering takes place. That is, when a READ or WRITE request is made, data is placed in a buffer at the top of available RAM (the address of the buffer is determined by the physical buffer allocator). When a READ request is made to IOCS, data is retrieved from the buffer rather than the disk file. When a WRITE request is made, data is placed into the buffer until the buffer is filled before outputting the data to a disk file. IOCS handles all blocking/deblocking functions.

9-18. The size of the buffer used for storing data is controlled by the user in the low order 4 bits (x) of the FMAT field. This

number (0-F_H) corresponds to the number of physical records to be allocated. For example, if the user selected to read data from a file and selected to store 4 records of data in the buffer, the buffer size would be 496 bytes in length (4 records 124 bytes per record). The user must select the best trade-off for his particular application. If the user chooses a small number of records to be allocated, more memory will be available for user programs in RAM. However, disk access time may be greater. A large number of allocated records will cause disk access time to be reduced but user RAM will be reduced also.

9-19. In Byte I/O Format, a single character may be written to a device. The character to be written is passed to IOCS in the A-register. When reading, the byte read is passed back in the A-register.

9-20. In ASCII Line Format, data may be written to a device or read from a device on a line-at-a-time basis. If reading from a device, UBFFR (IY+25) contains the address (least significant byte first) where the line is to be stored in RAM. If writing to a device, UBFFR contains the address in RAM where the ASCII line to be written begins. Action on each line continues until a carriage return/line feed is encountered. The contents of UBFFR are not destroyed after the request is completed.

9-21. In Logical Buffer Format, the user can control the number of bytes to read or write with the USIZE (IY+27) parameter. To read data from a device, the user should load the UBFFR (IY+25) parameter with the address of the beginning area in RAM where data is to be stored. The USIZE parameter should be filled with the number of bytes to read. IOCS will read data from the device specified, store the data in RAM beginning at the address contained in UBFFR, and continue this operation until the USIZE

parameter is satisfied. To write data to a device, the user should load UBFFR with the address of the beginning area in RAM where data is to be written from. IOCS will begin reading data from RAM pointed to by UBFFR and writing the data to a device until the USIZE parameter is satisfied. If writing to a disk file, USIZE must be less than or equal to 'X' times 124, where 'X' is the number of physical records allocated as specified in the FMAT (IY+16) field.

9-22. Binary Format is reserved for binary disk files. When an OPENR (open for reading) request is made, the load address is read from the directory and placed in the UBFFR (IY+25) parameter. UBFFR determines where the contents of the binary file are to be loaded in RAM. The user may alter the address in UBFFR previous to making READ request to IOCS to load the data in a different area in RAM. The binary file will be read and stored in RAM beginning at the address contained in UBFFR and continue until end-of-file is encountered. When an OPENW (open for writing) request is made, the address contained in UBFFR is stored in the directory. The USIZE (IY+27) parameter specifies the number of bytes to be saved. This will be rounded mod-124 in FLP-80DOS. When a WRITE request is made to IOCS, data will be read from RAM beginning at the address contained in UBFFR and stored on a disk file. This action will continue until the USIZE parameter has been satisfied.

9-23. HADDR. The HADDR field is the address of the device handler. This field is filled in by the IOCS when the logical unit is opened. (OPENR or OPENW request).

9-24. ERRA. The ERRA field is a user-specified error return

address, least significant byte first. If the field is left zero, then IOCS will return without calling the return address. If bit 4 of CFLGS (See Section 9-28) is set, the system error handler will print a message on the device assigned to default Logical Unit 1.

9-25. CFLGS. The CFLGS field specifies various user specified I/O options as listed in the following table:

BIT #	FLAG DESCRIPTION	NAME
0	"MOUNT"/"DISMOUNT" Upon Open/Close	MOUNT
1	Auto Echo Serial Device	ECHO
2	Immediate Return	IRET
3	Read after Write requested	RDWR
4	Error Print Request	ERRPR
5	Strip Parity	NPAR
6		
7		

9-26. If the MOUNT bit is set in the CFLGS Field, then IOCS will print the following message for OPEN and CLOSE requests:

```
for  OPENR or OPENW
     MOUNT XXY, TYPE C WHEN READY:
for CLOSE
     DISMOUNT XXY, TYPE C WHEN READY:
where XX is device mnemonic
and Y is unit
```

This allows the user to output a message to ensure the device he is trying to access is made ready before execution.

9-27. If the ECHO bit is set, in ASCII line input, each

character read in is echoed to the console output device (as specified in default Logical Unit 1). Additional editing is performed on the line (Backspace, Rubout, Control-U, Tab). The following conventions are used:

BACKSPACE (ASCII 08_H) - delete character from the buffer. The cursor movement is backspace, overprint with a blank, and backspace again.

RUBOUT (ASCII $7F_H$) - delete previous character from the buffer. A backslash is printed on either side of the characters which are deleted.

CONTROL-U (ASCII 15_H) - delete line.

TAB (ASCII 09_H) - the tab character is entered into the buffer and the cursor is moved over mod - 8 spaces.

9-28. If the IRET bit is set, then any device handler which supports IRET will return immediately to the caller regardless of the status of the device. The device handler interrogates the device status. If the device is not ready, IRET flag set will be returned to caller. If the device is ready, the I/O operation will be performed and IRET flag reset will be returned to caller. This facility can be used by OEM users in a multitasking environment for handling I/O devices. Immediate Return can be used to check for time out on certain devices.

9-29. If the RDWR bit is set, then those handlers which support this facility will perform a read and verification after write. The FLP-80DOS Floppy Disk Handler (FDH) supports this facility.

9-30. If the ERRPR bit is set, then any error generated by a device handler or IOCS will be printed on the console device by IOCS. Appendix E shows the format of the messages.

9-31. If the NPAR bit is set, then bit 7 of every byte of I/O will be unconditionally reset by IOCS.

9-32. SFLGS. The SFLGS field contains flags used by IOCS to keep track of the status of a logical unit. This field must be cleared (00_H) by user before opening a logical unit.

BIT #	FLAG DESCRIPTION	NAME
0	Unit open	UNOP
1	Unit open for write	UNOPW
2	Unit on	UNON
3	End of File Detected	EOF
4		
5		
6		
7		

9-33. ERRC. The ERRC is a system error code inserted by IOCS or a device handler upon detection of an error. ERRC should be interrogated after each call to IOCS by the application program. Appendix E lists all the error codes for FLP-80DOS.

9-34. PBFFR. The PBFFR field is used by IOCS when assigning a physical buffer for an open logical unit. The user must not change this field.

9-35. UBFFR. The UBFFR (user buffer) field is specified by the user to direct IOCS where to locate the I/O data. This field is left unchanged by IOCS except in I/O Format 3X, in which case it is changed by IOCS to point to the last byte transferred +1. The buffer address is entered least significant byte first. The user should refer to the section regarding the type of format being used.

9-36. USIZE. The USIZE field is the user's buffer size (in

bytes), least significant byte first. In I/O Format 2X (LOGICAL BUFFER I/O), the IOCS fills the entire buffer on a read and outputs the entire buffer on a write. If the end of file is reached for format 2X on read operation before the UBFFR is filled, then USIZE is changed by IOCS to the actual number of bytes read. In I/O Format 3X (BINARY RAM IMAGE I/O), the USIZE parameter specifies the number of bytes to be saved (rounded mod-124). The user should refer to the section reqarding the type of format being used.

9-37. NREC. The NREC field tells the device handler the number of physical records to read, write or skip. This field is used by IOCS.

9-38. HSCR. The HSCR field is available to the device handler to use for scratch variables associated with logical unit.

9-39. ISCR. The ISCR is reserved for IOCS to use as scratch variables.

9-40. HOW TO USE IOCS

9-41. When a user wishes to access an I/O device via IOCS, the following procedure should be followed.

9-42. SET UP A VECTOR. The vector should be first initialized to zeros, then appropriate data should be placed into the vector. In FLP-80DOS, the default vectors 0-5 are available for use by an application program but 0 and 1 are reserved for the console device. Recall that the vectors for LUN's 0-5 already exist; their starting addresses are defined via GETVEC (See Section 13). All other LUN's require that the application program provide the vector space (48 bytes). The following fields should

be preset by the user program: LUN, DVCE, UNIT, FNAM, FEXT, VERS, and USER, if file structured device is used; RQST, FMAT, ERRA (if used) CFLGS; and UBFFR and USIZE if ASCII Line Format, Logical Buffer Format, or Binary Format is used.

1. SET IY equal to the address of the first byte of the vector.

2. OPEN the device. Insert an OPENR (open for read) or OPENW (open for write) request code into the RQST field of the vector, then call IOCS: CALL JIOCS ;the address of JIOCS is shown in Appendix F.

NOTE: The calling address of IOCS (=JIOCS) will not change in further versions of FLP-80DOS.

3. The READ/WRITE request is placed into the RQST field and IOCS is called once for each I/O operation.

4. CLOSE THE DEVICE. The CLOSE request is placed into the RQST field of the vector and IOCS is called when no more I/O is to be done. FLP-80DOS uses 04_H as end-of-file indicator for ASCII files.

5. After each call to IOCS, the ERRC field should be checked for errors. If it is zero, then no errors were encountered. Some errors are fatal or non-recoverable, such as DISK I/O ERROR. Others are merely indicators, such as END OF FILE.

Idiosyncracies of the Flexible Disk Handler are described in Section 10 this manual.

9-43. DEVICE HANDLER REQUIREMENTS

9-44. Each device handler must begin with a displacement table for each of the supported IOCS requests. If a function is supported, the displacement is added to the table address to determine the handler entry point for a given function. If a function is not supported, then IOCS generates an error code and returns to caller. The following is an example of paper tape device handler.

```
PTAPE     DEFB      3        ; The largest request code supported
          DEFB   PTOPEN-$    ; Displacement for OPENR (RQST 0)
          DEFB      0        ; OPENW is not supported (RQST 1)
          DEFB   PTCLOS-$    ; Displacement for CLOSE (RQST 2)
          DEFB   PTREAD-$    ; Displacement for READ (RQST 3)
PTOPEN                --     ; Initialize Paper Tape RDR
PTCLOS                --     ; Disable Paper Tape Reader
PTREAD                --     ; Read a Byte
                   RET
```

9-45. The first byte of the handler specifies that the largest request supported is 3. Any request code between 0 and 3 must have a zero displacement if it is not supported. When a device handler is opened, it must pass the physical buffer size back to IOCS in the BC register. If the .BIN data type is supported by a device, the handler must generate and/or strip off all non-data bytes such as sync characters and CRC. For devices that do not support REWIND, IOCS will print the following message on the console when REWIND is requested:

"REWIND XXY, ENTER C WHEN READY:"

Where XX is the device mnemonic and Y is the unit number.

NOTE I/O Device Handlers must not destroy the alternate register set or the main set of registers.

9-46. PHYSICAL I/O BUFFERS

9-47. When the user opens a file for use with I/O format 0, 1 or 2 (Byte I/O, ASCII line, or logical record I/O), then IOCS allocates a physical record buffer for the device. When the handler returns control to IOCS after an OPENR or OPENW, the BC register contains the physical record size (in bytes) for the device. IOCS then allocates that number (IF >1) of bytes and assigns a physical buffer number to PBFFR in the vector. IOCS maintains a physical buffer allocation table and can allocate up to 16 concurrent buffers.

9-48. The allocation table contains the start address for each physical buffer wich is shown in following table:

TABLE 9-5. PHYSICAL BUFFER ALLOCATION TABLE

```
BUFFR0   DEFS 2        ; Present location of I/O Buffer #0.
BUFFR1   DEFS 2        ; Present location of I/O Buffer #1.
BUFFR2   DEFS 2        ; Present location of I/O Buffer #2.
BUFFR3   DEFS 2        ; Present location of I/O Buffer #3.
BUFFR4   DEFS 2        ; Present location of I/O Buffer #4.
BUFFR5   DEFS 2        ; Present location of I/O Buffer #5.
BUFFR6   DEFS 2        ; Present location of I/O Buffer #6.
BUFFR7   DEFS 2        ; Present location of I/O Buffer #7.
BUFFR8   DEFS 2        ; Present location of I/O Buffer #8.
BUFFR9   DEFS 2        ; Present location of I/O Buffer #9.
BUFFRA   DEFS 2        ; Present location of I/O Buffer #A.
BUFFRB   DEFS 2        ; Present location of I/O Buffer #B.
BUFFRC   DEFS 2        ; Present location of I/O Buffer #C.
BUFFRD   DEFS 2        ; Present location of I/O Buffer #D.
BUFFRE   DEFS 2        ; Present location of I/O Buffer #E.
BUFFRF   DEFS 2        ; Present location of I/O Buffer #F.
```

9-49. IOCS allocates the first buffer with a buffer number of 0.

This number is placed in the PBFFR field of the VECTOR. The buffer number placed in the vector is FF_H for byte oriented devices (physical buffersize = 1).

9-50. The actual physical buffers contain the number of bytes specified by (BC) after an OPENR or OPENW plus eight bytes for deblocking and de-allocaton as follows:

```
(start of buffer)
DEFS 2  ; Size of Buffer (not including first 8 bytes)
DEFS 2  ; Temporary Buffer Pointer
DEFS 2  ; The physical record size = (BC) after OPENR or OPENW
DEFS 2  ; Last address transferred after a read
```

9-51. When a logical unit which had a physical buffer assigned to it is closed, IOCS de-allocates the buffer space and compresses the buffers, removing any holes in the buffer block.

9-52. SYSTEM INTERRUPT TABLE

9-53. The top 32 bytes in the user RAM space are reserved for the system Interrupt table. The program module DK reserves a 32 byte buffer for this purpose so the end address of OS.BIN [255] can be positioned at the top of RAM (see SYSGEN Section 15). During the system boot sequence the Monitor automatically calculates the top of RAM memory and stores that value in TOR (OFF00H). The following displacements from TOR have been reserved for system devices.

TOR DISPLACEMENT	DEVICE
5	Operating System Minimal Listener
7	LP:
9	PR:
11	PP:
13	CR:
21-31	Reserved for User Interrupt Devices

9-54. The Open routine within a device handler may use the value in TOR ($FF00_H$) and its designated displacement (see above table) to calculate the position of its interrupt vector. The open routine should place the MSB of the Interrupt vector into the I register and output the LSB to the designated PIO. The open routine should also place the address of the device interrupt service routine into the interrupt vector in the interrupt table. (See Paragraph 9-63).

9-55. IOCS MEMORY MAP

9-56. The Default Logical Unit Table, the Logical Unit Redirect table and the IOCS buffer allocation table are included in the program module IOCS. IOCS is an operating system module which is linked into OS.BIN [255] during the SYSGEN procedure (See Section 15). IOCS physical I/O buffers are allocated dynamically downward from the operating system as outlined in figure 9-1.

9-57. The Logical Unit Redirect Table contains the assignment of device handlers to logical unit numbers by the Monitor ASSIGN command. Each item in the table is 15 bytes long. These 15 bytes correspond exactly with the first 15 bytes of the IOCS vector (See Section 9-4). Up to 6 items can be placed into the redirect table. The redirect table is terminated by a logical unit number (1st byte of an item) of FF_H (Recall that this is the Logical Unit Number which cannot be redirected).

9-58. Bottom of Allocated RAM (BALR) is a pointer to the bottom of the system routines less any physical buffers allocated (dynamically) by IOCS. The BALR pointer is maintained in scratchpad locations $FF02-FF03_H$ and is updated by IOCS as it allocates and de-allocates physical buffers.

FIGURE 9-1. IOCS MEMORY MAP

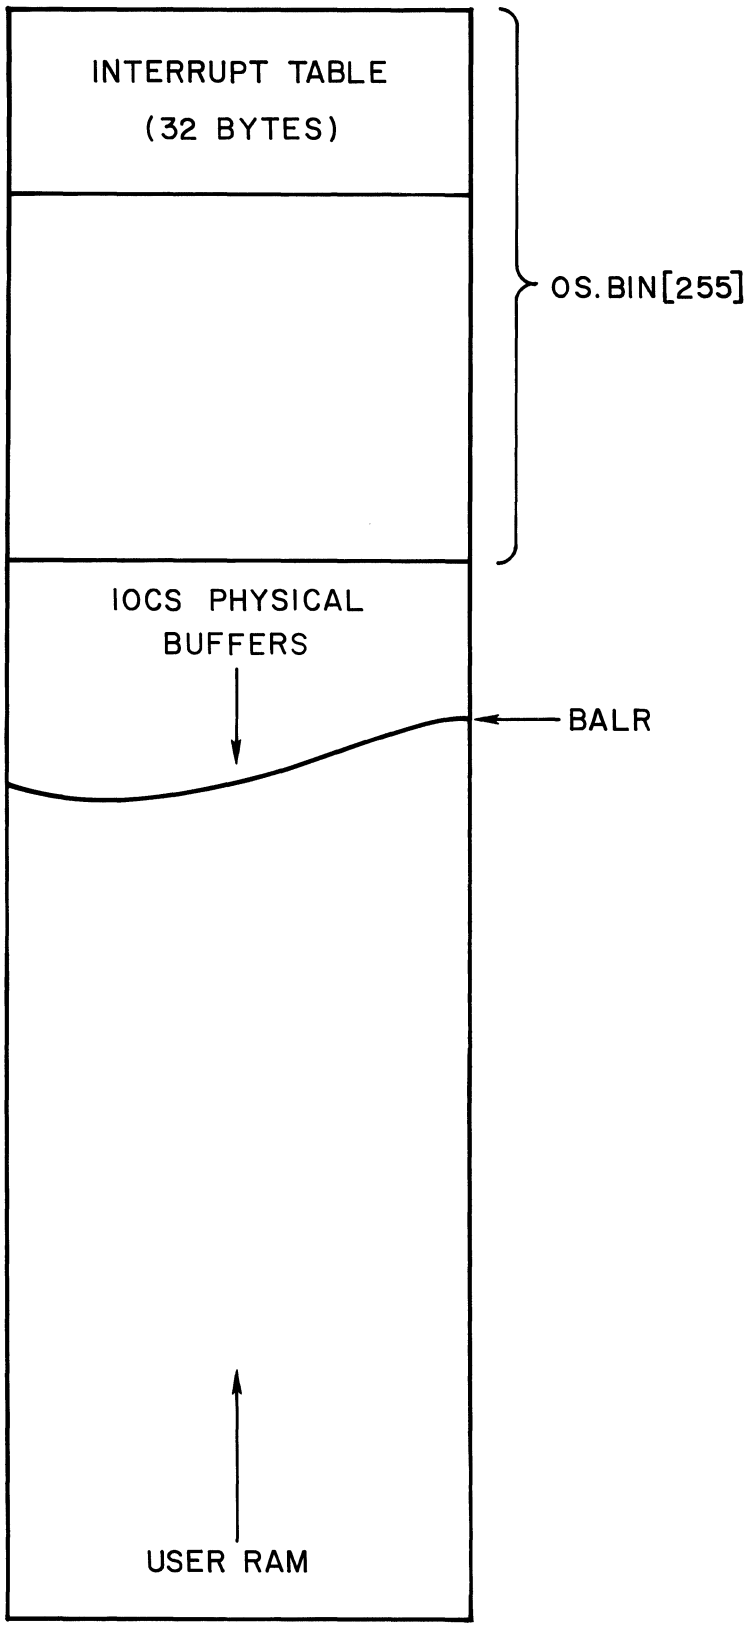

9-59. WRITING A DEVICE HANDLER

9-60. CHARACTER-ORIENTED DEVICES

9-61. Introduction. Device handlers for character oriented devices are rather straightforward in their design. The paper tape reader for FLP-80DOS is included in Section 12 of this manual. The following discussion examines the design in detail.

9-62. Design Criteria. The handler is to input one character at a time. It will be interrupt driven. Control and I/O will be done via a Z80 PIO, which takes two sequential port addresses (in this case, $D0_H$ for control and $D1_H$ for data). The control port number is contained in a byte in the handler.

9-63. Open Process.

1. Disable interrupts while the Z80 PIO is programmed. The reader is directed to the "Z80 PIO Technical Manual" for details of programming the device.
2. Access the control port number. The least significant bit is used as a ready flag.
3. Access item number in Interrupt Pointer Table (C-reg = 0, the first item).
4. Access the interrupt handler address (RINT).
5. This address is place into the first items of the Interrupt Pointer Table.
6. Program the Z80 PIO for proper operation.
7. Initialize the status bit to zero (not ready).
8. Program the interrupt handler vector into Z80 PIO (LS byte) and into the Z80 I-register (MS byte). Z80 Interrupt Mode 3 is used throughout FLP-80DOS. The reader is referred to the "Z80 CPU Technical Manual" for further discussion.

9. Set up a physical buffer size of one for one byte transfers (BC-reg = 1).
10. Perform first I/O operation to start reader.
11. Enable interrupts and return to caller.

9-64. Close Process. No operation is performed; return to caller.

9-65. Read Process.

1. Access port number and strip off status bit (bit 0).
2. Set up an initial time out of about 250 msec.
3. Enable interrupts.
4. Check the status flag. The status flag is set in the RINT routine when an interrupt occurs.
5. If the status flag is not set (not ready), then check for immediate return. If immediate return is set, then return to the caller (IOCS) without performing any input operation. Otherwise check for time out. If time out occurs, call the system Error Handler(EH) (Described in Section 13) with the time out error code in the A-reg. Then reinitialize the timeout counter and loop on status. Thus the time out error message will be output periodically until the system is reset or the device goes ready.
6. If the status flag is set (device ready, data is available), then read the data from the data port. Reset the status flag and the immediate return flag. Complement the data and return it in the A - register. The complement operation is dependent upon the interface to the device.

9-66. RECORD ORIENTED DEVICES.

9-67. Introduction. Device Handlers which operate on a physical record basis must meet additional requirements for IOCS. The handler must place bytes directly into the IOCS buffer rather than passing them via the A-register. The handler must also properly process multiple record requests by IOCS. An optional Card Reader Driver is shown in Section 12 of this manual. The Card Reader Driver is supplied on the FLP-80DOS diskette in source and relocatable object format, but it is not integrated into the system. The following discussion examines the design in detail.

9-68. Design Criteria. The handler is to input one card at a time. The physical buffer size is 80 bytes plus 2 more for carriage return and line feed. Control and I/O will be done via a Z80 PIO which takes 4 sequential port addresses (starting at 69_H in this case). The first port number is taken from a byte in the handler. The handler uses interrupts where each interrupt corresponds to one card column read. Thus, after card pick, the handler must process 80 fast, sequential interrupts. The handler must read as many cards as are requested by IOCS.

9-69. Open Process. Interrupts are disabled. The card reader interrupt handler address (CRDRDR) is placed into the Interrupt Pointer Table. The least significant byte of the interrupt vector is programmed into the Z80 PIO. The most significant byte is loaded into the Z80 I-register (Interrupt Mode 3 is used). The PIO is programmed for handshake (See the Z80 PIO Technical Manual for full details). A physical buffer size of 82 is returned to IOCS via the BC-register.

9-70. Close Process. No operation is performed; return to caller.

9-71. Read Process.

1. The number of records (NREC) being requested by IOCS

is accessed and saved in the handler scratch area (HSCR) of the IOCS vector. Then NREC is set to zero. NREC becomes the counter of the actual number of records (cards) read by the handler.

2. The IOCS physical buffer address is accessed. This is the starting address where the handler is to place data which is read. Recall that this buffer was dynamically allocated by IOCS when the device was opened.
3. The card reader is tested for ready condition. If it is not ready after 4 seconds, then a time out error message is issued. The time out is reprogrammed and loop on status. Note that immediate return is allowed here (IRET bit).
4. When the card reader goes ready, PIO local interrupts are enabled and a card pick is forced. CPU interrupts are enabled.
5. A loop is entered until 80 columns have been read. The interrupt handler (CRDRDR) has the responsibility of reading the data and incrementing the column counter (A-reg).
6. Interrupt Handler. (CRDRDR). The interrupt handler reads data from the PIO ports after each interrupt. One interrupt corresponds to one card column. The data is converted from hollerith image to ASCII via the HOLTAB table. The data is then stored into the physical buffer, pointed to by the DE register. The DE-register is then incremented, as is the column counter (A-register). Return from interrupt is done after reenabling interrupts.
7. After all 80 columns of a card have been read CPU and local PIO interrupts are disabled. The number of records (NREC) is incremented.

8. The first column of the card is accessed in the physical buffer. If the byte is EOT (ASCII 04_H, punch 9-7), then this is the end of file indicator. Upon end of file, the end of file error code is placed in the IOCS vector, the buffer pointer is updated, and return is made to caller.
9. If end of file was not found, then trailing blanks are compressed in the physical buffer. Carriage return and line feed are appended to the card image.
10. The number of records read is checked. If all have been read, then the IOCS buffer pointer is updated and return to caller. Otherwise, another card pick and read is initiated.

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:EXAM  .

                 0001 ;
                 0002 ; THIS PROGRAM IS TO DEMONSTRATE SOME OF THE USES
                 0003 ; OF IOCS. THE PROGRAM READS A LINE OF TEXT FROM
                 0004 ; A FILE ON DISK UNIT 0 IN BYTE I/O FORMAT. A COUNTER
                 0005 ; IS KEPT TO IDENTIFY EACH LINE AND IS PLACED AT THE
                 0006 ; BEGINNING OF EACH LINE. THE NEW LINE WITH THE LINE
                 0007 ; NUMBER IS THEN OUTPUT TO ANOTHER FILE ON DISK UNIT
                 0008 ; 0 IN ASCII LINE FORMAT. THE FILE BEING READ IS
                 0009 ; CALLED 'PROGRM.INP'. THE NEW FILE IS CALLED 'PROGRM
                 0010 ; .OUT'. THE USER MAY USE THIS PROGRAM AS A GUIDE TO
                 0011 ; SETTING UP VECTORS AND FOR USING IOCS TO PERFORM
                 0012 ; VARIOUS FUNCTIONS. THE PROGRAM USES GLOBAL REF-
                 0013 ; RENCES AND MUST BE LINKED WITH SYSLNK.OBJ (SHIPPED
                 0014 ; ON THE SYSTEM DISKETTE).
                 0015 ;
                 0016         GLOBAL  JTASK
                 0017         GLOBAL  JIOCS
                 0018         GLOBAL  PTXT
                 0019 ;
                 0020 ; THIS SECTION CLEARS THE INPUT AND OUTPUT VECTORS
                 0021 ;
'0000  219A01'   0022 START   LD      HL,INVEC        ;HL -> INPUT VECTOR
'0003  119A01'   0023         LD      DE,INVEC
'0006  13        0024         INC     DE              ;DE -> INPUT VEC + 1
'0007  AF        0025         XOR     A
'0008  77        0026         LD      (HL),A          ;LOAD INITIAL 0 IN VECTOR
'0009  015F00    0027         LD      BC,95           ;SET UP LOOP COUNT TO ...
'000C  EDB0      0028         LDIR                    ;...ZERO BOTH VECTORS.
                 0029 ;
                 0030 ; THIS SECTION STUFFS THE INPUT VECTOR AND PREPARES
                 0031 ; TO OPEN THE INPUT FILE FOR READING.
                 0032 ;
'000E  FD219A01' 0033         LD      IY,INVEC        ;IY -> VECTOR ADDRESS
'0012  FD3600FF  0034         LD      (IY+0),0FFH     ;SET LUN = FF
'0016  FD360144  0035         LD      (IY+1),'D'      ;SET DEVICE TO DK:
'001A  FD36024B  0036         LD      (IY+2),'K'
'001E  FD360330  0037         LD      (IY+3),'0'      ;SET UNIT TO 0
'0022  FD360450  0038         LD      (IY+4),'P'      ;SET FILE NAME TO 'PROGRM'
'0026  FD360552  0039         LD      (IY+5),'R'
'002A  FD36064F  0040         LD      (IY+6),'O'
'002E  FD360747  0041         LD      (IY+7),'G'
'0032  FD360852  0042         LD      (IY+8),'R'
'0036  FD36094D  0043         LD      (IY+9),'M'
'003A  FD360A49  0044         LD      (IY+10),'I'     ;SET EXT TO 'INP'
'003E  FD360B4E  0045         LD      (IY+11),'N'
'0042  FD360C50  0046         LD      (IY+12),'P'
'0046  FD360D00  0047         LD      (IY+13),0       ;SET VERSION TO 0
'004A  FD360E01  0048         LD      (IY+14),1       ;SET USER # TO 1
'004E  FD360F00  0049         LD      (IY+15),0       ;REQUEST TO OPEN FOR READ
'0052  FD361004  0050         LD      (IY+16),4       ;FORMAT TO BYTE I/O, 4 REC B
'0056  FD361300  0051         LD      (IY+19),0       ;CLEAR ERROR RETURN ADDR
'005A  FD361400  0052         LD      (IY+20),0
'005E  FD361510  0053         LD      (IY+21),10H     ;SET CFLAGS TO PRINT ERRORS
'0062  FD361600  0054         LD      (IY+22),0       ;CLEAR STATUS FLAGS
'0066  FD361B7C  0055         LD      (IY+27),07CH    ;SET USIZE TO 124 (7CH)
'006A  FD361C00  0056         LD      (IY+28),0
'006E  CDFFFF    0057         CALL    JIOCS           ;OPEN INPUT FILE
'0071  FD7E17    0058         LD      A,(IY+23)       ;TEST FOR ERRORS
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT
'0074  A7        0059         AND     A
'0075  C23F01'   0060         JP      NZ,ERMSG        ;IF FOUND, PRINT MSG.
                 0061 ;
                 0062 ; THIS SECTION STUFFS THE OUTPUT VECTOR AND PREPARES
                 0063 ; TO OPEN THE OUTPUT FILE FOR WRITE.
'0078  FD21CA01' 0064         LD      IY,OUTVEC       ;IY -> VECTOR ADDRESS
'007C  FD3600FF  0065         LD      (IY+0),0FFH     ;SET LUN = FF
'0080  FD360144  0066         LD      (IY+1),'D'      ;SET DEVICE TO DK:
'0084  FD36024B  0067         LD      (IY+2),'K'
'0088  FD360330  0068         LD      (IY+3),'0'      ;SET UNIT TO 0
'008C  FD360450  0069         LD      (IY+4),'P'      ;SET FILE NAME TO 'PROGRM'
'0090  FD360552  0070         LD      (IY+5),'R'
'0094  FD36064F  0071         LD      (IY+6),'O'
'0098  FD360747  0072         LD      (IY+7),'G'
'009C  FD360852  0073         LD      (IY+8),'R'
'00A0  FD36094D  0074         LD      (IY+9),'M'
'00A4  FD360A4F  0075         LD      (IY+10),'O'     ;SET EXT TO 'OUT'
'00A8  FD360B55  0076         LD      (IY+11),'U'
'00AC  FD360C54  0077         LD      (IY+12),'T'
'00B0  FD360D00  0078         LD      (IY+13),0       ;SET VERSION TO 0
'00B4  FD360E01  0079         LD      (IY+14),1       ;SET USER # TO 1
'00B8  FD360F01  0080         LD      (IY+15),1       ;REQUEST TO OPEN FOR READ
'00BC  FD361014  0081         LD      (IY+16),14H     ;FORMAT=ASCII LINE, 4 REC BU
'00C0  FD361300  0082         LD      (IY+19),0       ;CLEAR ERROR RETURN ADDR
'00C4  FD361400  0083         LD      (IY+20),0
'00C8  FD361510  0084         LD      (IY+21),10H     ;SET CFLAGS TO PRINT ERRORS
'00CC  FD361600  0085         LD      (IY+22),0       ;CLEAR STATUS FLAGS
'00D0  FD361B7C  0086         LD      (IY+27),07CH    ;SET USIZE TO 124 (7CH)
'00D4  FD361C00  0087         LD      (IY+28),0
'00D8  CD6F00'   0088         CALL    JIOCS           ;OPEN INPUT FILE
'00DB  FD7E17    0089         LD      A,(IY+23)       ;TEST FOR ERRORS
'00DE  A7        0090         AND     A
'00DF  C23F01'   0091         JP      NZ,ERMSG        ;IF FOUND, PRINT MSG.
                 0092 ;
                 0093 ; THIS SECTION READS DATA FROM THE INPUT FILE,
                 0094 ; ADDS THE LINE # TO THE BEGINNING OF THE LINE,
                 0095 ; AND OUTPUTS THE NEW LINE TO THE OUTPUT FILE.
                 0096 ;
'00E2  FD219A01' 0097 READ    LD      IY,INVEC        ;IY -> INPUT VECTOR
'00E6  FD360F03  0098         LD      (IY+15),3       ;REQUEST FOR READ
'00EA  21FD01'   0099         LD      HL,INBUF        ;HL -> BUFFER
'00ED  CDD900'   0100 INLOOP  CALL    JIOCS           ;READ 1 BYTE FROM FILE
'00F0  57        0101         LD      D,A             ;STORE CHAR IN D REG
'00F1  FD7E17    0102         LD      A,(IY+23)       ;TEST FOR ERROR
'00F4  A7        0103         AND     A
'00F5  C23F01'   0104         JP      NZ,ERMSG
'00F8  7A        0105         LD      A,D             ;RESTORE CHAR IN A
'00F9  FE04      0106         CP      04H             ;TEST FOR END OF FILE
'00FB  CA4701'   0107         JP      Z,EXIT          ;EXIT IF FOUND.
'00FE  77        0108         LD      (HL),A          ;STORE CHAR IN BUFFER
'00FF  23        0109         INC     HL              ;INC BUFFER POINTER
'0100  FE0A      0110         CP      0AH             ;TEST FOR LF
'0102  20E9      0111         JR      NZ,INLOOP-$     ;NO, CONTINUE READING
                 0112 ;
'0104  3A4E02'   0113         LD      A,(LINE)        ;GET CURRENT LINE NUMBER
'0107  3C        0114         INC     A               ;INC NUMBER
'0108  324E02'   0115         LD      (LINE),A        ;STORE NEW NUMBER
'010B  21FA01'   0116         LD      HL,OUTBUF       ;HL -> OUTPUT BUFFER
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT

'010E  F5        0117          PUSH    AF
'010F  0F        0118          RRCA                    ;GET UPPER DIGIT OF LINE #
'0110  0F        0119          RRCA
'0111  0F        0120          RRCA
'0112  0F        0121          RRCA
'0113  CD7201'   0122          CALL    ASCII           ;CONVERT DIGIT TO ASCII
'0116  77        0123          LD      (HL),A          ;STORE ASCII CHAR IN BUFFER
'0117  23        0124          INC     HL              ;INC BUFFER POINTER
'0118  F1        0125          POP     AF              ;GET LOWER DIGIT
'0119  CD7201'   0126          CALL    ASCII           ;CONVERT TO ASCII
'011C  77        0127          LD      (HL),A          ;STORE ASCII CHAR IN BUFFER
'011D  23        0128          INC     HL
'011E  3E20      0129          LD      A,' '           ;STORE SPACE AFTER LINE #
'0120  77        0130          LD      (HL),A
                 0131 ;
'0121  FD21CA01' 0132          LD      IY,OUTVEC       ;IY -> OUTPUT VECTOR
'0125  21FA01'   0133          LD      HL,OUTBUF
'0128  FD7519    0134          LD      (IY+25),L       ;STORE ADDRESS OF BUFFER...
'012B  FD741A    0135          LD      (IY+26),H       ;...IN UBFFR FOR WRITING.
'012E  FD360F04  0136          LD      (IY+15),04      ;
'0132  FD361500  0137          LD      (IY+21),0       ;TURN OFF ERROR PRINT
'0136  CDEE00'   0138          CALL    JIOCS           ;OUTPUT NEW LINE
'0139  FD7E17    0139          LD      A,(IY+23)       ;TEST FOR ERROR
'013C  A7        0140          AND     A
'013D  28A3      0141          JR      Z,READ-$        ;NO ERROR, GET NEXT LINE
                 0142 ;
                 0143 ; THIS SECTION PRINTS AN ERROR MESSAGE
                 0144 ; AND EXITS AFTER CLOSING THE FILES.
                 0145 ;
'013F  217C01'   0146 ERMSG   LD      HL,MSG          ;HL -> MESSAGE TO PRINT
'0142  1E00      0147          LD      E,0             ;SET FOR CONSOLE DEVICE
'0144  CDFFFF    0148          CALL    PTXT            ;PRINT MESSAGE
'0147  FD219A01' 0149 EXIT    LD      IY,INVEC        ;IY -> INPUT VECTOR
'014B  FD360F02  0150          LD      (IY+15),2       ;REQUEST TO CLOSE INPUT
'014F  CD3701'   0151          CALL    JIOCS           ;CLOSE FILE
'0152  FD21CA01' 0152          LD      IY,OUTVEC       ;IY -> OUTPUT VECTOR
'0156  217B01'   0153          LD      HL,FILEND
'0159  FD7519    0154          LD      (IY+25),L       ;PREPARE TO WRITE 04H AT...
'015C  FD741A    0155          LD      (IY+26),H       ;...END OF OUTPUT FILE.
'015F  FD360F04  0156          LD      (IY+15),4       ;REQUEST TO WRITE
'0163  CD5001'   0157          CALL    JIOCS           ;OUTPUT 04
'0166  FD360F02  0158          LD      (IY+15),2       ;CLOSE REQUEST
'016A  CD6401'   0159          CALL    JIOCS           ;CLOSE OUPTUT FILE
'016D  3E01      0160          LD      A,1
'016F  CDFFFF    0161          CALL    JTASK           ;RETURN TO MONITOR
                 0162 ;
                 0163 ; ROUTINE TO CONVERT 4 BIT HEX INTO ASCII
                 0164 ;
'0172  E60F      0165 ASCII    AND     0FH
'0174  C690      0166          ADD     A,90H
'0176  27        0167          DAA
'0177  CE40      0168          ADC     A,40H
'0179  27        0169          DAA
'017A  C9        0170          RET
                 0171 ;
'017B  04        0172 FILEND   DEFB    04H
'017C  0D0A      0173 MSG      DEFW    0A0DH
'017E  4552524F  0174          DEFM    'ERROR FOUND DURNG EXECUTION'
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT

       5220464F
       554E4420
       4455524E
       47204558
       45435554
       494F4E
'0199  03        0175          DEFB    03H
                 0176 ;
'>019A           0177 INVEC    DEFS    48
'>01CA           0178 OUTVEC   DEFS    48
'>01FA           0179 OUTBUF   DEFS    3
'>01FD           0180 INBUF    DEFS    80
'024D  00        0181          DEFB    0
'024E  00        0182 LINE     DEFB    0
                 0183          END

ERRORS=0000
```

SECTION 10

FLOPPY DISK HANDLER (FDH)

10-1. INTRODUCTION

10-2. All calls for communication with the disk will be through the Floppy Disk Handler. Because a disk is not a character oriented device, all calls will be for a file whose minimum length is 1 record of 124 bytes. By maintaining a directory in the first two tracks of the disk, file operations may take place independent of the physical location of the data on the disk. The Disk Handler System not only provides file reading and writing capability but special pointer manipulation, record deletion and insertion, and directory manipulations such as file creation, renaming, and deletion. The FDH outlined here can serve as a building block for a file maintenance system, a disk based Assembler and Text Editor, BASIC and other high level languages.

10-3. COMMUNICATION

10-4. The FDH can be communicated with by a calling vector (equivalent to the IOCS calling vector-pointed to by IY) which contains all parameter information with each parameter having a fixed displacement from the vector pointer. This vector has been appended to the I/O Control System vector. The purpose of the IOCS is to generalize all calls to the peripheral devices so as to dissolve any device dependence of data structure. However, because the disk is a file oriented device as opposed to being a character oriented device, much additional calling information is required. The required entries into the 48 byte IOCS defined vector are listed as follows.

10-5. DOS RELATED VECTOR PARAMETERS

FIELD	#BYTES	OFFSET	NAME	DESCRIPTION	FORM
3	1	(IY+3)	UNIT	UNIT number	(ASCII)
4	6	(IY+4)	FNAM	Filename	(ASCII)
5	3	(IY+10)	FEXT	File extension	(ASCII)
6	1	(IY+13)	VERS	File Version	(Binary)
7	1	(IY+14)	USER	User number	(Binary)
8	1	(IY+15)	RQST	Request Code	(Binary)
14	1	(IY+23)	ERRC	Error Code	(Binary)
16	2	(IY+25)	UBFFR	User's Buffer Address	(Binary)
18	1	(IY+29)	NREC	Number of records to be transferred	(Binary)
19	1	(IY+30)	SCTR	Current sector pointer	(Binary)
20	1	(IY+31)	TRCK	Current track pointer	(Binary)
21	1	(IY+32)	LSCTR	Last Sector	(Binary)
22	1	(IY+33)	LTRK	Last Track	(Binary)

23	1	(IY+34)	NSCTR	Next Sector	(Binary)
24	1	(IY+35)	NTRK	Next Track	(Binary)

10-6. CALLING CONVENTIONS

10-7. There are three ways for a user to communicate with the Disk System. The user may make calls through the IOCS defined general purpose request codes 0-7H. These request codes are converted to a set of Macros of request codes made up from the complete set of DOS request codes. This permits the disk system to be used as if it were any standard character type device. The second way to communicate is through the complete set of disk request codes. This allows use of more complex but more powerful requests that would be used by sophisticated environments such as the Text Editor. The third communication technique is through direct disk controller commands. See Section 11 for more information.

10-8. GENERAL PURPOSE IOCS DISK MACRO REQUESTS

```
CALLING SEQUENCE - LD     A,0     ;FDH JTASK CODE
                   CALL   JTASK   ;CALL FDH VIA JTASK
```

RQST CODE	NAME	DESCRIPTION
02H	CLOSE	The Close command will store off all linkage information into the directory and update the sector and track maps of the diskette containing the file.
03H	READ	Read Next N Records - Reads the next

RQST CODE	NAME	DESCRIPTION (CONT.)
		N records, where N is in (IY+29), into memory starting at transfer address given (UBFFR). The pointer will be positioned on the last record read and if error exit is required, NREC contains the actual number of records transferred.
04H	WRITE	Insert N Records - Allocates and writes N records from memory starting at the Data Transfer Address, (UBFFR) with the first record written after the current one. The pointer will be left positioned at the last record written.
05H	REWIND	The Rewind command positions the pointer back to the directory entry for the file. All records will now be written before any existing records, or the first record may now be read.
06H	INIT	Initialize - Reads sector and track maps from all disks which are ready and clears active file table of the FDH.
07H	ERASE	Erase File - Writes reformatted directory entry over the entry for the file, de-allocates all re-

RQST CODE	NAME	DESCRIPTION (CONT.)
		cords in the file, removes the active file entry from the table, and rewrites the updated sector map. Any records following one not readable will not be reallocated. The file must be opened before it can be erased.

10-9. COMPLETE DOS REQUEST CODES

REQUEST CODE	DESCRIPTION
18H	Initialize - Reads sector and track maps from all diskettes which are ready and clears active file table of the FDH. This is equivalent to request code 06H.
1CH	Open File - Finds file in directory and creates an entry in the active file table; pointer remains on the directory but the number of records in file is placed in NREC. If file has a BIN extension, UBFFR is set to the binary load address.
1EH	Create File - Creates directory entry for a file and creates entry in active file table. Error is returned if file already exists and the operation is aborted. Pointer is positioned to the directory entry for the file.
20H	Close File - Writes updated directory entry back to the Disk Directory, removes the active file table entry, and rewrites the updated sector map. This is equivalent to request code 02H.
22H	Erase File - Writes reformatted directory entry over the entry for the file, de-allocates all records in the file, removes the active file entry from the table, and rewrites the updated sector map. Any records following one not readable will not be reallocated. This is equivalent to re-

COMPLETE DOS REQUEST CODES (CONT.)

REQUEST CODE	OPERATIONS
	quest code 07H.
24H	Rename File - Takes a second filename and filetype starting in the second parameter vector (IY+48) and verifies that it does not exist or takes error exit. The directory entry for the first filename is replaced by the one for the second. Two contiguous I/O vectors must be defined. The first is a complete 48 byte I/O vector and contains the current name of the file (which must be open). The second contains the new name of the file and may consist of only the first 15 bytes of the standard I/O vector (contains only the new filename).
26H	Rewind File - Repositions the pointer for the file to the directory entry with the next record pointing to the first record to be read by Read Next Record. This is equivalent to request code 05H.
28H	Read Next N Records - Reads the next N records, where N is in (IY+29), into memory starting at transfer address given in (UBFFR). The pointer will be positioned on the last record read and if error exit is required, NREC contains actual number of records transferred. This is equivalent to request code 03H.

COMPLETE DOS REQUEST CODES (CONT.)

REQUEST CODE	OPERATIONS
2AH	Read Current Record - Reads the single current record into memory starting at the transfer address. The pointer will not be moved.
2CH	Read Previous Record - Reads the single record previous to the current one into memory starting at the transfer address given. The pointer will be positioned on this record.
2EH	Skip Forward N Records - Moves pointer N records forward but no data will be transferred.
30H	Skip Backward N Records - Moves the pointer N records backward but no data will be transferred.
32H	Replace (Rewrite) Current Record - Rewrites the single current record from memory starting at the Data Transfer Address. The pointer is not moved.
34H	Insert N Records - Allocates and writes N records from memory starting at the Data Transfer Address, (UBFFR) with the first record coming after the current one. The pointer will be left positioned at the last record written. This is equivalent to request code 04H.
36H	Delete N Records - The current record and the next N-1 records are de-allocated and removed from the file.

FIGURE 10-1. EFFECTS OF FDH COMMANDS

REQUEST	FILENAME, EXT, VERS, USER	NREC	UBFFR	SCTR/TRK
00H OPENR	-	File length	Load Address	Directory
01H OPENW	-	0	-	Directory
02H CLOSE	-	0	-	Unknown
03H READ	-	Number sectors read	(UBFFR) + N * 124	Last sector read
04H WRITE	-	Number sectors written	(UBFFR) + + N * 124	Last sector written
05H REWIND	-	0	-	Directory
06H INIT	-	0	-	Unknown
07H ERASE	-	File length	-	Unknown, File closed
1CH OPEN	-	File length	Load address	Directory
1EH CREATE	-	0	-	Directory
24H RENAME	Moved from vector following this one.	0	-	Directory
2AH RDCURR	-	0	(UBFFR)+124	-
2CH RDPRVR	-	1	(UBFFR)+124	Previous sector
2EH SKIPFWD	-	Number successful skips	-	Last sector read
30H SKIPBKD	-	Number successful skips	-	Last sector read
32H RPCURR	-	0	(UBFFR)+124	-
36H DELETE	-	Number records deleted	-	Previous sector
3CH JUMP	-	0	-	-
3EH DISKID	Disk id (11 characters)	0	-	-
40H STATUS	Sectors available, used and bad (2 bytes each)	0	-	-

3CH — Jump - Go to sector/track defined by SCTR (IY+30) and TRK (IY+31). No data is transferred.

3EH — Read Disk Id - Loads disk name (11 bytes) into filename, extension and version fields of the I/O vector.

40H — Read Status - Loads available, used and bad sector counts into filename field of the vector. 2 bytes each (total of 6 bytes).

10-10. ERROR RETURN

10-11. The error parameter is in (IY+23) and is returned at the end of a DOS operation the contents of (IY+23) is also in the accumulator. A 0 return indicates that no error has occurred. The error return codes are:

ERROR CODE Bits 0-5	INTERPRETATION
01H	Invalid Operation - A request word was specified which is not a valid DOS request.
02H	Duplicate File - An attempt was made to create a directory entry for a file that already exists. Can occur only on create or rename. In the case of OPENW, the file is opened but this error is reported only as a flag.
03H	Active File Table Full - An attempt was made to insert another entry in the active file table when it is full. Can occur only on open or create. A maximum of 7 files may be open at any time.

ERROR CODE	INTERPRETATION
	name.
05H	Directory Full - There is no more space to insert another directory entry.
06H	Write Protect - Diskette is write protected and an attempt has been made to write on it.
08H	File Not Open - An attempt was made to close or perform some record operation on a file which had not been opened. Can occur on any operation except initialize, open, or create.
09H	End of File - An attempt was made to advance the pointer beyond the last record in the file. The error can occur on any read, delete or skip operation. In the case of delete it indicates an attempted delete operation on the directory.
0AH	Disk Error - A disk I/O error occurred during the operation. Data may have been lost. Can occur on any operation except rewind.
0BH	Disk Full - Diskette is full and will not allow the allocation of another record. Can occur only on insert. The number of records successfully transferred is left in NREC. The file must be explictly closed or erased

ERROR CODE	INTERPRETATION
OCH	Pointer Error - The pointers read do not agree with the next or previous record. Can occur on any record operation except rewind. Pointer errors occur because a sector is not readable or because an application program has written on a disk without intializing the handler first, or two diskettes were used with the same Disk ID.
ODH	Directory or map transfer error. A read or write error occurred during operations involving the disk directory or sector and track maps. If operation occurred during a close or erase, directory or maps could be destroyed.
OEH	File Already Open - An attempt was made to open or create a file which is currently active.
OFH	Disk Not Ready - Can occur on any operation when a diskette is not fully inserted and door closed.
10H	Wrong Disk - A file is being accessed on a disk whose ID is different from the one currently in memory. This can occur if disks are changed during operations without initializing. Can occur only on close, open and erase. Error can be avoided by initializing diskette before operations begin.
11H	Non-Existent Disk - A unit number has been specified which is not supported by the FDH. Typically, units DK2 or DK3. See Section 15 for details on how to SYSGEN a system to handle more

than two disk drives.

1AH — Beginning Of File - An attempt was made to move the pointer backwards past the beginning of the file. Can occur on read previous record, skip backward, read current record, or rewrite current record.

1BH — Invalid drive, track, or sector. Controller has received invalid drive number, or sector and track out of normal range. Can occur on jump or as a result of some fatal FDH error.

1CH — Controller not able to locate track during seek, read, or write operation.

1DH — Sector not found - Sector address marks not readable.

1EH — CRC Operation - incorrect data has been flagged by CRC check during reading.

20H — Data lost - hardware problem causing data overrun in reading or writing.

10-12. DIRECTORY

10-13. Associated with each diskette is a 4K block of storage divided into 32 sectors which contain the Directory information: track 0, sector 1-26, track 1, sector 1-6. Each sector contains 6 entries of 20 bytes/entry. Each file name will be entered into the Directory or accessed from the Directory by a hash function

for the Filename. This facilitates searches for Directory entries and reduces RAM requirements for the Directory buffer. The format for each Directory entry is the following:

BYTE	CONTENTS
0-5	Filename, left justified, blank filled
6-8	Extension
9	Version - Reserved by Mostek for future use
10	User
11	Key - Reserved by Mostek for future use
12-13	Number of records in file
14	Sector - Location for first record in file
15	Track
16	Sector - Location for last record in file
17	Track
18	LSB - Address for Load Location for Binary File,
19	MSB - or file-date storage if non-Binary File

Each file is composed of one or more records with each record containing trailer information consisting of a forward and backward pointer to locate the next and preceeding records respectively. A null pointer (FFH) is used to indicate no next record or no previous record.

10-14. DISK FORMAT

10-15. Should any of the file structures become disjoint by extended periods of erasing and inserting of new and different length files, the operation of backing up a disk (copying) will optimize the actual file structure on the new disk. The FDH treats the disk as a continuous string of 1964 sectors. Every other sector is written on each track and a 5 sector shift is used between starting sectors of contiguous tracks to allow for

head motion. This allows a complete track to be read or written in 2.2 revolutions. The sector allocator looks for the first string of available sectors which is large enough for the file being stored (defined by NREC) when inserts are done.

FIGURE 10-2. FLP-80DOS V2.1 DISKETTE FORMAT

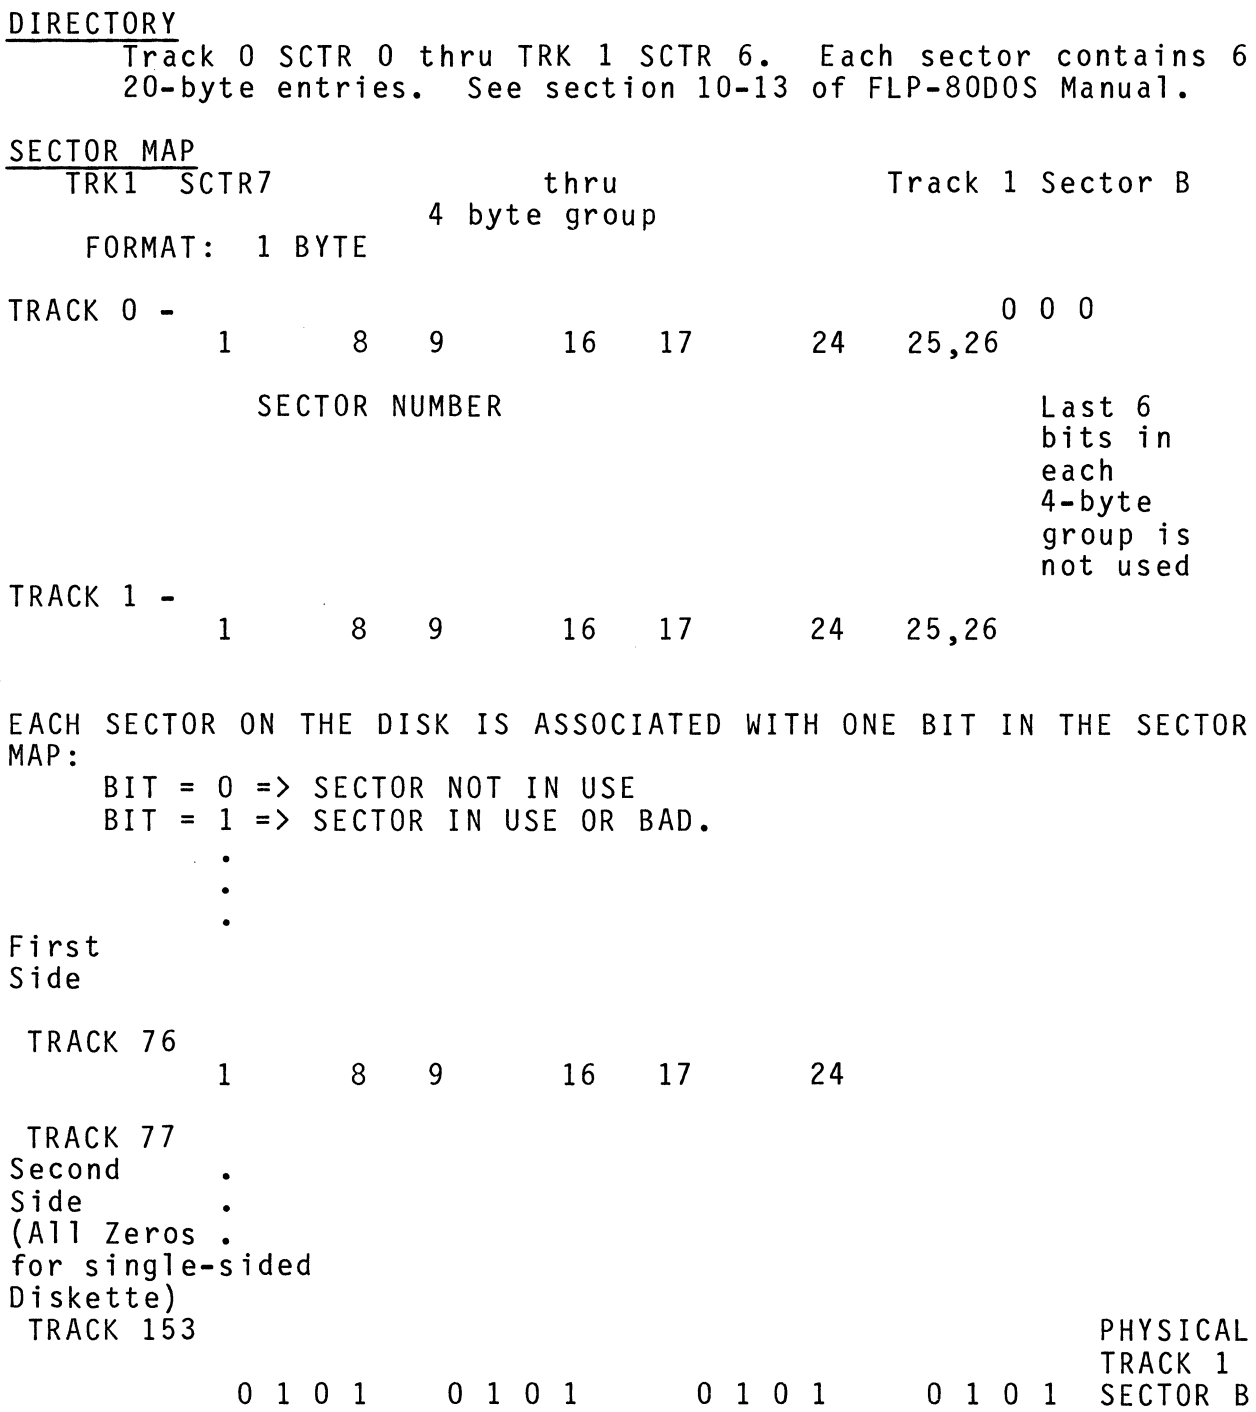
DIRECTORY
Track 0 SCTR 0 thru TRK 1 SCTR 6. Each sector contains 6 20-byte entries. See section 10-13 of FLP-80DOS Manual.
SECTOR MAP
TRK1 SCTR7
thru
Track 1 Sector B
4 byte group
FORMAT: 1 BYTE
TRACK 0 -
0 0 0
1 8 9 16 17 24 25,26
SECTOR NUMBER
Last 6 bits in each 4-byte group is not used
TRACK 1 -
1 8 9 16 17 24 25,26
EACH SECTOR ON THE DISK IS ASSOCIATED WITH ONE BIT IN THE SECTOR MAP:
BIT = 0 => SECTOR NOT IN USE
BIT = 1 => SECTOR IN USE OR BAD.
First Side
TRACK 76
1 8 9 16 17 24
TRACK 77
Second Side
(All Zeros for single-sided Diskette)
TRACK 153
PHYSICAL TRACK 1 SECTOR B
0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1

Last 4 bytes of TRK 1 SECTOR B is all "11"s. The "11" pattern is not a required pattern.

NAME OF DISKETTE AND SPACE ALLOCATION

TRACK 1 SECTOR C

First 73 bytes (bytes 0 thru 72) of TRK1 SCTR C are "11'S.

Diskette name is 11 sequential ASCII bytes starting in byte 73.

Available space on disk is number of sectors. Quantity is located in two hex bytes, least significant byte first, in bytes 84 & 85.

Used space is in bytes 86 & 87, same format.

Number of bad sectors is in bytes 88 & 89, same format.

Diskette number is in bytes 90 & 91 (random number given by the system).

The rest of sector C is not used.

DATA (FILES)

Data begins in TRK1 Sector D.

Double sided disk uses same format.

Track 77 is on second side opposite Track 0, Track 153 is on second side opposite track 76.

10-17. SECTOR AND TRACK FORMATS

10-18. The sector map is stored in track-sector location 1-7 through 1-B. Each bit of each byte in the sector map represents one sector. A bit is set for its respective sector if:

1) The sector has been linked into the doubly linked list of the file structure.

or

2) The operating system has tried without success to store information in the sector and has therefore made this sector not available.

The sector map resides in memory along with FDH and is changed when any file is being altered by erasure, deletion, or insertion. The map is stored off when these operations are complete. Bad sector locations will be de-allocated as if they were in use.

10-18. DISKETTE - IDENTIFICATION

10-19. NAME OF DISKETTE AND SPACE ALLOCATION

Diskette identification and space allocation information reside on track 1 sector C. The first 73 bytes of this sector are 11_H -this is not a required pattern. The diskette name is contained in the following sequential bytes (73 through 83). The available space on the diskette (in sectors) is contained in bytes 84 and 85, most significant byte last. The number of used sectors is contained in bytes 86 and 87; the number of bad sectors in bytes 88 and 89. The diskette number is in bytes 90 & 91. This number is randomly assigned at format time. The rest of sector C is not used.

10-20. DATA (FILES)

Data is stored beginning on track 1 sector D. A double-sided disk uses the format described above, except that track 77 is on the opposite side from track 0 and track 153 is on the opposite side from track 76.

SECTION 11

DISK CONTROLLER FIRMWARE (DCF)

11-1. INTRODUCTION

11-2. The Disk Controller Firmware (DCF) interfaces from the Flexible Disk Handler (FDH) to the Mostek FLP-80 Disk Controller Board. Input to the DCF consists of request code, unit number, track number, and sector number. Control of the hardware is exercised via 6 parallel I/O ports which are decoded on the FLP-80 board. A bootstrap sequence is included in the DCF which is used to boot binary files from disk into RAM. Interactive boot and save sequences are also available.

11-3. SOFTWARE CONFIGURATION

11-4. The DCF resides on the SDB-80 in one 2708 PROM located at address $EC00_H$. It is approximately 1K bytes long.

11-5. CONTROLLER OVERVIEW

11-6. The calling address for the DCF is $EC00_H$. All requests are made via the 48-byte IOCS parameter vector. See Section 9 of this manual for a complete definition of the vector. After each request is processed and the operation is completed, return is made to the caller. This is not an interrupt driven program; rather, the operation must be completed before further processing can take place. All I/O to the disk is done via a hardware FIFO. A complete sector (128 bytes) is buffered in the FIFO before transfer from/to the DCF takes place. All registers except the flags are preserved by the DCF. After an operation takes place,

the zero flag is set if no error occurred. The zero flag is reset if any errors occurred during the operation. If any error occurred, then bit zero of the vector ERRC parameter is also set. The Unit number is assumed to be in the vector UNIT parameter, the track number in TRK, and the sector number in SCTR. The request code must be in RQST. The unit may be 0-3. The track may be 0-76 for single-sided drives or 0-153 for double sided drives. The type of drive is indicated by bit 0 of port E2H; if set, a double-sided drive is indicated. The sector may be 1-26. The reader is referred to the Disk Drive Controller Hardware Manual for his hardware configuration. A complete software listing of the controller is given in 'DOPS-80 Program Source Listing', MK78589, which is available only to OEM users. The following IOCS vector parameters must be set up; IY must contain the first address of the vector. Numbers enclosed in parenthesis indicate displacement from the beginning of the vector.

UNIT (3) - disk unit number (either binary or ASCII)
RQST (15) - request code, described in paragraph 11-7.
UBFFR (25) - transfer address for data for read or write operation.
SCTR (30) - sector number
TRK (31) - track number

The following parameters are returned:

ERRC (23) - bit 0 set if an error occurred. The error code is saved in location FF09H. Note that bit 0 only is set or reset. The rest of the byte is left unchanged.
SCTR (30) - not changed
TRK (31) - not changed

LSCTR (32) - last sector pointer
LTRK (33) - last track pointer
NSCTR (34) - next sector pointer
NTRK (35) - next track pointer

NOTE: OFF_H in LSCTR and LTRK indicate the current record is the first record in the file. OFF_H in NSCTR and NTRK indicate end of file.

11-7. DISK CONTROLLER REQUESTS

11-8. On the following controller operations, request codes are placed in RQST, sector and track into SCTR and TRK, and transfer address into UBFFR. On exit, UBFFR is incremented by 124 if data is transferred. Only one sector is transferred per call.

COMMAND CODE	COMMAND	OPERATION
10H	Status	Returns disk drive status of disk drive not ready, disk drive not safe, disk drive write protected (see 11-9 for status code format).
11H	Read	Transfers a sector of data to host-specified buffer area.
12H	Write	Write a sector of data with address marks and CRC from specified host buffer.
13H	Seek	Positions head to track location specified in TRK.

14H	Restore	Initializes the disk unit and position the head to track 0 (outermost track).
15H	Read ID	Reads next available sector ID and track, and places it into a two byte read ID buffer. Byte 0 is the sector and Byte 1 is the track.
16H	Write Deleted	Identical to write command except that a deleted data address mark replaces regular data address mark.
17H	Format	Formats track specified in TRK to IBM 3740 specification.

NOTE that this formatting operation is not the same as the PIP formatting operation (see section 3). While this format command causes sector address and timing marks to be copied from a user created buffer to the disk being formatted, the PIP format command formats and also builds a file directory on the disk. A 4992 byte buffer is required (pointed to by UBFFR) which contains timing marks and other formatting information. Use of this command is not recommended.

11-9. DISK CONTROLLER ERROR RETURN CODES

11-10. Upon encountering an error, Bit 0 of the ERRC parameter in the IOCS vector is set. An error code is placed into location $FF09_H$ to indicate the type of error:

BIT	ERROR IF SET
7	Invalid drive, track or sector

6	Disk unit not ready
5	Track seek error
4	Sector not found
3	CRC error
2	Data lost
1	Disk is write protected
0	Attempt to read a deleted sector

The Z flag is set if no error was detected otherwise it is reset.

11-11. LINKED FILE LOADER

11-12. The Linked File Loader is a part of the DCF PROM. It accesses the disk at a given track and sector and loads information from the disk until the last sector in the linked structure is found. The Unit, Track/Sector address and load address are passed via an IOCS vector which is pointed to by the IY-register. 10 retries are performed. The IOCS vector is set up as shown for the DCF, described above. Entry address is EC03H. No request code is required.

11-13. INTERACTIVE BOOT PROCESS

NOTE: This procedure is used only to load programs into areas different than the load address defined in the directory.

11-14. This DCF program allows the user to specify the starting track and sector number of a file to be loaded directly into RAM. All interaction is via the console device. The FLP-80DOS system must be in RAM because IOCS is used. The information from disk is loaded sector by sector. The linked structure on the disk is followed until the last sector in the file is loaded.

To use this process, perform the following command sequence:

```
$DDT(CR)
.E EC09(CR)      - user executes the starting address of
                   the interactive boot process.
```

LOAD ADR: aaaa(CR) - user enters RAM starting load address (in hexadecimal) for information from the disk. Console interaction at this point is the same as DDT (See Sections 7-12 and 7-18).

UNIT,TRK,SCTR: u,t,s(CR)

- user enters disk unit number (0,1,2,3), starting track number and starting sector number of information to be loaded from disk. All three numbers are entered in hexadecimal.
- after loading is complete, the DDT prompt is issued.

If any errors occurred during the load process, then the following message will be printed on the console:

```
DSK ERR
```

If the FLP-80DOS system is not in RAM, then a small section of code which performs the following instructions must be executed to bypass usage of IOCS for console interaction:

```
LD      A,2
LD      (0FF12H),A
JP      EC09H
```

11-15. INTERACTIVE SAVE PROCESS

NOTE This procedure may be used only for modifying the directory or Track/Sector maps. Improper use can destroy files.

11-16. This DCF program allows the user to save a section of RAM on disk as a set of sequential sectors. The doubly linked structure is maintained on disk, but tracks and sectors are not allocated as in the Disk Handler. The sectors are allocated sequentially and without regard to the disk directory. All

interaction is via the console device. The FLP-80DOS system must be in RAM because IOCS is used for console I/O. To use this process, perform the following command sequence:

$DDT(CR)

.E EC06(CR) - user executes the starting address of the interactive save process.

SAVE ADR,#SCTRS: aaaa,bb(CR)

- user enters the starting address of the information to be saved on disk and the number of sectors to be saved. Each sector is 124 bytes long, and up to FFH sectors may be saved (31744 bytes). Console interaction is the same as DDT. The two parameters are entered in hexadecimal.

UNIT,TRK,SCTR: u,t,s(CR)

- user enters disk unit number (0,1,2 or 3), starting track number and starting sector number for information to be saved on disk. Sectors and tracks are allocated sequentially increasing. All three numbers are entered in hexadecimal.

. - after saving is finished, the DDT prompt is issued.

If any errors occurred during the save process, then the following message will be printed on the console:

DSK ERR

If the FLP-80DOS system is not in RAM then a small section of code which performs the following instructions must be executed to bypass usage of IOCS for console interaction:

```
LD      A,2
LD      (0FF12H),A      ;SET DEBUG FLAG
JP      0EC06H
```

SECTION 12

I/O HANDLERS

12-1. INTRODUCTION

12-2. This section describes the I/O handlers supplied with FLP-80DOS. In addition, listings of these handlers are included here to aid the user in writing his own handlers for his own devices. The system that is shipped to you contains only TK (keyboard), TT (console output), and CP (Centronics line printer) handlers linked into it. The other handlers are supplied as source and relocatable object modules. In order to use them in your system, you must perform a SYSGEN (System Generation); Hardware configurations are documented in the appropriate system Manual.

12-3. CR - CARD READER

DESCRIPTION - I/O handler. This handler interfaces a Documation M200 Card Reader to the FLP-80 system via two PIO ports. It is callable by IOCS. This is an interrupt driven driver. Immediate return is supported.

OPERATION -

OPEN. Interrupts are disabled. The address of the card reader interrupt handler is entered into the FLP-80 Interrupt Handler Address Table. The interrupt handler address is also programmed in to Port A control. Port A is then programmed for mode 2, and local interrupts are disable. The least significant byte of the interrupt handler address is also programmed into Port B control. Port B is then programmed. Finally, the BC register is set to physical record size of 82 (80 card columns plus carriage return and line feed). Interrupts are re-enabled.

CLOSE. No operation is performed in the handler.

READ. Initialize. The number of physical records to be read (NREC) is recorded, then zeroed. The assigned buffer area is noted. The card reader is checked to see if it is ready. Initial time out is 4 seconds. Immediate return is supported at this point. Additional time out counts are 20 seconds each. When the reader goes ready, a card pick is

initiated.

Card Input. Each column of data on the card causes an interrupt which is monitored by 'CRDRDR'. The interrupts are counted by the A - register until 80 interrupts are registered. During reading, conversion of the card EBCDIC data is done in 'CRDRDR' via table 'HOLTAB'.

Card Massaging. After the card has been read into the IOCS buffer, interrupts are disabled in the CPU and locally. If an EOT (ASCII 04_H) exists in column 1 of the last card, an end-of-file sequence is initiated (discussed below). Trailing blanks on the card are compressed. A carriage return and line feed are appended to the resultant card image. NREC is incremented and checked to see if all cards requested were read. If not, another card is read. Otherwise, the IOCS buffer pointer is updated to the byte following the last card image and the subroutine returns to caller.

End-of-file. Upon end-of-file (04_H in card column 1), the EOF error code (9) is placed in the 'ERRC' parameter of the vector. The IOCS buffer pointer is updated and return is made to caller.

12-4. CP-CENTRONICS LINE PRINTER

DESCRIPTION - I/O handler. This handler interfaces to any Centronics line printer. Immediate return is not supported. I/O timeout is checked. Tab (09_H) and form feed (0CH) are decoded and the appropriate horizontal and vertical spacing is done.

OPERATION -

OPEN The ports are initialized, the horizontal and vertical counters are initialized, and a physical record size of one is returned.

CLOSE A form feed is a issued to eject the paper from the printer at the end of an operation. The form feed is translated into a series of line feeds as described below.

WRITE The character to be written is checked. IF it is a tab, then it is translated to spaces mod-8. If it is a line feed then the vertical counter is incremented. If it is a form feed, then the page is ejected by issuing a series of line feeds. Users with form feed option may wish to delete this function. If it is a carriage return, then the horizontal counter is initialized. The line width is checked to truncate each line to 'LWIDTH' characters. Status is checked. If not ready, then the timeout is checked. If time out has occurred, then an error message is output and a new time out is set up. If ready, the character is output with the appropriate interface signals.

12-5. LP-DATA PRODUCTS LINE PRINTER

DESCRIPTION - I/O handler. This handler interfaces to any Data Products line printer. The handler is interrupt driven ; one character at a time is output. Immediate return is supported. I/O timeout is checked.

OPERATION -

OPEN - The port is initialized. The line printer interrupt handler address is stored in the IOCS Interrupt Address Table. The vector address is programmed to the PIO. The tab count is initialized. A physical record size of one is returned.

CLOSE - No action.

WRITE - An initial 3 second time out is set up. The ready bit of the status (bit 0 of LPST) is checked. Immediate return is supported. If the device does not go ready, an error message is issued and the timeout is reprogrammed to 20 seconds. When the device goes ready, the ready bit is reset and the character is checked. If the character is not a tab, then it is output to the device. If the character is a tab then, it is expanded into spaces mod-8.

12-6. PR - PAPER TAPE READER

DESCRIPTION - I/O handler. This handler interfaces a paper tape reader to FLP-80DOS via a PIO port. This handler is called by IOCS. It is interrupt driven. One character at a time is input. Immediate return is supported. I/O timeout is checked.

OPERATION -

OPEN. The port is initialized. The paper tape reader interrupt handler address is stored in the IOCS interrupt handler address table. The first read Operation is initiated. A physical record size of 1 is returned to IOCS.

CLOSE. No action is performed.

READ. Upon reception of an interrupt, Bit 0 of 'PRST' is set to indicate that the reader is ready with another character.

An initial timeout of 250 msec is programmed. The status flag located in the LS bit of address PRST is checked. If it is set, then an interrupt has occurred. This indicates that a character is ready. The character is read and complemented and return is made to caller.

12-7. PP-PAPER TAPE PUNCH

DESCRIPTION - I/O handler. This handler interfaces a paper tape punch to FLP-80DOS. It is interrupt driven and immediate return is supported. One character at a time is output. I/O timeout is checked. The operation of this handler is similar to LP -Data Products Line Printer handler except that tabs are not expanded.

12-8. TI-SILENT 700 CASSETTE INPUT

DESCRIPTION - I/O handler. This handler interfaces a Silent 700 digital cassette for input to FLP-80DOS via the serial ASCII port. Thus, the Silent 700 is also the system terminal. The handler is not interrupt driven and immediate return is not supported. This handler will read tapes recorded in LINE or CONTINUOUS mode. The handler is compatible with other MOSTEK Systems.

HARDWARE - ADC option is required (this is a Texas Instruments field-installable option). The handler will work if RDC is installed, but not all functions of the RDC option will be used. The option to allow printing on the Silent 700 printer must be enabled. This handler will work for 300 or 1200 baud rate.

OPERATION -

OPEN. - Buffer count and null count are initialized to zero. The "Minimal Listener" is disabled to prevent false triggering of the "Debugger Escape". A physical record size of one is returned to caller.

CLOSE. - A DC3 (13_H) character is issued to the Silent 700 to assure that the tape transport is turned off. The buffer count is reinitialized and the "Minimal Listener" is reenabled.

READ. - The read function reads one record from the cassette tape into a buffer and deblocks that buffer one byte at a time. When the buffer is empty, another record is read. End of record is defined by DC3 (13_H). End of file on the tape is defined by EOT (04_H), a sequence or 127 nulls, or a time out condition greater than 2 seconds.

12-9. TK-KEYBOARD

DESCRIPTION - I/O handler. This handler interfaces the terminal keyboard for input to the FLP-80DOS via the serial ASCII port. This handler is called by IOCS. It is not interrupt driven. One character at a time is input. Immediate return is supported. I/O timeout is not checked.

HARDWARE - Any serial terminal with ASCII keyboard. Allowed baud rates are 110, 300, 600, 1200, 2400, 4800 and 9600. RS-232 and 20mA current loop interfaces are supported.

OPERATION -

OPEN - A physical record size of 1 is returned to IOCS.

CLOSE - No action is performed.

READ - If a character was entered via the "Minimal Listener", it is taken as the keyed-in character. Otherwise the Status of the UART is checked. Immediate return is supported. When the UART goes ready, a character is read. Parity bit is cleared and the Minimal Listener holding register is cleared. If the Minimal Listener is enabled, then a test is made for CNTL-C (Debugger Escape) or CNTL-X (reboot). A positive test branches to the appropriate routine. If the Minimal Listener is not enabled, then return is made to caller.

12-10. TT - CONSOLE OUTPUT

DESCRIPTION - I/O handler. This handler is used for all output to the console device. It will support the following terminals depending on the baud rate.

BAUD RATE	TERMINAL TYPE
110	Teletype or CRT
300	Silent 700 or CRT
600	CRT
1200	Silent 700 or CRT
2400-9600	CRT

Tabs are expanded by the handler, and an automatic carriage return/line feed is issued when the right side of the screen is reached. Immediate return is not supported.

HARDWARE - Any terminal with RS-232 or 20mA current loop interface.

OPERATION -

OPEN - A physical record size of one byte is returned.

CLOSE - No action.

WRITE - The character to be output is checked. If it is a tab (ASCII 09_H), then the required number of spaces to position the print head or cursor mod-8 is output. If the character is a backspace, then the position counter is decremented and the backspace is output. For any character other than a carriage return ($0D_H$) or form feed ($0C_H$), the width of the current line is checked. If the

cursor is at the right side of the screen specified by 'LWIDTH'), then a carriage return and line feed are output. The position counter is then updated and the UART status is checked. When ready, the character is output to the device. If the device is a TTY or Silent 700, then a form feed ($0C_H$) is translated to 6 line feeds to prevent uncontrolled paper scrolling. If the baud rate is 1200 baud for a Silent 700, then a 32 msec delay is executed after each character output. If the character is a carriage return and the baud rate is 300 or 1200, then an extra 210 msec delay is executed to allow full return of the print head. After each carriage return to output (0DH) the keyboard status byte, (TKST) in the scratchpad, in checked and if it contains a space (020H) then it is cleared and checked again in a loop until the next space is input from TK for release to continue output. This allows pausing the listing of a file to the console device by pressing the space bar once, and continuing the listing by pressing the space bar once again.

12-11. TO - SILENT 700 CASSETTE OUTPUT

DESCRIPTION - I/O handler. This handler interfaces a Silent 700 digital cassette for output to the FLP-80DOS system via the serial port. Thus, the Silent 700 is also the system terminal. This handler is not interrupt driven. Immediate return is not supported. This handler will record tapes in LINE or CONTINUOUS mode. It is compatible with other MOSTEK products.

HARDWARE - See description for 'TI'.

OPERATION -

OPEN - A buffer pointer is initialized and a physical record size of one of returned to caller.

CLOSE - A DC4 (14_H) is issued to the Silent 700 to assure that the tape transport is off.

WRITE - Characters are blocked into a buffer one at a time until an end of record is encountered. An end of record is defined as a line feed character. When the end of record is encountered, the buffer is output to the device. The record format is: data, CR, LF, DC3, RUBOUT. If an end of file (EOT=04_H) is to be output, then any bytes in the buffer are output. Then the EOT is output followed by a carriage return ($0D_H$) to terminate LINE mode. A series of null characters is written to the device to assure that this last record is written to the tape in CONTINUOUS mode.

12-12. TR - TELETYPE PAPER TAPE READER

DESCRIPTION - I/O handler. This handler interfaces a teletype paper tape reader to FLP-80DS via the serial I/O port. This handler is called by IOCS. It is not interrupt driven. One character at a time is output. Immediate return is not supported. I/O time out is 250 milliseconds and returns to caller.

HARDWARE - Reader step control is required on the teletype.

OPERATION -

OPEN - The 'Minimal Listener' is turned off. A physical record size of 1 is returned to IOCS.

CLOSE - The 'Minimal Listener' is turned on and returns to caller.

WRITE - The reader is turned on. The UART is checked. A timeout of 250 milliseconds is initiated. If the UART does not go ready, return is made to caller. Otherwise, the reader is turned off the the character is read via TKREAD.

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:LPC   .SRC

                 0002          NAME    CLP
                 0003 ;****************************************
                 0004 ;* TITLE: CENTRONIX LINE PRINTER DRIVER *
                 0005 ;*                                      *
                 0006 ;* ID:    CLP    VERSION  2.0   6/15/78 *
                 0007 ;*                                      *
                 0008 ;* PROGRAMMERS: M. FREEMAN              *
                 0009 ;*              JOHN BATES              *
                 0010 ;****************************************
                 0011 ;
                 0012 ; THIS IS THE INTERFACE FOR PRINTERS WHICH REQUIRE
                 0013 ; A PULSE INSTEAD OF AN EDGE FOR DATA TRANSFER. FOR
                 0014 ; EACH CHARACTER TRANSFERED, A 7.6 US. PULSE WILL
                 0015 ; BE SENT 16.4 US. AFTER DATA IS SENT TO THE PRINTER.
                 0016 ; BUSY IS USED TO INDICATE THAT THE BUFFER IS FULL
                 0017 ; OR A RETURN OR LINE FEED HAS BEEN SENT.
                 0018 ; 100 US./CHAR IS THE FASTEST RATE THAT THE DRIVER
                 0019 ; CAN OUTPUT DATA.
                 0020 ;
                 0021 ; BOTH BITS 4 AND 5 MUST BE LOW FROM THE PRINTER
                 0022 ; FOR DATA TO BE TRANSFERED. THE 7402 ON PORT
                 0023 ; D2 INVERTS THE DATA, THEREFORE BOTH BITS MUST
                 0024 ; BE HIGH IN THE ACC AFTER THE INPUT INSTRUCTION.
                 0025 ; AFTER SCANNING FOR 1 SEC IF BOTH BITS ARE NOT HIGH
                 0026 ; A TIMEOUT MESSAGE WILL BE PRINTED BY THE DRIVER.
                 0027 ;
                 0028 ; BESIDES THE NORMAL PRINTABLE ASCII CHARACTERS, THIS
                 0029 ; DRIVER RESPONDS TO 2 ASCII CONTROL CHARACTERS. THESE
                 0030 ; CONTROL CHARACTERS ARE DECODED BY THE DRIVER AND ARE
                 0031 ; TRANSLATED CHARACTERS WHICH EVERY PRINTER CAN USE.
                 0032 ; THEN ARE:    TAB (09H) AND FORM FEED (0CH).
                 0033 ;
                 0034          GLOBAL  CP
                 0035          GLOBAL  EH
  >0000          0036 LPCSTB   EQU     0       ; STROBE FOR CENTRONICS TYPE
  >0004          0037 LPPE     EQU     4       ; PAPER EMPTY
  >0005          0038 LPBSY    EQU     5       ; PRINTER BUSY
  >00D0          0039 LPDP     EQU     0D0H    ;DATA PORT
  >00D1          0040 LPDC     EQU     0D1H    ;CONTROL PORT
  >00D2          0041 LPSP     EQU     0D2H    ;STROBE/BUSY PORT
  >00D3          0042 LPSC     EQU     0D3H    ;STROBE/BUSY CONTROL PORT
  >0007          0043 TIMOUT   EQU     07      ;TIMEOUT ERROR CODE
  >0042          0044 PAGE     EQU     66      ;PAGE LENGTH
  >0050          0045 LWIDTH   EQU     80      ;MAXIMUM LINE WIDTH
                 0046 ;
 '0000  04       0047 CP       DEFB    4               ;MAX REQUEST
 '0001  00       0048          DEFB    0               ;OPENR
 '0002  06       0049          DEFB    LPOPEN-$
 '0003  30       0050          DEFB    LPCLOS-$
 '0004  00       0051          DEFB    0               ;READ
 '0005  35       0052          DEFB    LPWRIT-$        ;WRITE
 '0006  00       0053 HCNTR    DEFB    0               ; COLUMN COUNTER
 '0007  01       0054 VCNTR    DEFB    1               ;LINE COUNTER
                 0055 ;
 '0008  3E0F     0056 LPOPEN   LD      A,0FH           ;PORT A MODE 0
 '000A  D3D1     0057          OUT     (LPDC),A
 '000C  3ECF     0058          LD      A,0CFH          ;PORT B MODE 3
 '000E  D3D3     0059          OUT     (LPSC),A
```

```
CLP     COPYRIGHT 1977 MOSTEK CORP       MOSTEK FLP-80 ASSEMBLER V2.0 PAGE 0002
 ADDR   OBJECT    ST #  SOURCE STATEMENT        DATASET = DK0:LPC    .SRC

'0010   3EF0      0060          LD      A,0F0H          ;HIGH HALF FOR INPUTS
'0012   D3D3      0061          OUT     (LPSC),A
'0014   3E03      0062          LD      A,3             ;DISABLE INTPS
'0016   D3D1      0063          OUT     (LPDC),A
'0018   3E11      0064          LD      A,11H           ; SELECT WITH DC1
'001A   D3D0      0065          OUT     (LPDP),A
'001C   DBD2      0066          IN      A,(LPSP)        ; RESET LP CSTROBE
'001E   CBC7      0067          SET     LPCSTB,A
'0020   0602      0068          LD      B,2
'0022   D3D2      0069 LPOPN1   OUT     (LPSP),A
'0024   EE01      0070          XOR     1               ; 2**LPCSTB
'0026   10FA      0071          DJNZ    LPOPN1-$
'0028   AF        0072          XOR     A
'0029   320600'   0073          LD      (HCNTR),A
'002C   320700'   0074          LD      (VCNTR),A
'002F   010100    0075          LD      BC,1            ;PHYSICAL RECORD SIZE = 1
'0032   C9        0076          RET
                  0077 ;
'0033   3E0D      0078 LPCLOS   LD      A,0DH           ;OUTPUT CARRIAGE RETURN
'0035   CD3A00'   0079          CALL    LPWRIT
'0038   3E0C      0080          LD      A,0CH           ;OUTPUT FORM FEED
                  0081 ;
                  0082 ;
'003A   FE09      0083 LPWRIT   CP      9               ; TAB?
'003C   2015      0084          JR      NZ,LP2A-$       ; NO
'003E   C5        0085          PUSH    BC              ; YES
'003F   3A0600'   0086          LD      A,(HCNTR)
'0042   47        0087          LD      B,A
'0043   E6F8      0088          AND     0F8H
'0045   C608      0089          ADD     A,8             ; NEXT TAB LOC
'0047   0E20      0090          LD      C,'             ; SPACE OUT
'0049   90        0091 LP3A     SUB     B               ; # SPACES
'004A   47        0092          LD      B,A
'004B   79        0093 LP3      LD      A,C             ; OUTPUT SPACE
'004C   CD6200'   0094          CALL    LP2
'004F   10FA      0095          DJNZ    LP3-$
'0051   C1        0096          POP     BC
'0052   C9        0097          RET
'0053   FE0C      0098 LP2A     CP      0CH             ; FORM FEED?
'0055   200B      0099          JR      NZ,LP2-$        ;NOTE: THIS LOGIC GENERATES
'0057   C5        0100          PUSH    BC              ;TO EJECT PAGE. IF LINE PRI
'0058   3A0700'   0101          LD      A,(VCNTR)       ;HARDWARE SUPPORTS A FORM F
'005B   47        0102          LD      B,A             ;THIS LOGIC SHOULD BE OMITT
'005C   3E42      0103          LD      A,PAGE
'005E   0E0A      0104          LD      C,0AH
'0060   18E7      0105          JR      LP3A-$          ; LINE FEED OUT
                  0106 ;
'0062   F5        0107 LP2      PUSH    AF              ;SAVE CHARACTER
'0063   FE0A      0108          CP      0AH             ;LINE FEED ?
'0065   200E      0109          JR      NZ,LP5-$
'0067   3A0700'   0110          LD      A,(VCNTR)       ;IF CHAR IS LINE FEED
'006A   3C        0111          INC     A               ;THEN UPDATE VERTICLE
'006B   FE42      0112          CP      PAGE            ;COUNTER AND RESET
'006D   2001      0113          JR      NZ,LP4-$        ;TO ZERO AFTER MAX PAGE
'006F   AF        0114          XOR     A               ;LENGTH HAS BEEN REACHED.
'0070   320700'   0115 LP4      LD      (VCNTR),A
'0073   1813      0116          JR      LP20-$
                  0117 ;
```

```
CLP     COPYRIGHT 1977 MOSTEK CORP       MOSTEK FLP-80 ASSEMBLER V2.0 PAGE 0003
 ADDR   OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:LPC   .SRC

 0075   FE0D      0118 LP5     CP      0DH              ;IF CARRAGE RET
'0077   3E00      0119         LD      A,0              ;ZERO HORIZONTAL CTR.
'0079   280A      0120         JR      Z,LP10-$
                  0121 ;
'007B   3A0600'   0122 LP6     LD      A,(HCNTR)        ;FETCH HORIZONTAL CTR
'007E   FE50      0123         CP      LWIDTH
'0080   2002      0124         JR      NZ,LP8-$         ;IF MAX LINE WIDTH
'0082   F1        0125         POP     AF               ;IS REACHED THEN RETURN.
'0083   C9        0126         RET
'0084   3C        0127 LP8     INC     A
'0085   320600'   0128 LP10    LD      (HCNTR),A        ;UPDATE HORIZONTAL CTR
                  0129 ;
'0088   C5        0130 LP20    PUSH    BC               ;SAVE BC
'0089   01C409    0131         LD      BC,2500          ;2.5 SECOND DELAY COUNT
'008C   C5        0132 LP22    PUSH    BC
'008D   062F      0133         LD      B,47             ;MSEC COUNTER
                  0134 ;
'008F   DBD2      0135 LP24    IN      A,(LPSP)         ;EXIT TO PRINT CHARACTER
'0091   E630      0136         AND     030H             ;IF BOTH STATUS BITS 4 & 5
'0093   FE30      0137         CP      030H             ;ARE SET INDICATING PAPER
'0095   2813      0138         JR      Z,LP30-$         ;IS NOT EMPTY AND PRINTER
'0097   0B        0139         DEC     BC               ;IS NOT BUSY
'0098   10F5      0140         DJNZ    LP24-$           ;LOOP FOR 1 MSEC
                  0141 ;
'009A   C1        0142         POP     BC
'009B   0B        0143         DEC     BC               ;DECREMENT COUNT
 009C   78        0144         LD      A,B
'009D   B1        0145         OR      C
'009E   20EC      0146         JR      NZ,LP22-$
                  0147 ;
'00A0   3E07      0148         LD      A,TIMOUT         ;PRINT TIMEOUT ERROR
'00A2   CDFFFF    0149         CALL    EH
'00A5   01204E    0150         LD      BC,20000                 ;NEW TIME OUT
'00A8   18E2      0151         JR      LP22-$
                  0152 ;
'00AA   C1        0153 LP30    POP     BC               ;ADJUST STACK
'00AB   C1        0154         POP     BC               ;RESTORE BC
'00AC   F1        0155         POP     AF               ;GET CHAR
'00AD   D3D0      0156         OUT     (LPDP),A         ;OUTPUT CHAR
'00AF   F5        0157         PUSH    AF               ;SAVE CHAR
'00B0   DBD2      0158         IN      A,(LPSP)
'00B2   CB87      0159         RES     LPCSTB,A         ;RESET STROBE
'00B4   D3D2      0160         OUT     (LPSP),A         ;GENERATING PULSE.
'00B6   CBC7      0161         SET     LPCSTB,A
'00B8   D3D2      0162         OUT     (LPSP),A
'00BA   F1        0163         POP     AF               ;RESTORE CHAR
'00BB   C9        0164         RET
                  0165 ;
                  0166         END


ERRORS=0000
```

```
LPDATA COPYRIGHT 1978 MOSTEK CORP       MOSTEK FLP-80 ASSEMBLER V2.0 PAGE 0001
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:LPD   .SRC

                 0002          NAME    LPDATA
                 0003 ;
                 0004 ; DATA PRODUCTS LINE PRINTER HANDLER
                 0005 ;
                 0006          GLOBAL  LP
                 0007          GLOBAL  EH
                 0008 ;
 >FF00           0009 TOR      EQU     0FF00H
 >0002           0010 IRET     EQU     2
 >0015           0011 CFLGS    EQU     21
 >0007           0012 TIMOUT   EQU     7
                 0013 ;
                 0014 ;
'>0000           0015 LP       EQU     $
'0000  04        0016          DEFB    4         ;MAX RQST
'0001  00        0017          DEFB    0
'0002  05        0018          DEFB    LPOPEN-$
'0003  3C        0019          DEFB    LPCLOS-$
'0004  00        0020          DEFB    0
'0005  3B        0021          DEFB    LPWRIT-$
                 0022 ;
'0006  AA        0023 LPST     DEFB    0AAH
 >0007           0024 LPDIS    EQU     7         ;VECTOR DISPLACEMENT FROM TOR
                 0025 ;
'0007  F3        0026 LPOPEN   DI                ;OPEN DEVICE
'0008  2A00FF    0027          LD      HL,(TOR)          ;ACCESS INTERRUPT TABLE
'000B  110700    0028          LD      DE,LPDIS
'000E  B7        0029          OR      A
'000F  ED52      0030          SBC     HL,DE
'0011  E5        0031          PUSH    HL        ;SAVE VECTOR ADDR
'0012  11A500'   0032          LD      DE,LINT   ;GET INTERRUPT HANDLER ADDRESS
'0015  73        0033          LD      (HL),E    ;SAVE IN VECTOR
'0016  23        0034          INC     HL
'0017  72        0035          LD      (HL),D
'0018  D1        0036          POP     DE        ;GET VECTOR ADDRESS
'0019  210600'   0037          LD      HL,LPST   ;HL -> STATUS BYTE
'001C  CBC6      0038          SET     0,(HL)    ;SET READY BIT
'001E  4E        0039          LD      C,(HL)    ;GET PORT FOR CONTROL
'001F  3E0F      0040          LD      A,0FH     ;OUTPUT CONTROL
'0021  ED79      0041          OUT     (C),A
'0023  ED59      0042          OUT     (C),E     ;OUTPUT VECTOR LSBYTE
'0025  3E83      0043          LD      A,83H
'0027  ED79      0044          OUT     (C),A
'0029  7A        0045          LD      A,D       ;SET UP VECTOR MSBYTE
'002A  ED47      0046          LD      I,A
'002C  3E0C      0047          LD      A,0CH     ;OUTPUT FORM FEED TO INITIALIZE
'002E  CD4000'   0048          CALL    LPWRIT
'0031  3E0D      0049          LD      A,0DH     ;AND A CR
'0033  CD4000'   0050          CALL    LPWRIT
'0036  3E08      0051          LD      A,8       ;INITIALIZE TAB COUNT
'0038  32AF00'   0052          LD      (CNT),A
'003B  010100    0053          LD      BC,1
'003E  FB        0054          EI                ;ENABLE
'003F  C9        0055 LPCLOS   RET               ;RETURN TO CALLER
                 0056 ;
                 0057 ;
'0040  E5        0058 LPWRIT   PUSH    HL        ;SAVE REGS
'0041  C5        0059          PUSH    BC
```

```
'0042  F5          0060          PUSH    AF       ;SAVE BYTE TO OUTPUT
'0043  210600'     0061          LD      HL,LPST  ;HL -> STATUS BYTE
'0046  01B80B      0062          LD      BC,3000  ;3 SECOND TIME OUT
'0049  C5          0063 LPA      PUSH    BC       ;SAVE
'004A  0629        0064          LD      B,41     ;MSEC COUNTER
'004C  FB          0065 LPL      EI               ;ENABLE INTPS
'004D  CB46        0066          BIT     0,(HL)   ;CHECK FOR READY
'004F  201D        0067          JR      NZ,LPR-$         ;YES, SKIP OUT
'0051  FDCB1556    0068          BIT     IRET,(IY+CFLGS) ;CHECK IMMED RETURN
'0055  2012        0069          JR      NZ,LPI-$         ;YES, SKIP OUT
'0057  10F3        0070          DJNZ    LPL-$    ;LOOP FOR TIMEOUT
'0059  C1          0071          POP     BC
'005A  0B          0072          DEC     BC       ;DECREMENT COUNT
'005B  78          0073          LD      A,B
'005C  B1          0074          OR      C
'005D  20EA        0075          JR      NZ,LPA-$         ;LOOP FOR TIMEOUT
                   0076 ;
'005F  3E07        0077          LD      A,TIMOUT         ;TIME OUT ERROR
'0061  CDFFFF      0078          CALL    EH       ;OUTPUT IT
'0064  01204E      0079          LD      BC,20000         ;NEW TIMEOUT
'0067  18E0        0080          JR      LPA-$
                   0081 ;
'0069  C1          0082 LPI      POP     BC
'006A  F1          0083          POP     AF
'006B  C1          0084          POP     BC
'006C  E1          0085          POP     HL
'006D  C9          0086          RET
                   0087 ;
'006E  C1          0088 LPR      POP     BC       ;RESTORE STACK
'006F  F1          0089          POP     AF       ;GET BYTE
'0070  CB86        0090          RES     0,(HL)   ;RESET READY BIT
'0072  4E          0091          LD      C,(HL)   ;GET DATA PORT NBR
'0073  FE09        0092          CP      9        ;IS THIS A TAB CHARACTER?
'0075  2016        0093          JR      NZ,LPR2-$        ;NO, SKIP
'0077  3E20        0094          LD      A,' '    ;IF TAB OUTPUT A BLANK
'0079  ED79        0095          OUT     (C),A
'007B  3AAF00'     0096          LD      A,(CNT)  ;DECREMENT COUNT
'007E  FE08        0097          CP      8        ;CHECK IF AT END OF TAB SPACE
'0080  2819        0098          JR      Z,LPR4-$         ;IF SO, SKIP OUT
'0082  3D          0099          DEC     A        ;UNTIL IT TURNS TO ZERO
'0083  32AF00'     0100          LD      (CNT),A
'0086  3E09        0101          LD      A,9      ;REINITIALIZE CHARACTER=TAB
'0088  F5          0102          PUSH    AF
'0089  20BE        0103          JR      NZ,LPA-$         ;IF NOT DONE, OUTPUT MORE S
'008B  180C        0104          JR      LPR3-$   ;ELSE REINIT TAB COUNTER
                   0105 ;
'008D  ED79        0106 LPR2     OUT     (C),A    ;OUTPUT NON-TAB CHARACTER
'008F  FE0D        0107          CP      0DH      ;IF CARRIAGE RETURN
'0091  2806        0108          JR      Z,LPR3-$         ;GO REINIT TAB COUNTER
'0093  3AAF00'     0109          LD      A,(CNT)  ;DECREMENT COUNTER
'0096  3D          0110          DEC     A
'0097  2002        0111          JR      NZ,LPR4-$        ;IF NOT ZERO, SKIP
                   0112 ;*********************NOTE: DESTROYS A-REG
'0099  3E08        0113 LPR3     LD      A,8      ;REINIT TAB COUNTER
'009B  32AF00'     0114 LPR4     LD      (CNT),A  ;SET TAB COUNTER
'009E  FDCB1596    0115          RES     IRET,(IY+CFLGS) ;RESET IMMED RETURN
'00A2  C1          0116          POP     BC
'00A3  E1          0117          POP     HL
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:LPD    .SRC

'00A4  C9        0118         RET             ;RETURN TO CALLER
                 0119 ;
                 0120 ;
'00A5  E5        0121 LINT    PUSH    HL      ;LINE PRINTER INTERRUPT HANDLER
'00A6  210600'   0122         LD      HL,LPST
'00A9  CBC6      0123         SET     0,(HL)  ;SET READY BIT
'00AB  E1        0124         POP     HL
'00AC  FB        0125         EI
'00AD  ED4D      0126         RETI
                 0127 ;
'00AF  00        0128 CNT     DEFB    0       ;TAB COUNTER


ERRORS=0000
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:CR    .SRC

                 0002         NAME    CR
                 0003 ;TITLE: CARD READER DRIVER FOR FLP-80
                 0004 *
                 0005 *ID: ZCR80 V2.0 27MAY78
                 0006 *
                 0007 *TYPE: SUBROUTINE
                 0008 *
                 0009 *SYSTEM: AID-80F WITH FLP-80DOS
                 0010 *
                 0011 *DESCRIPTION: THIS DRIVER INTERFACES A DOCUMATION
                 0012 * M200 CARD READER TO THE AID-80F VIA TWO
                 0013 * PIO PORTS.  REQUIRES FLP-80DOS.
                 0014 *
                 0015 *STACK USAGE: MAX 10 ENTRIES
                 0016 *
                 0017 *CALLED ROUTINES: EH
                 0018 *
                 0019 *PROGRAMMER: D. LEITCH
                 0020 ;       P. FORMANIAK
                 0021 *
                 0022 ;
                 0023 ; EXTERNAL SYMBOLS
                 0024 ;
                 0025         GLOBAL  EH
                 0026 ;
                 0027 ; SCRATCHPAD EQUATES
 >FF00           0028 TOR     EQU     0FF00H
                 0029 ;
                 0030 ; IOCS VECTOR EQUATES
                 0031 ;
 >0019           0032 UBFFR   EQU     25      ;USER BUFFER OFFSET IN VECTOR
 >0015           0033 CFLGS   EQU     21
 >0017           0034 ERRC    EQU     23
 >001E           0035 HSCR    EQU     30
 >0002           0036 IRET    EQU     2
 >001D           0037 NREC    EQU     29
                 0038 ;
                 0039 ; LOCAL EQUATES
                 0040 ;
 >0004           0041 EOT     EQU     4       ;EOT CHARACTER
 >0007           0042 TIMOUT  EQU     7       ;TIMOUT ERROR NUMBER
 >0009           0043 EOFERR  EQU     9       ;END OF FILE ERROR NUMBER
                 0044 ;
                 0045         GLOBAL  CR
'>0000           0046 CR      EQU     $
'0000  03        0047         DEFB    3       ;MAX REQUEST
'0001  05        0048         DEFB    CROPEN-$        ;OPEN FOR READ
'0002  00        0049         DEFB    0       ;OPEN FOR WRITE
'0003  D3        0050         DEFB    CRCLOS-$        ;CLOSE
'0004  3F        0051         DEFB    CRREAD-$        ;READ
                 0052 ;
'0005  AD        0053 CRPORT  DEFB    0ADH    ;PORT FOR CARD READER
 >000D           0054 CRDIS   EQU     0DH     ;INTP VECTOR DISPLACEMENT FROM TOP
                 0055 ;
'0006  F3        0056 CROPEN  DI              ;OPEN CARD READER
'0007  2A00FF    0057         LD      HL,(TOR)        ;GET VECTOR ADDRESS
'000A  110D00    0058         LD      DE,CRDIS        ;OFFSET OF VECTOR FROM TOP
'000D  B7        0059         OR      A
```

```
'000E  ED52      0060          SBC     HL,DE
'0010  11D700'   0061          LD      DE,CRDRDR       ;GET INTP HANDLER ADDRESS
'0013  73        0062          LD      (HL),E  ;SAVE INTO VECTOR
'0014  23        0063          INC     HL
'0015  72        0064          LD      (HL),D
'0016  2B        0065          DEC     HL      ;GET VECTOR ADDR
'0017  3A0500'   0066          LD      A,(CRPORT)      ;GET CARD READER POPRT
'001A  4F        0067          LD      C,A
'001B  ED69      0068          OUT     (C),L   ;LSBYTE OF VECTOR TO PORT
'001D  7C        0069          LD      A,H     ;MSBYTE OF VECTOR INTO I-REG
'001E  ED47      0070          LD      I,A
'0020  3E8F      0071          LD      A,8FH   ;SET MODE =2
'0022  ED79      0072          OUT     (C),A
'0024  3E03      0073          LD      A,03H   ;DISABLE A INTERRUPTS
'0026  ED79      0074          OUT     (C),A
'0028  0C        0075          INC     C       ;ADJUST TO B CNTL
'0029  0C        0076          INC     C
'002A  ED69      0077          OUT     (C),L   ;LSBYTE OF VECTOR
'002C  3ECF      0078          LD      A,0CFH  ;SET MODE =3
'002E  ED79      0079          OUT     (C),A
'0030  3EFF      0080          LD      A,0FFH  ;ALL I/O LINES=INPUT
'0032  ED79      0081          OUT     (C),A
'0034  3E17      0082          LD      A,17H   ;DISABLE B INTERRUPTS
'0036  ED79      0083          OUT     (C),A
'0038  3EFF      0084          LD      A,0FFH  ;NO I/O LINES=INTERRUPT
'003A  ED79      0085          OUT     (C),A
'003C  015200    0086          LD      BC,82   ;SET BUFFER LENGTH
'003F  ED5E      0087          IM      2
'0041  FB        0088          EI
'0042  C9        0089          RET
                 0090 ;
                 0091 ;
'>0043           0092 CRREAD   EQU     $
'0043  E5        0093          PUSH    HL
'0044  D5        0094          PUSH    DE
'0045  C5        0095          PUSH    BC
'0046  FD7E1D    0096          LD      A,(IY+NREC)     ;GET NBR OF CARDS TO READ
'0049  FD771E    0097          LD      (IY+HSCR),A     ;SAVE IN HANDLER SCRATCH
'004C  FD361D00  0098          LD      (IY+NREC),0     ;ZERO NBR OF CARDS READ
'0050  FD5E19    0099          LD      E,(IY+UBFFR)    ;SET UP BUFFER POINTER
'0053  FD561A    0100          LD      D,(IY+UBFFR+1)
                 0101 ;
'0056  3A0500'   0102 CRLOOP   LD      A,(CRPORT)      ;GET CARD READER PORT
'0059  4F        0103          LD      C,A
'005A  0C        0104          INC     C       ;ADJUST TO PORT B DATA
'005B  21A00F    0105          LD      HL,4000 ;INITIAL TIME OUT IN MSEC
'005E  0626      0106 CRDYL    LD      B,38    ;ONE MSEC COUNTER
'0060  ED78      0107 CRDY0    IN      A,(C)   ;TEST READY BIT
'0062  CB5F      0108          BIT     3,A
'0064  281C      0109          JR      Z,CRGO-$        ;IF READY, SKIP OUT
'0066  FDCB1556  0110          BIT     IRET,(IY+CFLGS) ;CHECK FOR IMMEDIATE RETURN
'006A  2011      0111          JR      NZ,ZRET-$       ;RETURN ZERO IF SO
'006C  10F2      0112          DJNZ    CRDY0-$ ;LOOP FOR ONE MSEC COUNT
'006E  2B        0113          DEC     HL      ;DECREMENT TIME OUT COUNTER
'006F  7C        0114          LD      A,H
'0070  B5        0115          OR      L       ;CHECK FOR ZERO
'0071  20EB      0116          JR      NZ,CRDYL-$      ;IF NOT DONE, LOOP FOR MORE
                 0117 ; TIMEOUT ERROR. OUTPUT THE ERROR TO CONSOLE.  THEN LOOP AG
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:CR    .SRC

                 0118 ; UNTIL DEVICE GOES READY.
 0073  3E07      0119         LD      A,TIMOUT         ;TIME OUT ERROR NBR
'0075  CDFFFF    0120         CALL    EH       ;OUTPUT THE ERROR
'0078  21204E    0121         LD      HL,20000         ;20 SECOND TIMEOUT FROM HER
'007B  18E1      0122         JR      CRDYL-$ ;AND LOOP FOR MORE
                 0123 ;
'007D  97        0124 ZRET    SUB     A        ;RETURN ZERO TO CALLER
'007E  C1        0125         POP     BC
'007F  D1        0126         POP     DE
'0080  E1        0127         POP     HL
'0081  C9        0128         RET
                 0129 ;
'0082  0D        0130 CRGO    DEC     C        ;ADJUST TO A CNTL
'0083  3E83      0131         LD      A,83H    ;ENABLE INTERRUPTS
'0085  ED79      0132         OUT     (C),A
'0087  AF        0133         XOR     A        ;CLEAR A
'0088  0D        0134         DEC     C        ;ADJUST TO A DATA
'0089  ED79      0135         OUT     (C),A    ;FORCE A PICK
'008B  C5        0136         PUSH    BC       ;SAVE BC
'008C  FB        0137         EI
'>008D           0138 CBZY1   EQU     $        ;GO READ THE CARD VIA INTPS
'008D  FE50      0139         CP      80       ;A=80 => FINISHED
'008F  20FC      0140         JR      NZ,CBZY1-$
'0091  F3        0141         DI
'0092  C1        0142         POP     BC       ;RESTORE BC
'0093  0D        0143         DEC     C        ;ADJUST TO A CNTL
 0094  3E03      0144         LD      A,3      ;DISABLE I/O INTERRUPTS
 0096  ED79      0145         OUT     (C),A
                 0146 ;
                 0147 ; CHECK FOR EOT (04H) IN COLUMN 1
                 0148 ;
'0098  D5        0149         PUSH    DE       ;DE INTO HL
'0099  E1        0150         POP     HL
'009A  C5        0151         PUSH    BC       ;SAVE BC-REG
'009B  FD341D    0152         INC     (IY+NREC)        ;INCREMENT NBR OF CARDS REA
'009E  015000    0153         LD      BC,80    ;ACCESS FIRST CHARACTER OF CARD
'00A1  B7        0154         OR      A
'00A2  ED42      0155         SBC     HL,BC
'00A4  7E        0156         LD      A,(HL)   ;GET CHARACTER IN COLUMN 1
'00A5  C1        0157         POP     BC
'00A6  FE04      0158         CP      EOT      ;CHECK FOR END OF FILE INDICATOR
'00A8  2006      0159         JR      NZ,NEOT-$        ;NOT EOT, SKIP
'00AA  FD361709  0160         LD      (IY+ERRC),EOFERR         ;SET UP END OF FILE
'00AE  1817      0161         JR      CREOT-$ ;AND SKIP OUT
                 0162 ;
                 0163 ; NOT EOT, COMPRESS TRAILING BLANKS ON CARD
                 0164 ;
'00B0  1B        0165 NEOT    DEC     DE       ;DECREMENT POINTER
'00B1  1A        0166         LD      A,(DE)   ;GET CHARACTER
'00B2  FE20      0167         CP      20H      ;BLANK?
'00B4  28FA      0168         JR      Z,NEOT-$         ;YES, KEEP COMPRESSING
'00B6  13        0169         INC     DE       ;CORRECT POINTER
                 0170 ;
 00B7  EB        0171         EX      DE,HL    ;HL -> END OF CARD BUFFER
'00B8  360D      0172         LD      (HL),0DH         ;STUFF A CR
'00BA  23        0173         INC     HL
'00BB  360A      0174         LD      (HL),0AH
'00BD  23        0175         INC     HL
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:CR    .SRC

'00BE  EB        0176         EX      DE,HL   ;DE -> CARD BUFFER
'00BF  FD7E1D    0177         LD      A,(IY+NREC)     ;CHECK FOR ALL CARDS READ
'00C2  FD961E    0178         SUB     (IY+HSCR)       ;THAT WERE REQUESTED
'00C5  208F      0179         JR      NZ,CRLOOP-$     ;NOT DONE, LOOP FOR NEXT CA
                 0180 ;
'00C7  FD7319    0181 CREOT   LD      (IY+UBFFR),E    ;UPDATE BUFFER POINTER FOR I
'00CA  FD721A    0182         LD      (IY+UBFFR+1),D
'00CD  C1        0183         POP     BC      ;RESTORE BC REG
'00CE  D1        0184         POP     DE
'00CF  E1        0185         POP     HL
'00D0  FDCB1596  0186         RES     IRET,(IY+CFLGS) ;RESET IMMEDIATE RETURN BIT
'00D4  FB        0187         EI
'00D5  C9        0188         RET
                 0189 ;
                 0190 ;
'00D6  C9        0191 CRCLOSE RET             ;CLOSE
                 0192 ;
                 0193 ;
'00D7  F5        0194 CRDRDR  PUSH    AF      ;SAVE AF AND BC
'00D8  0607      0195         LD      B,7
'00DA  3A0500'   0196         LD      A,(CRPORT)      ;GET CARD READER PORT
'00DD  4F        0197         LD      C,A
'00DE  0D        0198         DEC     C       ;ADJUST TO A DATA
'00DF  ED78      0199         IN      A,(C)   ;INPUT A DATA
'00E1  2F        0200         CPL             ;COM DATA FROM A
'00E2  6F        0201         LD      L,A     ;SAVE A DATA
'00E3  0C        0202         INC     C       ;ADJUST TO B DATA
'00E4  0C        0203         INC     C
'00E5  ED78      0204         IN      A,(C)   ;B DATA
'00E7  E6F0      0205         AND     0F0H    ;MASK OFF LS 4BITS
'00E9  CB7D      0206         BIT     7,L     ;MOVE BIT 7 FROM A
'00EB  2802      0207         JR      Z,CRD1-$        ; TO BIT3 OF B
'00ED  F608      0208         OR      8
'00EF  CBBD      0209 CRD1    RES     7,L     ;BIT 7 OF A=0
'00F1  CB25      0210 CRD2    SLA     L       ;COUNT LOWER FIELD PUNCHES
'00F3  FAF800'   0211         JP      M,CRD3
'00F6  10F9      0212         DJNZ    CRD2-$
                 0213 ;
'00F8  80        0214 CRD3    ADD     A,B     ;LS 3 BITS OF DISPLACE-
'00F9  4F        0215         LD      C,A     ; MENT ADDED IN
'00FA  0600      0216         LD      B,0     ;BC=TOTAL DISPLACEMENT
'00FC  210801'   0217         LD      HL,HOLTAB       ;HL=HOLLERITH TABLE
'00FF  09        0218         ADD     HL,BC   ;GET ADDRESS OF CHAR
'0100  7E        0219         LD      A,(HL)  ;GET CHARACTER
'0101  12        0220         LD      (DE),A  ;STORE INTO BUFFER
'0102  13        0221         INC     DE      ;INCR PTR
'0103  F1        0222         POP     AF
'0104  3C        0223         INC     A       ;COUNT INTERRUPTS
'0105  FB        0224         EI
'0106  ED4D      0225         RETI
                 0226 ;
                 0227 ;
'0108  20        0228 HOLTAB  DEFB    ' '     ;BLANK
'0109  31        0229         DEFB    '1'     ;1
'010A  32        0230         DEFB    '2'     ;2
'010B  33        0231         DEFB    '3'     ;3
'010C  34        0232         DEFB    '4'     ;4
'010D  35        0233         DEFB    '5'     ;5
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:CR    .SRC

'010E  36        0234          DEFB    '6'     ;6
'010F  37        0235          DEFB    '7'     ;7
'0110  38        0236          DEFB    '8'     ;8
'0111  60        0237          DEFB    60H     ;8-1        BACK QUOTE
'0112  3A        0238          DEFB    ':'     ;8-2
'0113  23        0239          DEFB    '#'     ;8-3
'0114  40        0240          DEFB    '@'     ;8-4
'0115  27        0241          DEFB    27H     ;8-5
'0116  3D        0242          DEFB    '='     ;8-6
'0117  22        0243          DEFB    '"'     ;8-7
'0118  39        0244          DEFB    '9'     ;9
'0119  00        0245          DEFB    0       ;9-1
'011A  16        0246          DEFB    16H     ;9-2
'011B  00        0247          DEFB    0       ;9-3
'011C  00        0248          DEFB    0       ;9-4
'011D  00        0249          DEFB    0       ;9-5
'011E  00        0250          DEFB    0       ;9-6
'011F  04        0251          DEFB    04H     ;9-7
'0120  00        0252          DEFB    0       ;9-8
'0121  00        0253          DEFB    0       ;9-8-1
'0122  00        0254          DEFB    0       ;9-8-2
'0123  00        0255          DEFB    0       ;9-8-3
'0124  14        0256          DEFB    14H     ;9-8-4
'0125  15        0257          DEFB    15H     ;9-8-5
'0126  00        0258          DEFB    0       ;9-8-6
'0127  1A        0259          DEFB    1AH     ;9-8-7
'0128  30        0260          DEFB    '0'     ;0
'0129  2F        0261          DEFB    '/'     ;0-1
'012A  53        0262          DEFB    'S'     ;
'012B  54        0263          DEFB    'T'     ;0-3
'012C  55        0264          DEFB    'U'     ;0-4
'012D  56        0265          DEFB    'V'     ;0-5
'012E  57        0266          DEFB    'W'     ;0-6
'012F  58        0267          DEFB    'X'     ;0-7
'0130  59        0268          DEFB    'Y'     ;0-8
'0131  00        0269          DEFB    0       ;0-8-1
'0132  5D        0270          DEFB    5DH     ;0-8-2
'0133  2C        0271          DEFB    ','     ;0-8-3
'0134  25        0272          DEFB    '%'     ;0-8-4
'0135  5F        0273          DEFB    5FH     ;0-8-5
'0136  3E        0274          DEFB    '>'     ;0-8-6
'0137  3F        0275          DEFB    '?'     ;0-8-7
'0138  5A        0276          DEFB    'Z'     ;0-9
'0139  00        0277          DEFB    0       ;0-9-1
'013A  00        0278          DEFB    0       ;0-9-2
'013B  00        0279          DEFB    0       ;0-9-3
'013C  00        0280          DEFB    0       ;0-90-4
'013D  0A        0281          DEFB    0AH     ;0-9-5
'013E  17        0282          DEFB    017H    ;0-9-6
'013F  1B        0283          DEFB    1BH     ;0-9-7
'0140  00        0284          DEFB    0       ;0-9-8
'0141  00        0285          DEFB    0       ;0-9-8-1
'0142  00        0286          DEFB    0       ;0-9-8-2
'0143  00        0287          DEFB    0       ;0-90-8-3
'0144  00        0288          DEFB    0       ;0-9-8-4
'0145  05        0289          DEFB    05H     ;0-9-8-5
'0146  06        0290          DEFB    06H     ;0-9-8-6
'0147  07        0291          DEFB    07H     ;0-9-8-7
```

```
'0148  2D          0292          DEFB    '-'       ;11
'0149  4A          0293          DEFB    'J'       ;11-1
'014A  4B          0294          DEFB    'K'       ;11-2
'014B  4C          0295          DEFB    'L'       ;11-3
'014C  4D          0296          DEFB    'M'       ;11-4
'014D  4E          0297          DEFB    'N'       ;11-5
'014E  4F          0298          DEFB    'O'       ;11-6
'014F  50          0299          DEFB    'P'       ;11-7
'0150  51          0300          DEFB    'Q'       ;11-8
'0151  00          0301          DEFB    0         ;11-8-1
'0152  21          0302          DEFB    '!'       ;11-8-2
'0153  24          0303          DEFB    '$'       ;11-8-3
'0154  2A          0304          DEFB    '*'       ;11-8-4
'0155  29          0305          DEFB    ')'       ;11-8-5
'0156  3B          0306          DEFB    ';'       ;11-8-6
'0157  5C          0307          DEFB    5CH       ;11-8-7
'0158  52          0308          DEFB    'R'       ;11-9
'0159  11          0309          DEFB    11H       ;11-9-1
'015A  12          0310          DEFB    12H       ;11-9-2
'015B  13          0311          DEFB    13H       ;11-9-3
'015C  00          0312          DEFB    0         ;11-9-4
'015D  00          0313          DEFB    0         ;11-9-5
'015E  08          0314          DEFB    08H       ;11-9-6
'015F  00          0315          DEFB    0         ;11-9-7
'0160  18          0316          DEFB    18H       ;11-9-8
'0161  13          0317          DEFB    19        ;11-9-8-1
'0162  00          0318          DEFB    0         ;11-9-8-2
'0163  00          0319          DEFB    0         ;11-9-8-3
'0164  1C          0320          DEFB    1CH       ;11-9-8-4
'0165  1D          0321          DEFB    1DH       ;11-9-8-5
'0166  1E          0322          DEFB    1EH       ;11-9-8-6
'0167  1F          0323          DEFB    1FH       ;11-9-8-7
'0168  7D          0324          DEFB    7DH       ;11-0
'0169  7E          0325          DEFB    7EH       ;11-0-1
'016A  73          0326          DEFB    73H       ;11-0-2
'016B  74          0327          DEFB    74H       ;11-0-3
'016C  75          0328          DEFB    75H       ;11-0-4
'016D  76          0329          DEFB    76H       ;11-0-5
'016E  77          0330          DEFB    77H       ;11-0-6
'016F  78          0331          DEFB    78H       ;11-0-7
'0170  79          0332          DEFB    79H       ;11-0-8
'0171  00          0333          DEFB    0         ;11-0-8-1
'0172  00          0334          DEFB    0         ;11-0-8-2
'0173  00          0335          DEFB    0         ;11-0-8-3
'0174  00          0336          DEFB    0         ;11-0-8-4
'0175  00          0337          DEFB    0         ;11-0-8-5
'0176  00          0338          DEFB    0         ;11-0-8-6
'0177  00          0339          DEFB    0         ;11-0-8-7
'0178  7A          0340          DEFB    7AH       ;11-0-9
'0179  00          0341          DEFB    0         ;11-0-9-1
'017A  00          0342          DEFB    0         ;11-0-9-2
'017B  00          0343          DEFB    0         ;11-0-9-3
'017C  00          0344          DEFB    0         ;11-0-9-4
'017D  00          0345          DEFB    0         ;11-0-9-5
'017E  00          0346          DEFB    0         ;11-0-9-6
'017F  00          0347          DEFB    0         ;11-9-0-7
'0180  00          0348          DEFB    0         ;11-0-9-8
'0181  00          0349          DEFB    0         ;11-0-9-8-1
```

```
'0182  00          0350          DEFB    0         ;11-0-9-8-2
'0183  00          0351          DEFB    0         ;11-0-9-8-3
'0184  00          0352          DEFB    0         ;11-0-9-8-4
'0185  00          0353          DEFB    0         ;11-0-9-8-5
'0186  00          0354          DEFB    0         ;11-0-9-8-6
'0187  00          0355          DEFB    0         ;11-0-9-8-7
'0188  26          0356          DEFB    26H       ;12
'0189  41          0357          DEFB    'A'       ;12-1
'018A  42          0358          DEFB    'B'       ;12-2
'018B  43          0359          DEFB    'C'       ;12-3
'018C  44          0360          DEFB    'D'       ;12-4
'018D  45          0361          DEFB    'E'       ;12-5
'018E  46          0362          DEFB    'F'       ;12-6
'018F  47          0363          DEFB    'G'       ;12-7
'0190  48          0364          DEFB    'H'       ;12-8
'0191  00          0365          DEFB    0         ;12-8-1
'0192  5B          0366          DEFB    5BH       ;12-8-2
'0193  2E          0367          DEFB    '.'       ;12-8-3
'0194  3C          0368          DEFB    '<'       ;12-8-4
'0195  28          0369          DEFB    '('       ;12-8-5
'0196  2B          0370          DEFB    '+'       ;12-8-6
'0197  5E          0371          DEFB    5EH       ;12-8-7
'0198  49          0372          DEFB    'I'       ;12-9-
'0199  01          0373          DEFB    01H       ;12-9-1
'019A  02          0374          DEFB    02H       ;12-9-2
'019B  03          0375          DEFB    03H       ;12-9-3
'019C  00          0376          DEFB    0         ;12-9-4
'019D  09          0377          DEFB    09H       ;12-9-5
'019E  00          0378          DEFB    0         ;12-9-6
'019F  7F          0379          DEFB    7FH       ;12-9-7
'01A0  00          0380          DEFB    0         ;12-98
'01A1  00          0381          DEFB    0         ;12-9-8-1
'01A2  00          0382          DEFB    0         ;12-9-8-2
'01A3  0B          0383          DEFB    0BH       ;12-9-8-3
'01A4  0C          0384          DEFB    0CH       ;12-9-8-4
'01A5  0D          0385          DEFB    0DH       ;12-9-8-5
'01A6  0E          0386          DEFB    0EH       ;12-9-8-6
'01A7  0F          0387          DEFB    0FH       ;12-9-8-7
'01A8  7B          0388          DEFB    7BH       ;12-0
'01A9  61          0389          DEFB    61H       ;12-0-1
'01AA  62          0390          DEFB    62H       ;12-0-2
'01AB  63          0391          DEFB    63H       ;12-0-3
'01AC  64          0392          DEFB    64H       ;12-0-4
'01AD  65          0393          DEFB    65H       ;12-0-5
'01AE  66          0394          DEFB    66H       ;12-0-6
'01AF  67          0395          DEFB    67H       ;12-0-7
'01B0  68          0396          DEFB    68H       ;12-0-8
'01B1  00          0397          DEFB    0         ;12-0-8-1
'01B2  00          0398          DEFB    0         ;12-0-8-2
'01B3  00          0399          DEFB    0         ;12-0-8-3
'01B4  00          0400          DEFB    0         ;12-0-8-4
'01B5  00          0401          DEFB    0         ;12-0-8-5
'01B6  00          0402          DEFB    0         ;12-0-806
'01B7  00          0403          DEFB    0         ;12-0-8-7
'01B8  69          0404          DEFB    69H       ;12-0-9
'01B9  00          0405          DEFB    0         ;12-0-9-1
'01BA  00          0406          DEFB    0         ;12-0-9-2
'01BB  00          0407          DEFB    0         ;12-0-9-3
```

```
'01BC  00        0408          DEFB    0       ;12-0-9-4
'01BD  00        0409          DEFB    0       ;12-0-9-5
'01BE  00        0410          DEFB    0       ;12-0-9-6
'01BF  00        0411          DEFB    0       ;12-0-9-7
'01C0  00        0412          DEFB    0       ;12-0-9-8
'01C1  00        0413          DEFB    0       ;12-0-9-8-1
'01C2  00        0414          DEFB    0       ;12-0-9-8-2
'01C3  00        0415          DEFB    0       ;12-0-9-8-3
'01C4  00        0416          DEFB    0       ;12-0-9-8-4
'01C5  00        0417          DEFB    0       ;12-0-9-8-5
'01C6  00        0418          DEFB    0       ;12-0-9-8-6
'01C7  00        0419          DEFB    0       ;12-0-9-8-7
'01C8  7C        0420          DEFB    7CH     ;12-11
'01C9  6A        0421          DEFB    6AH     ;12-11-1
'01CA  6B        0422          DEFB    6BH     ;12-11-2
'01CB  6C        0423          DEFB    6CH     ;12-11-3
'01CC  6D        0424          DEFB    6DH     ;12-11-4
'01CD  6E        0425          DEFB    6EH     ;12-11-5
'01CE  6F        0426          DEFB    6FH     ;12-11-6
'01CF  70        0427          DEFB    70H     ;12-11-7
'01D0  71        0428          DEFB    71H     ;12-11-8
'01D1  00        0429          DEFB    0       ;12-11-8-1
'01D2  00        0430          DEFB    0       ;12-11-8-2
'01D3  00        0431          DEFB    0       ;12-11-8-3
'01D4  00        0432          DEFB    0       ;12-11-8-4
'01D5  00        0433          DEFB    0       ;12-11-8-5
'01D6  00        0434          DEFB    0       ;12-11-8-6
'01D7  00        0435          DEFB    0       ;12-11-8-7
'01D8  72        0436          DEFB    72H     ;12-11-9
'01D9  00        0437          DEFB    0       ;12-11-9-1
'01DA  00        0438          DEFB    0       ;12-11-9-2
'01DB  00        0439          DEFB    0       ;12-11-9-3
'01DC  00        0440          DEFB    0       ;12-11-9-4
'01DD  00        0441          DEFB    0       ;12-11-9-5
'01DE  00        0442          DEFB    0       ;12-11-9-6
'01DF  00        0443          DEFB    0       ;12-11-9-7
'01E0  00        0444          DEFB    0       ;12-11-9-8
'01E1  10        0445          DEFB    10H     ;12-11-9-8-1
'01E2  00        0446          DEFB    0
'01E3  00        0447          DEFB    0
'01E4  00        0448          DEFB    0
'01E5  00        0449          DEFB    0
'01E6  00        0450          DEFB    0
'01E7  00        0451          DEFB    0
'01E8  00        0452          DEFB    0
'01E9  00        0453          DEFB    0
'01EA  00        0454          DEFB    0
'01EB  00        0455          DEFB    0
'01EC  00        0456          DEFB    0
'01ED  00        0457          DEFB    0
'01EE  00        0458          DEFB    0
'01EF  00        0459          DEFB    0
'01F0  00        0460          DEFB    0
'01F1  00        0461          DEFB    0
'01F2  00        0462          DEFB    0
'01F3  00        0463          DEFB    0
'01F4  00        0464          DEFB    0
'01F5  00        0465          DEFB    0
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:CR    .SRC

'01F6  00        0466          DEFB    0
'01F7  00        0467          DEFB    0
'01F8  00        0468          DEFB    0
'01F9  00        0469          DEFB    0
'01FA  00        0470          DEFB    0
'01FB  00        0471          DEFB    0
'01FC  00        0472          DEFB    0
'01FD  00        0473          DEFB    0
'01FE  00        0474          DEFB    0
'01FF  00        0475          DEFB    0
'0200  00        0476          DEFB    0
'0201  00        0477          DEFB    0
'0202  00        0478          DEFB    0
'0203  00        0479          DEFB    0
'0204  00        0480          DEFB    0
'0205  00        0481          DEFB    0
'0206  00        0482          DEFB    0
'0207  00        0483          DEFB    0
'0208  00        0484          DEFB    0
'0209  00        0485          DEFB    0
                 0486          END

ERRORS=0000
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:PP    .SRC

                 0002          NAME    PP
                 0003 ;
                 0004 ; PAPER TAPE PUNCH DRIVER FOR FLP-80DOS V2.0
                 0005 ;
                 0006          GLOBAL  PP
                 0007          GLOBAL  EH
                 0008 ;
 >FF00           0009 TOR      EQU     0FF00H
 >0002           0010 IRET     EQU     2
 >0015           0011 CFLGS    EQU     21
 >0007           0012 TIMOUT   EQU     7
                 0013 ;
                 0014 ;
'>0000           0015 PP       EQU     $
'0000  04        0016          DEFB    4       ;MAX RQST
'0001  00        0017          DEFB    0
'0002  05        0018          DEFB    PPOPEN-$
'0003  2D        0019          DEFB    PPCLOS-$
'0004  00        0020          DEFB    0
'0005  2C        0021          DEFB    PPWRIT-$
                 0022 ;
'0006  AA        0023 PPST     DEFB    0AAH    ;PAPER TAPE PUNCH PORT
 >000B           0024 PPDIS    EQU     0BH     ;OFFSET FROM TOR FOR VECTOR
                 0025 ;
'0007  F3        0026 PPOPEN   DI              ;OPEN DEVICE
'0008  2A00FF    0027          LD      HL,(TOR)        ;ACCESS INTERRUPT TABLE
'000B  110B00    0028          LD      DE,PPDIS        ;VECTOR OFFSET FROM TOR
'000E  B7        0029          OR      A
'000F  ED52      0030          SBC     HL,DE
'0011  E5        0031          PUSH    HL
'0012  116D00'   0032          LD      DE,PINT ;DE -> INTERRUPT HANDLER
'0015  73        0033          LD      (HL),E  ;SAVE VECTOR ADDRESS
'0016  23        0034          INC     HL
'0017  72        0035          LD      (HL),D
'0018  D1        0036          POP     DE      ;DE = VECTOR ADDRESS
'0019  210600'   0037          LD      HL,PPST ;HL -> STATUS BYTE
'001C  CBC6      0038          SET     0,(HL)  ;SET READY BIT
'001E  4E        0039          LD      C,(HL)  ;GET PORT FOR CONTROL
'001F  3E0F      0040          LD      A,0FH   ;OUTPUT CONTROL
'0021  ED79      0041          OUT     (C),A
'0023  ED59      0042          OUT     (C),E   ;OUTPUT INTP VECTOR LSBYTE
'0025  3E83      0043          LD      A,83H   ;OUTPUT CONTROL
'0027  ED79      0044          OUT     (C),A
'0029  7A        0045          LD      A,D     ;SET VECTOR MSBYTE
'002A  ED47      0046          LD      I,A
'002C  010100    0047          LD      BC,1    ;PHYSICAL RECORD SIZE
'002F  FB        0048          EI
'0030  C9        0049 PPCLOSE  RET             ;RETURN TO CALLER
                 0050 ;
                 0051 ;
'0031  E5        0052 PPWRIT   PUSH    HL
'0032  C5        0053          PUSH    BC
'0033  F5        0054          PUSH    AF      ;SAVE BYTE TO OUTPUT
'0034  210600'   0055          LD      HL,PPST ;HL -> STATUS BYTE
'0037  01D007    0056          LD      BC,2000 ;2000 MSEC TIME OUT COUNT
'003A  C5        0057 PPA      PUSH    BC
'003B  0629      0058          LD      B,41    ;MSEC COUNTER
'003D  FB        0059 PPL      EI              ;ENABLE INTPS
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:PP    .SRC

'003E  CB46      0060         BIT     0,(HL)  ;CHECK FOR READY
'0040  201D      0061         JR      NZ,PPR-$        ;YES, SKIP
'0042  FDCB1556  0062         BIT     IRET,(IY+CFLGS) ;CHECK IMMED RETURN
'0046  2012      0063         JR      NZ,PPI-$        ;YES, SKIP OUT
'0048  10F3      0064         DJNZ    PPL-$   ;LOOP FOR TIMEOUT
'004A  C1        0065         POP     BC
'004B  0B        0066         DEC     BC      ;DECREMENT COUNT
'004C  78        0067         LD      A,B
'004D  B1        0068         OR      C
'004E  20EA      0069         JR      NZ,PPA-$        ;LOOP FOR TIMEOUT
'0050  3E07      0070         LD      A,TIMOUT        ;TIMEOUT ERROR MESSAGE
'0052  CDFFFF    0071         CALL    EH      ;OUTPUT THE MESSAGE
'0055  01204E    0072         LD      BC,20000        ;NEW TIMEOUT
'0058  18E0      0073         JR      PPA-$   ;LOOP AGAIN
               0074 ;
'005A  C1        0075 PPI     POP     BC      ;RESTORE STACK
'005B  F1        0076         POP     AF      ;RESTORE BYTE
'005C  C1        0077         POP     BC      ;RESTORE REGS
'005D  E1        0078         POP     HL
'005E  C9        0079         RET             ;RETURN TO CALLER
               0080 ;
'005F  C1        0081 PPR     POP     BC      ;RESTORE STACK
'0060  F1        0082         POP     AF      ;GET BYTE
'0061  CB86      0083         RES     0,(HL)  ;RESET READY BIT
'0063  4E        0084         LD      C,(HL)  ;GET PORT NUMBER
'0064  ED79      0085         OUT     (C),A   ;OUTPUT DATA TO PP
'0066  FDCB1596  0086         RES     IRET,(IY+CFLGS) ;RESET IMMED RETURN BIT
'006A  C1        0087         POP     BC      ;RESTORE REGS
'006B  E1        0088         POP     HL
'006C  C9        0089         RET             ;RETURN TO CALLER
               0090 ;
               0091 ;
'006D  E5        0092 PINT    PUSH    HL      ;PAPER TAPE PUNCH INTP HANDLER
'006E  210600'   0093         LD      HL,PPST
'0071  CBC6      0094         SET     0,(HL)
'0073  E1        0095         POP     HL
'0074  FB        0096         EI
'0075  ED4D      0097         RETI


ERRORS=0000
```

```
PR      COPYRIGHT 1978 MOSTEK CORP       MOSTEK FLP-80 ASSEMBLER V2.0 PAGE 0001
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:PR    .SRC

                0002          NAME    PR
                0003 ;
                0004 ; PAPER TAPE READER DRIVER FOR FLP-80DOS V2.0
                0005 ;
                0006          GLOBAL  PR
                0007          GLOBAL  EH
                0008 ;
 >0007          0009 TIMOUT   EQU     7
 >FF00          0010 TOR      EQU     0FF00H
 >0002          0011 IRET     EQU     2
 >0015          0012 CFLGS    EQU     21
                0013 ;
                0014 ;
'>0000          0015 PR       EQU     $
'0000  03       0016          DEFB    3         ;MAX REQST
'0001  05       0017          DEFB    PROPEN-$
'0002  00       0018          DEFB    0         ;OPENW
'0003  31       0019          DEFB    PRCLOS-$
'0004  31       0020          DEFB    PRREAD-$
                0021 ;
'0005  A8       0022 PRST     DEFB    0A8H      ;READER PORT NUMBER
 >0009          0023 PRDIS    EQU     09        ;VECTOR OFFSET FROM TOR
                0024 ;
                0025 ;
'0006  F3       0026 PROPEN   DI                ;DISABLE INTPS
'0007  2A00FF   0027          LD      HL,(TOR)          ;ACCESS INTERRUPT TABLE
'000A  110900   0028          LD      DE,PRDIS
'000D  B7       0029          OR      A
'000E  ED52     0030          SBC     HL,DE     ;ACCESS START OF TABLE
'0010  E5       0031          PUSH    HL        ;SAVE IT
'0011  116F00'  0032          LD      DE,RINT   ;PR INTERRUPT IS FIRST ENTRY
'0014  73       0033          LD      (HL),E    ;SAVE HANDLER ADDRESS
'0015  23       0034          INC     HL        ;IN INTP TABLE
'0016  72       0035          LD      (HL),D
'0017  D1       0036          POP     DE        ;DE = VECTOR ADDRESS
'0018  210500'  0037          LD      HL,PRST   ;HL = STATUS BYTE
'001B  CBC6     0038          SET     0,(HL)    ;SET FOR CONTROL
'001D  4E       0039          LD      C,(HL)    ;GET PORT NUMBER
'001E  3E4F     0040          LD      A,4FH     ;OUTPUT CONTROL
'0020  ED79     0041          OUT     (C),A
'0022  ED59     0042          OUT     (C),E     ;OUTPUT VECTOR LSBYTE
'0024  3E83     0043          LD      A,83H     ;OUTPUT CONTROL
'0026  ED79     0044          OUT     (C),A
'0028  7A       0045          LD      A,D       ;SET UP VECTOR MSBYTE
'0029  ED47     0046          LD      I,A
'002B  CB86     0047          RES     0,(HL)    ;INIT STATUS BIT
'002D  4E       0048          LD      C,(HL)    ;GET PORT
'002E  ED70     0049          IN      F,(C)     ;READ PORT TO INITIALIZE OPERATIO
'0030  010100   0050          LD      BC,1      ;PHYSICAL RECORD SIZE= 1 BYTE
'0033  FB       0051          EI                ;ENABLE INTPS
'0034  C9       0052 PRCLOS   RET               ;RETURN TO CALLER
                0053 ;
                0054 ;
'0035  E5       0055 PRREAD   PUSH    HL
'0036  C5       0056          PUSH    BC
'0037  210500'  0057          LD      HL,PRST   ;HL -> STATUS BYTE
'003A  01FA00   0058          LD      BC,250    ;TIMEOUT = 250 MSEC
'003D  C5       0059 PRA      PUSH    BC        ;SAVE
```

ADDR OBJECT ST # SOURCE STATEMENT DATASET = DK0:PR .SRC

```
'003E  0629        0060           LD      B,41     ;MSEC COUNTER
'0040  FB          0061 PRL       EI               ;ENABLE INTPS
'0041  CB46        0062           BIT     0,(HL)   ;CHECK IF READY
'0043  2018        0063           JR      NZ,PRR-$         ;YES, SKIP
'0045  FDCB1556    0064           BIT     IRET,(IY+CFLGS) ;CHECK FOR IMMED RETURN
'0049  2020        0065           JR      NZ,PRI-$         ;IF SO, SKIP OUT
'004B  10F3        0066           DJNZ    PRL-$    ;LOOP FOR TIMEOUT
'004D  C1          0067           POP     BC
'004E  0B          0068           DEC     BC       ;DECREMENT COUNTER
'004F  78          0069           LD      A,B      ;CHECK COUNT
'0050  B1          0070           OR      C
'0051  20EA        0071           JR      NZ,PRA-$
'0053  3E07        0072           LD      A,TIMOUT         ;TIME OUT ERROR CODE
'0055  CDFFFF      0073           CALL    EH
'0058  01204E      0074           LD      BC,20000         ;NEW TIME OUT COUNT
'005B  18E0        0075           JR      PRA-$
                   0076 ;
'005D  C1          0077 PRR       POP     BC
'005E  CB86        0078           RES     0,(HL)   ;ZERO DATA AVAILABLE FLAG
'0060  4E          0079           LD      C,(HL)   ;GET PORT FOR DATA
'0061  ED78        0080           IN      A,(C)    ;GET DATA
'0063  2F          0081           CPL              ;COMPLEMENT THE DATA
'0064  FDCB1596    0082           RES     IRET,(IY+CFLGS) ;RESET IMMED RETURN
'0068  C1          0083           POP     BC
'0069  E1          0084           POP     HL
'006A  C9          0085           RET              ;RETURN TO CALLER
                   0086 ;
'006B  C1          0087 PRI       POP     BC
'006C  C1          0088           POP     BC
'006D  E1          0089           POP     HL
'006E  C9          0090           RET              ;RETURN TO CALLER
                   0091 ;
                   0092 ;
'006F  E5          0093 RINT      PUSH    HL       ;READER INTERRUPT HANDLER
'0070  210500'     0094           LD      HL,PRST
'0073  CBC6        0095           SET     0,(HL)   ;SET READY BIT
'0075  E1          0096           POP     HL
'0076  FB          0097           EI
'0077  ED4D        0098           RETI


ERRORS=0000
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:STI   .SRC

                 0002          NAME    TI
                 0003 ;
                 0004 ; SILENT 700 TAPE INPUT HANDLER FOR FLP-80DOS V2.0
                 0005 ; COMPATIBLE WITH PREVIOUS SYSTEMS
                 0006 ;
                 0007          GLOBAL  MINDIS
                 0008          GLOBAL  MINEN
                 0009          GLOBAL  TI
                 0010 ;
 >001E           0011 HSCR     EQU     30
 >0011           0012 DC1      EQU     11H
 >0013           0013 DC3      EQU     13H
                 0014 ;
'>0000           0015 TI       EQU     $
'0000  03        0016          DEFB    3
'0001  04        0017          DEFB    TIOPEN-$
'0002  00        0018          DEFB    0
'0003  FD        0019          DEFB    TICLOS-$
'0004  10        0020          DEFB    TIREAD-$
                 0021 ;
                 0022 ;
'0005  FD361E00  0023 TIOPEN   LD      (IY+HSCR),0     ;ZERO BUFFER COUNTER
'0009  FD362000  0024          LD      (IY+HSCR+2),0   ;ZERO NULL COUNTER
'000D  CDFFFF    0025          CALL    MINDIS  ;DISABLE MINIMAL LISTENER
'0010  010100    0026          LD      BC,1    ;PHYSICAL RECORD SIZE
'0013  C9        0027          RET
                 0028 ;
'0014  E5        0029 TIREAD   PUSH    HL
'0015  C5        0030          PUSH    BC
'0016  FD7E1E    0031          LD      A,(IY+HSCR)     ;GET BUFFER COUNT
'0019  A7        0032          AND     A       ;CHECK IT
'001A  2051      0033          JR      NZ,TIB-$        ;IF NOT ZERO, SKIP
                 0034 ;
                 0035 ; READ A RECORD FROM TAPE INTO THE BUFFER
                 0036 ;
'001C  3E11      0037          LD      A,DC1   ;START THE TRANSPORT
'001E  CD0D01'   0038          CALL    S700P
'0021  218000'   0039          LD      HL,TIBUF        ;HL -> BUFFER
'0024  01D007    0040 TI1      LD      BC,2000 ;2 SECOND TIMEOUT
'0027  C5        0041 TI1A     PUSH    BC
'0028  0630      0042          LD      B,48    ;MSEC COUNT
'002A  DBDD      0043 TI2      IN      A,(0DDH)        ;CHECK THE UART STATUS
'002C  CB77      0044          BIT     6,A
'002E  200A      0045          JR      NZ,TI3-$        ;IF READY, SKIP
'0030  10F8      0046          DJNZ    TI2-$   ;LOOP FOR MSECOND
'0032  C1        0047          POP     BC
'0033  0B        0048          DEC     BC      ;DECREMENT BC COUNTER
'0034  78        0049          LD      A,B     ;CHECK TIMEOUT COUNTER
'0035  B1        0050          OR      C
'0036  20EF      0051          JR      NZ,TI1A-$       ; IF NOT TIMEOUT,LOOP
'0038  1811      0052          JR      TI3A-$  ;ELSE FAKE AN END OF FILE
                 0053 ;
'003A  C1        0054 TI3      POP     BC
'003B  DBDC      0055          IN      A,(0DCH)        ;GET DATA BYTE
'003D  E67F      0056          AND     7FH     ;REMOVE PARITY
'003F  200E      0057          JR      NZ,TI4-$        ;IF NOT NULL, SKIP
                 0058 ; NULL FOUND, COUNT IT.  IF UP TO 127 NULLS,
                 0059 ; FORCE EOT = 04H.
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:STI   .SRC

'0041  FD3420    0060         INC     (IY+HSCR+2)     ;INCR NULL COUNTER
'0044  FD7E20    0061         LD      A,(IY+HSCR+2)   ;GET NULL COUNTER
'0047  FE7F      0062         CP      127     ;CHECK IT FOR MAX
'0049  38D9      0063         JR      C,TI1-$ ;IF NOT TOO BIG, JUST IGNORE
'004B  3E04      0064 TI3A    LD      A,4     ;ELSE FORCE EOT
'004D  180C      0065         JR      TI4A-$  ;AND GET OUT
                 0066 ;
'004F  FD362000  0067 TI4     LD      (IY+HSCR+2),0   ;REINIT NULL COUNTER
'0053  FE7F      0068         CP      7FH     ;IGNORE RUBOUT
'0055  28CD      0069         JR      Z,TI1-$
'0057  FE13      0070         CP      DC3     ;CHECK FOR END OF RECORD
'0059  2809      0071         JR      Z,TI5-$ ;YES, SKIP
'005B  77        0072 TI4A    LD      (HL),A  ;ELSE STUFF THE BUFFER
'005C  FD341E    0073         INC     (IY+HSCR)       ;INCREMENT COUNTER
'005F  23        0074         INC     HL      ;INCREMENT BUFFER POINTER
'0060  FE04      0075         CP      4       ;CHECK FOR END OF FILE
'0062  20C0      0076         JR      NZ,TI1-$        ;NO, LOOP FOR MORE
                 0077 ;
'0064  3E13      0078 TI5     LD      A,DC3   ;TURN OFF TRANSPORT
'0066  CD0D01'   0079         CALL    S700P
'0069  FD361F00  0080         LD      (IY+HSCR+1),0   ;ZERO BUFFER POINTER
                 0081 ;
                 0082 ; DEBLOCK THE BUFFER
                 0083 ;
'006D  FD4E1F    0084 TIB     LD      C,(IY+HSCR+1)   ;GET BUFFER POINTER
'0070  0600      0085         LD      B,0
'0072  218000'   0086         LD      HL,TIBUF        ;HL -> BUFFER
'0075  09        0087         ADD     HL,BC   ;GET BUFFER ADDRESS
'0076  7E        0088         LD      A,(HL)  ;GET RETURNED CHARACTER
'0077  FD341F    0089         INC     (IY+HSCR+1)     ;INCREMENT BUFFER POINTER
'007A  FD351E    0090         DEC     (IY+HSCR)       ;DECREMENT COUNTER
'007D  C1        0091         POP     BC
'007E  E1        0092         POP     HL      ;RESTORE REGS
'007F  C9        0093         RET             ;RETURN TO CALLER
                 0094 ;
'>0080           0095 TIBUF   DEFS    128
                 0096 ;
'0100  3E13      0097 TICLOS  LD      A,DC3   ;ASSURE TRANSPORT IS OFF
'0102  CD0D01'   0098         CALL    S700P
'0105  FD361E00  0099         LD      (IY+HSCR),0     ;ZERO BUFFER COUNTER
'0109  CDFFFF    0100         CALL    MINEN   ;REENABLE MINIMAL LISTENER
'010C  C9        0101         RET
                 0102 ;
'010D  F5        0103 S700P   PUSH    AF      ;OUTPUT CHARACTER
'010E  DBDD      0104 S700R   IN      A,(0DDH)        ;CHECK UART STATUS
'0110  CB7F      0105         BIT     7,A
'0112  28FA      0106         JR      Z,S700R-$       ;IF NOT READY, LOOP
'0114  F1        0107         POP     AF      ;GET BYTE
'0115  D3DC      0108         OUT     (0DCH),A        ;OUTPUT IT
'0117  C9        0109         RET
                 0110 ;


ERRORS=0000
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:TK    .SRC

                 0002          NAME    TK
                 0003 ;****************************************
                 0004 ;*                                      *
                 0005 ;*       KEYBOARD INPUT DRIVER AND      *
                 0006 ;*       MINIMAL LISTNER SERVICE ROUTINE.*
                 0007 ;*                                      *
                 0008 ;*       ID: TK                         *
                 0009 ;*                                      *
                 0010 ;*       PROGRAMMER: JOHN BATES         *
                 0011 ;*                   M. FREEMAN         *
                 0012 ;*       DATE: 6/1/78                   *
                 0013 ;****************************************
                 0014 ;        INTERNAL GLOBAL VARIABLES
                 0015 ;
                 0016          GLOBAL  TK
                 0017          GLOBAL  MINLIS
                 0018 ;
                 0019 ;        EXTERNAL GLOBAL VARIABLES
                 0020 ;
                 0021          GLOBAL  ENTRY   ;DDT-80 BREAK PT ENTRY
                 0022          GLOBAL  REBOOT  ;SYSTEM REBOOT ADDRESS
                 0023 ;
                 0024 ;        SYSTEM VARIABLES
                 0025 ;
 >00D9           0026 CTC1     EQU     0D9H
 >0015           0027 CFLGS    EQU     21
 >0002           0028 IRET     EQU     2
 >FF25           0029 TKST     EQU     0FF25H
 >FF24           0030 MINFLG   EQU     0FF24H
 >FF06           0031 COUNT    EQU     0FF06H
 >FF13           0032 LONG     EQU     0FF13H
 >00DD           0033 UCTL     EQU     0DDH    ;UART CONTROL PORT
 >00DC           0034 UDATA    EQU     0DCH
 >0003           0035 ETX      EQU     03
 >0018           0036 CAN      EQU     18H
                 0037 ;*********************************
                 0038 ;*       TK INPUT DRIVER         *
                 0039 ;*********************************
'>0000           0040 TK       EQU     $
'0000  03        0041          DEFB    3       ;MAX REQUEST
'0001  04        0042          DEFB    TKOPEN-$ ;OPENR
'0002  00        0043          DEFB    0       ;OPENW
'0003  09        0044          DEFB    TKCLOS-$ ;CLOSE
'0004  09        0045          DEFB    TKREAD-$ ;READ
                 0046 ;
'>0005           0047 TKOPEN   EQU     $
'0005  3E03      0048          LD      A,3             ; TURN ON CTS
'0007  D3DE      0049 TKO1     OUT     (0DEH),A
'0009  010100    0050          LD      BC,1    ;PHYS REC SIZE
'000C  C9        0051 TKCLOS   RET             ;RETURN TO CALLER
                 0052 ;
                 0053 ;
'>000D           0054 TKREAD   EQU     $
'000D  3A25FF    0055 TTI      LD      A,(TKST)        ; FROM ESCAPE TEST
'0010  B7        0056          OR      A               ; IF NZ
'0011  2010      0057          JR      NZ,TTID1A-$
'0013  DBDD      0058 TTID0    IN      A,(0DDH)        ;CHECK UART STATUS
'0015  CB77      0059          BIT     6,A
```

ADDR OBJECT ST # SOURCE STATEMENT DATASET = DK0:TK .SRC

```
'0017  2008      0060          JR      NZ,TTID1-$      ;READY, SKIP
'0019  FDCB1556  0061          BIT     IRET,(IY+CFLGS) ;IMMED RETURN?
'001D  28EE      0062          JR      Z,TTI-$         ;NO, LOOP
'001F  BF        0063          CP      A
'0020  C9        0064          RET             ; YES, EXIT
               0065 ;
'>0021           0066 TTID1     EQU     $
'0021  DBDC      0067          IN      A,(0DCH)        ;GET DATA
'0023  FDCB1596  0068 TTID1A   RES     IRET,(IY+CFLGS) ;CLEAR IMMED RET BIT
'0027  CBBF      0069          RES     7,A             ;CLEAR PARITY
'0029  F5        0070          PUSH    AF
'002A  AF        0071          XOR     A
'002B  3225FF    0072          LD      (TKST),A        ; CLEAR HOLD REG.
'002E  3A24FF    0073          LD      A,(MINFLG)      ;MINIMAL LISTNER ENABLED ?
'0031  B7        0074          OR      A
'0032  2002      0075          JR      NZ,TT1D1B-$     ;IF YES, TEST FOR TRAPS
'0034  F1        0076          POP     AF
'0035  C9        0077          RET
'0036  F1        0078 TT1D1B   POP     AF
'0037  FE18      0079          CP      CAN
'0039  280E      0080          JR      Z,TTICAN-$
'003B  FE03      0081          CP      ETX
'003D  C0        0082          RET     NZ              ;NORMAL DATA
'003E  3E01      0083          LD      A,1             ;EXIT TO DDT
'0040  3213FF    0084          LD      (LONG),A
'0043  3206FF    0085          LD      (COUNT),A
'0046  C3FFFF    0086          JP      ENTRY           ;JUMP TO DDT BREAK PT
'0049  3E01      0087 TTICAN   LD      A,1
'004B  D3D9      0088          OUT     (0D9H),A        ;KILL MIN. LIST.
'004D  C3FFFF    0089          JP      REBOOT
               0090 ;*****************************************
               0091 ;*                                       *
               0092 ;*      MINIMAL LISTNER INTERRUPT        *
               0093 ;*      SERVICE ROUTINE                  *
               0094 ;*                                       *
               0095 ;*****************************************
'0050  F5        0096 MINLIS   PUSH    AF              ;SAVE CHARACTER
'0051  DBDD      0097          IN  A,(UCTL)            ;DATA READY ?
'0053  CB77      0098          BIT     6,A
'0055  281F      0099          JR      Z,MLIS1-$
'0057  DBDC      0100          IN  A,(UDATA)           ;GET A CHAR
'0059  E67F      0101          AND     7FH
'005B  FE18      0102          CP      CAN             ;CNTL X ?
'005D  281B      0103          JR      Z,MLIS3-$
'005F  FE03      0104          CP      ETX             ;CNTL C
'0061  2010      0105          JR  NZ,MLIS2-$          ;EXIT
'0063  3E01      0106          LD      A,1
'0065  3206FF    0107          LD  (COUNT),A
'0068  3213FF    0108          LD  (LONG),A
'006B  F1        0109          POP     AF              ;GOTO DDT
'006C  E5        0110          PUSH    HL
'006D  214700'   0111          LD      HL,ENTRY;CTL C TRAP TO DDT
'0070  E3        0112 MLIS4    EX      (SP),HL
'0071  1804      0113          JR      MLIS0-$
'0073  3225FF    0114 MLIS2    LD      (TKST),A        ;SAVE FOR BACKGROUND
'0076  F1        0115 MLIS1    POP     AF              ;SAVE AF
'0077  FB        0116 MLIS0    EI
'0078  ED4D      0117          RETI                    ;EXIT
```

```
TK      COPYRIGHT MOSTEK CORP 1978       MOSTEK FLP-80 ASSEMBLER V2.0 PAGE 0003
 ADDR   OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:TK     .SRC

'007A   3E01      0118 MLIS3   LD      A,1
'007C   D3D9      0119         OUT     (CTC1),A        ;TURN OFF MINIMAL LISTNER
'007E   214E00'   0120         LD      HL,REBOOT               ;CTL X TRAP TO BOO
'0081   18ED      0121         JR      MLIS4-$
                  0122 ;
                  0123         END


ERRORS=0000
```

```
TO      COPYRIGHT 1978 MOSTEK CORP       MOSTEK FLP-80 ASSEMBLER V2.0 PAGE 0001
 ADDR   OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:STO    .SRC

                 0002          NAME    TO
                 0003 ;
                 0004 ; SILENT 700 TAPE OUTPUT HANDLER
                 0005 ; COMPATIBLE WITH PREVIOUS SYSTEMS
                 0006 ; FOR FLP-80DOS V2.0
                 0007 ;
                 0008          GLOBAL  TO
                 0009 ;
 >001E           0010 HSCR     EQU     30
 >0011           0011 DC1      EQU     11H
 >0012           0012 DC2      EQU     12H
 >0013           0013 DC3      EQU     13H
 >0014           0014 DC4      EQU     14H
                 0015 ;
                 0016 ;
'>0000           0017 TO       EQU     $
'0000  04        0018          DEFB    4
'0001  00        0019          DEFB    0
'0002  04        0020          DEFB    TOOPEN-$
'0003  6D        0021          DEFB    TOCLOS-$
'0004  00        0022          DEFB    0
'0005  09        0023          DEFB    TOWRIT-$
                 0024 ;
                 0025 ;
'0006  FD361E00  0026 TOOPEN   LD      (IY+HSCR),0     ;ZERO POINTER
'000A  010100    0027          LD      BC,1    ;PHYS RECORD SIZE
'000D  C9        0028          RET             ;RETURN TO CALLER
                 0029 ;
                 0030 ;
'000E  C5        0031 TOWRIT   PUSH    BC
'000F  E5        0032          PUSH    HL
'0010  FD4E1E    0033          LD      C,(IY+HSCR)     ;GET BUFFER COUNT
'0013  0600      0034          LD      B,0
'0015  217A00'   0035          LD      HL,TOBUF        ;HL -> BLOCKING BUFFER
'0018  09        0036          ADD     HL,BC   ;GET TO POINT IN BUFFER
'0019  77        0037          LD      (HL),A  ;PUT CHAR INTO BUFFER
'001A  FD341E    0038          INC     (IY+HSCR)       ;INCREMENT POINTER
'001D  FE0A      0039          CP      0AH     ;CHECK FOR LF
'001F  2804      0040          JR      Z,TOB-$ ;YES, SKIP OUT
'0021  FE04      0041          CP      4       ;CHECK FOR END OF FILE
'0023  2048      0042          JR      NZ,TO5-$
                 0043 ;
                 0044 ; WRITE OUT BUFFER TO DEVICE
                 0045 ;
'0025  3E12      0046 TOB      LD      A,DC2   ;START RECORD OPERATION
'0027  CDFA00'   0047          CALL    S700P
'002A  217A00'   0048          LD      HL,TOBUF        ;HL -> BUFFER
                 0049 ;
'002D  7E        0050 TO2      LD      A,(HL)  ;GET CHARACTER FROM BUFFER
'002E  23        0051          INC     HL
'002F  FE7F      0052          CP      7FH     ;IGNORE RUBOUT
'0031  28FA      0053          JR      Z,TO2-$
'0033  FE11      0054          CP      DC1     ;IGNORE DC1 - DC4
'0035  3804      0055          JR      C,TO3-$
'0037  FE15      0056          CP      DC4+1
'0039  38F2      0057          JR      C,TO2-$
                 0058 ;
'003B  CDFA00'   0059 TO3      CALL    S700P   ;OUTPUT THE CHARACTER
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:STO   .SRC

'003E  FE04      0060         CP      4       ;CHECK FOR END OF FILE
'0040  200F      0061         JR      NZ,TO3A-$       ;NO, SKIP
               0062 ; OUTPUT 86 NULLS TO FLUSH BUFFER TO
               0063 ; TERMINATE CONTINUOUS MODE
'0042  0656      0064         LD      B,86
'0044  AF        0065 TO3L    XOR     A
'0045  CDFA00'   0066         CALL    S700P
'0048  10FA      0067         DJNZ    TO3L-$
               0068 ; OUTPUT A CARRIAGE RETURN AFTER THE EOT
'004A  3E0D      0069         LD      A,0DH   ;FOR LINE MODE TERMINATION
'004C  CDFA00'   0070         CALL    S700P
'004F  1804      0071         JR      TO4-$   ;AND SKIP OUT
               0072 ;
'0051  FE0A      0073 TO3A    CP      0AH     ;CHECK FOR LF
'0053  20D8      0074         JR      NZ,TO2-$        ;IF NOT, LOOP FOR MORE
               0075 ;
'0055  3E13      0076 TO4     LD      A,DC3   ;OUTPUT CONTROL CHARACTERS
'0057  CDFA00'   0077         CALL    S700P   ;AT END OF RECORD
'005A  3E7F      0078         LD      A,7FH
'005C  CDFA00'   0079         CALL    S700P
'005F  3E14      0080         LD      A,DC4
'0061  CDFA00'   0081         CALL    S700P
'0064  3E7F      0082         LD      A,7FH
'0066  CDFA00'   0083         CALL    S700P
'0069  FD361E00  0084         LD      (IY+HSCR),0     ;REINIT BUFFER POINTER
'006D  E1        0085 TO5     POP     HL
'006E  C1        0086         POP     BC
'006F  C9        0087         RET             ;RETURN TO CALLER
               0088 ;
               0089 ;
'0070  3E14      0090 TOCLOS  LD      A,DC4   ;ASSURE TAPE IS OFF
'0072  CDFA00'   0091         CALL    S700P
'0075  FD361E00  0092         LD      (IY+HSCR),0     ;REINIT POINTER
'0079  C9        0093         RET
               0094 ;
'>007A           0095 TOBUF   DEFS    128
               0096 ;
'00FA  F5        0097 S700P   PUSH    AF      ;SAVE BYTE
'00FB  DBDD      0098 S700R   IN      A,(0DDH)        ;CHECK UART STATUS
'00FD  CB7F      0099         BIT     7,A
'00FF  28FA      0100         JR      Z,S700R-$
'0101  F1        0101         POP     AF      ;OUTPUT THE BYTE
'0102  D3DC      0102         OUT     (0DCH),A
'0104  C9        0103         RET
               0104 ;


ERRORS=0000
```

```
TR      COPYRIGHT 1978 MOSTEK CORP       MOSTEK FLP-80 ASSEMBLER V2.0 PAGE 0001
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:TR    .SRC

                 0002          NAME    TR
                 0003 ;*************************************************
                 0004 ;*       TITLE: DRIVER FOR TELETYPE TAPE READER  *
                 0005 ;*                                               *
                 0006 ;*       ID:  PR    VERSION 2.0                  *
                 0007 ;*                                               *
                 0008 ;*       PROGRAMMER: JOHN BATES                  *
                 0009 ;*                                               *
                 0010 ;*       DATE: 6/20/78                           *
                 0011 ;*************************************************
                 0012 ;
                 0013 ;        SYSTEM EQUATES
                 0014 ;
 >0011           0015 DC1      EQU     11H
 >0012           0016 DC2      EQU     12H
 >0013           0017 DC3      EQU     13H
 >0014           0018 DC4      EQU     14H
 >0017           0019 ERRC     EQU     23        ;ERROR CODE OFFSET
 >0015           0020 CFLGS    EQU     21
 >0007           0021 TIMOUT   EQU     7         ;TIME OUT ERROR CODE
 >1A40           0022 MS250    EQU     6720
 >0002           0023 IRET     EQU     2
                 0024          GLOBAL  MINDIS
                 0025          GLOBAL  MINEN
                 0026          GLOBAL  TR
                 0027 ;
                 0028 ;
'>0000           0029 TR       EQU     $
'0000  03        0030          DEFB    3         ;MAX REQUEST
'0001  04        0031          DEFB    TROPEN-$  ;OPENR
'0002  00        0032          DEFB    0         ;OPENW
'0003  09        0033          DEFB    TRCLOS-$  ;CLOSE
'0004  0C        0034          DEFB    TRREAD-$  ;READ
                 0035 ;
                 0036 ;
'>0005           0037 TROPEN   EQU     $
'0005  CDFFFF    0038          CALL    MINDIS            ;DISABLE MINIMAL LISTNER
'0008  010100    0039          LD      BC,1      ;PHYSICAL RECORD SIZE=1
'000B  C9        0040          RET
                 0041 ;
'000C  CDFFFF    0042 TRCLOS   CALL    MINEN             ;ENABLE MINIMAL LISTNER
'000F  C9        0043          RET
                 0044 ;
                 0045 ;
                 0046 ;
'0010  C5        0047 TRREAD   PUSH    BC        ;SAVE BC-REG
'0011  3E07      0048          LD      A,7       ;TURN ON READER
'0013  D3DE      0049          OUT     (0DEH),A
                 0050 ;
'0015  01401A    0051          LD      BC,MS250  ;TIME OUT
'0018  DBDE      0052 TRD1     IN      A,(0DEH)          ; TEST FOR START OF CHAR
'001A  CB7F      0053          BIT     7,A
'001C  200B      0054          JR      NZ,TRD2-$         ; GOT IT
'001E  0B        0055          DEC     BC
'001F  78        0056          LD      A,B
'0020  B1        0057          OR      C
'0021  20F5      0058          JR      NZ,TRD1-$
'0023  FD361707  0059          LD      (IY+ERRC),TIMOUT ;TIMEOUT ERROR
```

ADDR OBJECT ST # SOURCE STATEMENT DATASET = DKO:TR .SRC

```
'0027  C1        0060          POP     BC       ; ERROR OUT
'0028  C9        0061          RET
                 0062 ;
'0029  3E03      0063 TRD2     LD      A,3              ;TURN OFF READER
'002B  D3DE      0064          OUT     (0DEH),A
'002D  C1        0065          POP     BC
'002E  180B      0066          JR      TKREAD-$         ;GET CHAR
                 0067 ;
'0030  F5        0068 TTWRIT   PUSH    AF               ;SAVE CHAR
'0031  DBDD      0069 TTOD0    IN      A,(0DDH)         ;CHECK UART STATUS
'0033  CB7F      0070          BIT     7,A
'0035  28FA      0071          JR      Z,TTOD0-$        ;IF NOT READY, LOOP
'0037  F1        0072 TTOD1    POP     AF               ;RESTORE CHARACTER
'0038  D3DC      0073          OUT     (0DCH),A         ;OUTPUT IT
'003A  C9        0074          RET
                 0075 ;
'003B  DBDD      0076 TKREAD   IN      A,(0DDH)         ;CHECK UART STATUS
'003D  CB77      0077          BIT     6,A
'003F  2008      0078          JR      NZ,TTID1-$       ;READ, SKIP
'0041  FDCB1556  0079          BIT     IRET,(IY+CFLGS)  ;IMMED RETURN?
'0045  28F4      0080          JR      Z,TKREAD-$       ;NO, LOOP
'0047  BF        0081          CP      A
'0048  C9        0082          RET                      ;YRES, EXIT
                 0083 ;
'0049  DBDC      0084 TTID1    IN      A,(0DCH)         ;GET DATA
'004B  FDCB1596  0085 TTID1A   RES     IRET,(IY+CFLGS)  ;CLEAR IMMED RET BIT
'004F  CBBF      0086          RES     7,A              ;CLEAR PARITY
'0051  C9        0087          RET
                 0088 ;
                 0089          END

ERRORS=0000
```

```
TT      COPYRIGHT 1977 MOSTEK CORP       MOSTEK FLP-80 ASSEMBLER V2.0 PAGE 0001
 ADDR   OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:TT    .SRC

                 0002          NAME    TT
                 0003 ;*************************************************
                 0004 ;*       TERMINAL OUTPUT DRIVER                  *
                 0005 ;*       (CRT,S700 OR TELETYPE)                  *
                 0006 ;*                                               *
                 0007 ;*       ID: TT  VERSION 2.0                     *
                 0008 ;*                                               *
                 0009 ;*       PROGRAMMER: JOHN BATES                  *
                 0010 ;*                                               *
                 0011 ;*       DATE:   6/16/78                         *
                 0012 ;*************************************************
                 0013 ;
                 0014 ;
                 0015          GLOBAL  TT
'>0000           0016 TT       EQU     $
                 0017 ;
                 0018 ; TELETYPE, S700  OR CRT DRIVER
                 0019 ;
'0000  04        0020          DEFB    4         ;MAX REQUEST
'0001  00        0021          DEFB    0         ;OPENR
'0002  05        0022          DEFB    TTOPEN-$  ;OPENW
'0003  07        0023          DEFB    TTCLOS-$  ;CLOSE
'0004  00        0024          DEFB    0         ;READ
'0005  06        0025          DEFB    WRITE-$   ;WRITE
                 0026 ;
 >FFE0           0027 BRATE    EQU     0FFE0H    ;BAUD RATE VARIABE
 >0050           0028 LWIDTH   EQU     80        ;TERMINAL LINE WIDTH
'0006  00        0029 HCTR     DEFB    0         ;HORIZONTAL COLUMN COUNTER
                 0030 ;
                 0031 ;
'0007  010100    0032 TTOPEN   LD      BC,1      ;PHYSICAL RECORD SIZE = 1
'000A  C9        0033 TTCLOS   RET
                 0034 ;
                 0035 ;
'000B  FE09      0036 WRITE    CP      9                 ;CHAR = TAB ?
'000D  2015      0037          JR      NZ,WRITE1-$
'000F  C5        0038          PUSH    BC
'0010  3A0600'   0039          LD      A,(HCTR)          ;IF TAB THEN FETCH HCTR
'0013  47        0040          LD      B,A
'0014  E6F8      0041          AND     0F8H
'0016  C608      0042          ADD     A,8               ;FIND NEXT TAB LOC
'0018  0E20      0043          LD      C,' '             ;SPACE OUT
'001A  90        0044          SUB     B                 ;NUMBER OF SPACES
'001B  47        0045          LD      B,A
'001C  79        0046 TT6      LD      A,C
'001D  CD2400'   0047          CALL    WRITE1            ;OUTPUT SPACE
'0020  10FA      0048          DJNZ    TT6-$
'0022  C1        0049          POP     BC
'0023  C9        0050          RET
                 0051 ;
'0024  F5        0052 WRITE1   PUSH    AF                ;SAVE CHARACTER
'0025  FE08      0053          CP      8         ;DECREMENT CHARACTER COUNTER FOR
'0027  2009      0054          JR      NZ,TT6A-$         ;BACKSPACE = 08H
'0029  3A0600'   0055          LD      A,(HCTR)
'002C  3D        0056          DEC     A
'002D  320600'   0057          LD      (HCTR),A
'0030  181D      0058          JR      TT20-$
                 0059 ;
```

ADDR OBJECT ST # SOURCE STATEMENT DATASET = DK0:TT .SRC

```
'0032  FE0D      0060 TT6A    CP      0DH             ;DO NOT INCREMENT HCTR
'0034  3819      0061         JR      C,TT20-$        ;FOR LF=0A OR FF=0C.
'0036  2811      0062         JR      Z,TT14-$        ;IF CHAR=CR CLEAR HCTR
'0038  3A0600'   0063         LD      A,(HCTR)
'003B  FE50      0064         CP      LWIDTH          ;END OF LINE REACHED ?
'003D  200C      0065         JR      NZ,TT16-$       ;IF NOT INCREMENT HCTR
'003F  3E0D      0066         LD      A,0DH           ;IF END OF LNE IS
'0041  CD2400'   0067         CALL    WRITE1          ;REACHED THEN AUTOMATICALLY
'0044  3E0A      0068         LD      A,0AH           ;OUTPUT A CR AND LF.
'0046  CD2400'   0069         CALL    WRITE1
'0049  3EFF      0070 TT14    LD      A,0FFH          ;RESET HCTR TO ZERO
'004B  3C        0071 TT16    INC     A
'004C  320600'   0072         LD      (HCTR),A
'004F  3AE0FF    0073 TT20    LD      A,(BRATE)
'0052  FE10      0074         CP      010H            ;600 BAUD ?
'0054  2804      0075         JR      Z,CRT-$
'0056  FE08      0076         CP      08H             ;110, 300, 1200 BAUD ?
'0058  300F      0077         JR      NC,TTFF-$
                 0078 ;
                 0079 ;       DRIVER FOR CRT (BAUD RATES 600 AND 2400 AND GREATER
                 0080 ;
'005A  F1        0081 CRT     POP     AF              ;RESTORE CHAR
                 0082 ;
'005B  FE04      0083 TTWRIT  CP      04              ;IGNORE 04
'005D  C8        0084         RET     Z
'005E  F5        0085         PUSH    AF              ;SAVE CHAR
'005F  DBDD      0086 TT100   IN      A,(0DDH)        ;CHECK UART STATUS
'0061  CB7F      0087         BIT     7,A
'0063  28FA      0088         JR      Z,TT100-$       ;IF NOT READY, LOOP
'0065  F1        0089         POP     AF              ;RESTORE CHAR
'0066  D3DC      0090         OUT     (0DCH),A        ;OUTPUT IT
'0068  C9        0091         RET
                 0092 ;
                 0093 ;
                 0094 ;       DRIVER FOR S700 (300 AND 1200 BAUD) AND TELETYPE (1
                 0095 ;
'0069  F1        0096 TTFF    POP     AF              ;RESTORE CHARACTER
'006A  FE0C      0097         CP      0CH             ;FORM FEED ?
'006C  200B      0098         JR      NZ,STWRIT-$
'006E  C5        0099         PUSH    BC
'006F  0605      0100         LD      B,5             ;IF FORM FEED THEN OUTPUT
'0071  3E0A      0101         LD      A,0AH           ;6 LINE FEEDS
'0073  CD7900'   0102 ST0     CALL    STWRIT
'0076  10FB      0103         DJNZ    ST0-$
'0078  C1        0104         POP     BC              ;RESTORE BC
                 0105 ;
'0079  F5        0106 STWRIT  PUSH    AF              ;SAVE CHAR
'007A  CD5B00'   0107         CALL    TTWRIT          ;OUTPUT CHARACTER
'007D  3AE0FF    0108         LD      A,(BRATE)
'0080  FE57      0109         CP      57H             ;110 BAUD ?
'0082  280C      0110         JR      Z,TTRET-$
'0084  FE08      0111         CP      08H             ;1200 BAUD ?
'0086  CC9200'   0112         CALL    Z,DEL32         ;DELAY 32 MSEC IF 1200 BA
'0089  F1        0113         POP     AF              ;RESTORE CHAR
'008A  FE0D      0114         CP      0DH
'008C  CC9700'   0115         CALL    Z,DEL210        ;DELAY 210 MSEC IF CHAR=CR
'008F  C9        0116         RET
'0090  F1        0117 TTRET   POP     AF              ;RESTORE CHAR
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:TT    .SRC

'0091  C9        0118          RET
               0119 ;
'0092  C5        0120 DEL32    PUSH    BC              ;DELAY 32 MSEC
'0093  0E20      0121          LD      C,32
'0095  1803      0122          JR      DELAY-$
'0097  C5        0123 DEL210   PUSH    BC              ;DELAY 210 MSEC
'0098  0ED2      0124          LD      C,210
'009A  06BF      0125 DELAY    LD      B,191
'009C  10FE      0126 DEL1     DJNZ    DEL1-$          ;1 MSEC DELAY
'009E  0D        0127          DEC     C
'009F  20F9      0128          JR      NZ,DELAY-$
'00A1  C1        0129          POP     BC
'00A2  C9        0130          RET
               0131 ;
               0132          END


ERRORS=0000
```

SECTION 13

SYSTEM ROUTINES

13-1. INTRODUCTION

13-2. Many subroutines in FLP-80DOS are accessable to the user. The following pages describe these routines, which fall into two major categories: PROM resident routines and RAM resident routines (within the RAM portion of the operating system).

13-3. PROM RESIDENT ROUTINES

13-4. Since the routines located in PROM reside at fixed addresses, they may be called directly. The usual method of calling one of these routines is to declare the name of that routine as a GLOBAL symbol. The routine may then be called just as if it resided within the calling program. To actually resolve the calling address of the routine, the file SYSLNK.OBJ must be included when linking the program.

13-5. Example. Suppose that the System Error Handler (EH) is to be called with an error number held in variable "ERRCOD."

```
        GLOBAL      EH              ;SYSTEM ERROR HANDLER
        .
        .
        .
ERROR   LD          A,(ERRCOD)      ;GET ERROR CODE
        CALL        EH              ;
        .
        .
        .
```

When the program is linked, SYSLNK.OBJ would be included.
$LINK PROG,SYSLNK TO PROG(CR)

13-6. RAM RESIDENT ROUTINES

13-7. User callable system subroutines that reside within the RAM-based portion of the operating sytem may not be accessed in the same manner as the PROM resident routines. With the SYSGEN Feature in FLP-80DOS, the user is given the option to position the operating system at any location in RAM. This positioning causes the addresses of the callable routines within the operating system to change depending on where the current operating system was positioned during the SYSGEN procedure (See Section 15).

13-8. This problem is solved in the following manner. A routine called JTASK is located in scratchpad RAM and has a fixed address. JTASK contains a mechanism for locating all RAM resident callable routines. Each of these routines has been assigned a number which is placed into register A just prior to calling JTASK. JTASK then jumps to the appropriate routine (all other calling parameters are as described for that routine later in this secttion). These codes are listed below. Individual routines not reserved for system use are described in greater detail later in this section.

Code	Routine
0	FDH (Floppy Disk Handler). Described in Section 10.
1	MRENT (Monitor Reentry Point).
2	IOCS RDC (Read Character), reserved for system use.
3	IOCS WRC (Write Character), reserved for system use.

4 PVECT (Print Vector Contents).
5 GETLIN (Get Line Into Monitor Command Buffer). Reserved for system use.
6 CSIPAR (Parse Dataset Specifications Into Vector).
7 CSISYN (Check Syntax of Dataset Specifications).
8 ASTCHK (Check For Asterisk In I/O Vector).
9 GETHL (Get Line From Console Into Buffer).
10 GETVEC (Get Address of Default LUN Buffer).
11 SEARCH (Get Directory entry for a given file).

13-9. The following is an example of the calling sequence used to access these RAM resident routines.

```
        .
        .
        .
        GLOBAL  JTASK     ;SYSTEM LINKAGE ROUTINE
GETVEC  EQU     10        ;GETVEC JTASK CODE
MRENT   EQU     1         ;MRENT JTASK CODE
        .
        .
        .
        LD      D,1       ;CONSOLE OUTPUT LUN
        LD      A,GETVEC  ;GETVEC JTASK CODE
        CALL    JTASK     ;CALL GETVEC
        .
        .
        .
        LD      A,MRENT   ;MRENT JTASK CODE
        JP      JTASK     ;JP MRENT
                          ;END OF PROGRAM
                          ;SO DON'T CALL
        END               ;JTASK-JUST JUMP
```

13-10. ASBIN - CONVERT ASCII DIGIT TO BINARY
- PROM RESIDENT

DESCRIPTION - Convert ASCII representation of a hex digit to binary. No error checking is done, so the binary "equivalent" of any ASCII character can be found using ASBIN.

ENTRY PARAMETERS - A - reg contains the ASCII character to be converted (8-bits).

Normal Conversion:

INPUT	OUTPUT
31	00000001B
32	00000010B
.	
.	
.	
39	00001001B
41	00001010B
42	00001011B
43	00001100B
44	00001101B
45	00001110B
46	00001111B

EXIT PARAMETERS - A - reg contains the corresponding binary value of the ASCII character.

CALLING SEQUENCE - CALL ASBIN

EXAMPLE -
```
GLOBAL ASBIN
  LD    A,'A'   ;CONVERT ASCII 'A' TO
  CALL  ASBIN   ;BINARY
  ;A = 00001010B = AH
```

13-11. ASTCHK - ASTERISK CHECK
- RAM RESIDENT
- JTASK CODE 8

DESCRIPTION - This routine checks for asterisk (*) in an IOCS vector. If an asterisk is found in the device code, filename, extension, or user identification code, then zero flag is set. This routine is called after a CSI routine.

ENTRY PARAMETERS - IY reg points to start of an IOCS vector to be checked.

EXIT PARAMETER -
Z flag = 1 if asterisk found in string.
Z flag = 0 if no asterisk found in string.

CALLING SEQUENCE -
```
LD   A,8
CALL JTASK
```

EXAMPLE -
```
        GLOBAL    JTASK
        LD        IY,VECTOR       ;IY = VECTOR ADDRESS
        LD        A,8             ;ASTCHK JTASK CODE
        CALL      JTASK
        JP        Z,ASTFND        ;IF ASTERISK, JUMP
; NO ASTERISKS FOUND - CONTINUE
```

13-12. CRLF - OUTPUT CARRIAGE RETURN AND LINE FEED - PROM RESIDENT

DESCRIPTION - Output a carriage return (ODH) and line feed (OAH).

ENTRY PARAMETERS - E - reg. designates LUN as in WRCHR (see Section 8).

EXIT PARAMETERS - A - reg is destroyed.
D - reg contains line feed (OAH).

CALLING SEQUENCE - CALL CRLF

EXAMPLE -
```
          GLOBAL   CRLF
          LD       E,1      ;CONSOLE OUT LUN
          CALL     CRLF     ;OUTPUT CARRIAGE RETURN
                            ;AND LINE FEED TO
                            ;CONSOLE
```

13-13. CSI - COMMAND STRING INTERPRETER
- RAM RESIDENT
- JTASK CODES 6 (CSIPAR) AND 7 (CSISYN)

DESCRIPTION - The Command String Interpreter is a system routine which reads command strings containing dataset specifications. CSI is used extensively by FLP-80DOS system programs (MONITOR, PIP, ASM, etc.) but is also available for use in application programs. CSI assumes that the HL register points to a command string containing datasets which is terminated by a carriage return. A dataset (See paragraph 1-21) is defined as follows:

DEV:FILENAME.EXT[UIC]

The command string interpreter contains the following subroutines.

NAME	FUNCTION
CSISYN	Checks the syntax of a command string containing datasets.
CSIPAR	Parses a single dataset and places dataset specifications in I/O vector.

13-14. CSISYN - JTASK CODE 7

CALLING SEQUENCE - LD A,7
CALL JTASK

ENTRY PARAMETERS

1. HL points to the first character or a blank preceding the first character of the dataset portion of the command string. The end of the string must be terminated by a carriage return.

EXIT PARAMETERS

1. REGISTER A
   0 - Indicates Valid Dataset Specifications (no Syntax Errors). Zero flag is set.
   2 - Invalid Dataset Specifications (Syntax Error). Zero flag is cleared.
2. Other Registers Modified: None

13-15. CSIPAR - JTASK CODE 6

CALLING SEQUENCE - LD A,6
CALL JTASK

EXIT PARAMETERS

1. HL points to the first character or a blank preceding the first character of the dataset portion of the command string.
2. IY points to I/O vector.

13-14. On Exit From CSIPAR

1. REGISTER A
   - 0 - Indicates Dataset Found and Parsed. Zero flag is set.
   - 1 - Dataset Not Found. End of line (carriage return) was encountered. Zero flag is cleared.
   - 2 - Syntax Error (Note CSIPAR does partial but not complete syntax check. For complete check call CSISYN). Zero flag is cleared.
2. REGISTER C
   Register C contains the character that terminates the dataset.

DATASET TERMINATOR	C REGISTER ON EXIT
,	','
CARRIAGE RETURN	0DH
IO	'T'
>	'T'

NOTE: > is equivalent to TO.

3. HL REGISTER
   If a valid dataset is found (A=0) then HL points to the next character after the dataset.

4. I/O Vector
   If a dataset is found, then the device, filename, extension and user number are placed in the I/O vector (See para. 9-3). The following default conditions are assumed if the dataset element is not specified.

ELEMENT	DEFAULT NAME
Device	2 blanks
Unit No.	0
Filename	6 blanks
Extension	3 blanks
User Code	1

5. REGISTER D'
   1 - If user number was entered.
   0 - If user number was not entered.

6. Other Registers Modified: A'

EXAMPLE - Upon entry to a program from the Monitor, the DE-register points to the rest of the command buffer after the program name. For example, the command:

$MYPROG DK1:FILE1(CR)

loads and executes the file 'MYPROG.BIN'. Upon entry to MYPROG, the DE-register points to the blank after 'MYPROG' in the command line. To syntax check and parse the dataset specification into its I/O vector, the following sequence of code may be used.

```
        GLOBAL    JTASK
CSIPAR  EQU       6
CSISYN  EQU       7
```

```
MYPROG  PUSH    DE        ;MOVE POINTER
        POP     HL        ;TO HL
        LD      A,CSISYN  ;CHECK SYNTAX
        CALL    JTASK     ;OF DATASET
        JP      NZ,ERR    ;IF SYNTAX ERROR, SKIP
        LD      IY,VECT   ;GET VECTOR ADDRESS
        LD      A,CSIPAR  ;PARSE DATASET
        CALL    JTASK     ;INTO VECTOR
        JP      NZ,ERR    ;IF ERROR, SKIP
        .
        .
        .
```

13-16. RENTRY - DDT-80 RE-ENTRY
- PROM RESIDENT

DESCRIPTION - Entry address to DDT. This address should be jumped to, not called. DDT will print a carriage return, line feed, and a period (.) prompt. The user register map is not saved when jumping to RENTRY. DDT is then ready to accept a command.

13-17. ECHO - INPUT AND ECHO A CHARACTER
- PROM RESIDENT

DESCRIPTION - Read and write a character through the same LUN pair. Input LUN is 0, 2, or 4. Output LUN is 1, 3, or 5. Valid LUN pairs are (0,1), (2,3), (4,5).

ENTRY PARAMETERS -

E - reg designates the LUN as in RDCHR and WRCHR. Immediate return is not valid when calling ECHO.

EXIT PARAMETERS -

A - reg is destroyed

D - reg contains the character read and printed

CALLING SEQUENCE - CALL ECHO

EXAMPLE -

```
      GLOBAL    ECHO
      LD        E,0     ;READ AND WRITE
                        ;CHARACTER TO
      CALL      ECHO    ;CONSOLE
```

13-18. EH - SYSTEM ERROR HANDLER
- PROM RESIDENT

DESCRIPTION - Print error message in the following format:

***** ERROR nn (message) (dataset specification)

where nn is the error code in hexadecimal, the message is obtained from a lookup table within EH, and the dataset is the one defined by IY.

FLP-80DOS all I/O error messages (numbers 1-1F$_H$) are cataloged in EH. If an error code not associated with a message is input, then the output is:

***** ERROR nn

Output is directed via the DDT console output handler (thus bypassing IOCS).

Error messages for FLP-80DOS are shown in Appendix E.

ENTRY PARAMETERS -

A - reg = error code (8 bits). If A = 1 through 1F$_H$ then the standard message format will be output.

IY - reg = vector address containing a dataset specification of the dataset for which the error occurred.

EXIT PARAMETERS -

All registers remain unchanged.

CALLING SEQUENCE - CALL EH

```
EXAMPLE -
        GLOBAL    EH
        GLOBAL    JIOCS
        GLOBAL    JTASK

        LD        IY,VECTOR          ;IY = VECTOR ADDRESS
        LD        (IY+RQST),OPENR    ;OPEN READ REQUEST
        CALL      JIOCS              ;OPEN THE FILE
        LO        A,(IY+ERRC)        ;GET ERROR CODE
        AND       A                  ;CHECK FOR ERRORS
        JR        Z,CONT-$           ;IF NONE, SKIP
        CALL      EH                 ;ELSE PRINT ERROR
        LD        A,1                ;MRENT CODE
        JP        JTASK              ;RETURN TO MONITOR
CONT ----------
```

13-19. GETHL - GET LINE FROM THE CONSOLE DEVICE
- RAM RESIDENT
- JTASK CODE 9

DESCRIPTION - GETHL inputs a line of data from the console device into the buffer pointed to by HL. All line editing functions are active: tab, backspace, rubout, and line delete (CNTL-U). Return is made to caller upon carriage return.

ENTRY PARAMETERS - HL-reg pair points to input buffer.
D - reg contains reprompt character for line delete function (see above). This character is displayed on the console whenever a line is deleted via CNTL-U.

EXIT PARAMETERS - Data is placed into buffer. All registers are saved.

CALLING SEQUENCE -

```
        LD      A,9
        CALL    JTASK
```

EXAMPLE -

```
        GLOBAL  JTASK
        LD      HL,INBUF    ;INPUT BUFFER POINTER
        LD      D,"$"       ;REPROMPT CHARACTER
        LD      A,9         ;GETHL CODE
        CALL    JTASK
        .
        .
        .
INBUF   DEFS    160         ;MAXIMUM SIZE = 160
                             BYTES
```

13-20. GETVEC - GET DEFAULT VECTOR ADDRESS

- RAM RESIDENT
- JTASK CODE 10

DESCRIPTION - This routine calculates the default vector address for LUN's 0-5.

ENTRY PARAMETERS -

D-reg contains default vector number (0 through 5).

EXIT PARAMETERS -

IY reg points to start of IOCS default vector address. Carry bit set if A - reg > 5 upon entry, otherwise carry is reset.

CALLING SEQUENCE -

```
LD      A,10
CALL    JTASK
```

EXAMPLE -

```
        GLOBAL  JTASK
        LD      D,0     ;GET VECTOR ADDRESS
        LD      A,10    ;FOR LUN 0
        CALL    JTASK
; IY points to default vector for LUN 0
```

13-21. MINDIS - DISABLE MINIMAL LISTENER
- PROM RESIDENT

DESCRIPTION - This subroutine turns off the minimal listener function to disable Console Escape (control-X) and Debugger Escape (control-C).

ENTRY PARAMETERS - None

EXIT PARAMETERS - None

CALLING SEQUENCE - CALL MINDIS

13-22. MINEN - ENABLE MINIMAL LISTENER
- PROM RESIDENT

DESCRIPTION - This subroutine turns on the Minimal Listener function to enable Console Escape (control-X) and Debugger Escape (control-C).

ENTRY PARAMETERS - None

EXIT PARAMETERS - None

CALLING SEQUENCE - CALL MINEN

13-23. MRENT - MONITOR RE-ENTRY
- RAM RESIDENT
- JTASK CODE 1

DESCRIPTION - This is the normal re-entry address to the Monitor. Program exits should return to the Monitor via a jump to this address if the system software has not been overlayed.

CALLING SEQUENCE -
```
LD      A,1
JP      JTASK
```

13-24. PACC - PRINT ASCII CONTENTS OF THE ACCUMULATOR - PROM RESIDENT

DESCRIPTION - Print the contents of the A - register in ASCII equivalent.

ENTRY PARAMETERS -

E - reg designates LUN as for WRCHR (see Section 8). Immediate return is not valid when calling PACC.

A - reg contains the binary equivalent of the 2 hexadecimal digits to be printed in ASCII.

EXIT PARAMETERS -

E - reg used as in WRCHR.

A - reg is destroyed.

CALLING SEQUENCE - CALL PACC

EXAMPLE -

```
        LD    A,25H       ;A=25
        LD    E,1         ;SELECT CONSOLE LUN
        CALL  PACC        ;PRINT THE
                          ;CHARACTERS
                          ;'25' ON CONSOLE
                          : DEVICE
```

13-25. PTXT - PRINT TEXT STRING
- PROM RESIDENT

DESCRIPTION - Print a text string. The string terminates with ETX (03_H), which is not output.

ENTRY PARAMETERS -

E - reg designates LUN as in WRCHR (see Section 8). Immediate return is not valid when calling PTXT.

HL - reg pair contains the beginning address where the text string is stored in memory. The text string must terminate with ETX (03_H).

EXIT PARAMETERS -

A - reg is destroyed

D - reg contains ETX (03_H)

HL - reg pair contains address in memory where the ETX terminator is stored.

CALLING SEQUENCE - CALL PTXT

```
EXAMPLE -    LD    HL,MSG     ;GET MESSAGE ADDRESS

             LD    E,1        ;SELECT CONSOLE LUN
             CALL  PTXT       ;PRINT MESSAGE
             .
             .
             .
      MSG    DEFM      'THIS IS A MESSAGE'
             DEFB      3      ;ETX
```

13-26. PVECT - PRINT VECTOR DATASET
- PROM RESIDENT

DESCRIPTION - This routine prints out a dataset specification from an IOCS vector on the device specified by the console output LUN (LUN1).

ENTRY PARAMETERS -
IY reg points to start of IOCS vector.

EXIT PARAMETERS - None.

CALLING SEQUENCE - CALL PVECT

```
EXAMPLE -  LD      IY,VECTOR      ;IY POINTS TO
           CALL    PVECT          ;START OF VECTOR
```

13-27. REBOOT - SYSTEM REBOOT SEQUENCE - PROM RESIDENT

DESCRIPTION - Reboot System. This is the beginning of the initialization sequence <u>after</u> the terminal baud rate is determined. The system software is booted in RAM from OS.BIN[255] and the Monitor prompt ($) is issued to the console.

This location should be jumped to, not called. It is the entry point for Monitor Escape (CNTL-X).

CALLING SEQUENCE - JP REBOOT

13-28. SCAN - INTERACTIVE SCAN
- PROM RESIDENT

DESCRIPTION - This routine is the interactive scan routine used in DDT. It can be called to return up to 3 parameters from the user terminal in the interactive mode described for DDT. The hexadecimal operands are converted from ASCII into 16-bit binary. Up to 3 operands may be entered, separated by commas or blanks. If more than three operands are entered, then the third operand is updated to the last one entered.

ENTRY PARAMETERS - None.

EXIT PARAMETERS -

OPFLG = $FF1A_H$ - number of a operands entered, 0,1,2, or 3.
OPR1 = $FF14_H$ - first operand (16 bits).
OPR2 = $FF16_H$ - second operand (16 bits).
OPR3 = $FF18_H$ - third operand (16 bits).
NXTCHR = FF1B - last character processed by the SCAN routine.

CALLING SEQUENCE - CALL SCAN

13-29. SEARCH - FIND DIRECTORY ENTRY OF A FILE
- RAM RESIDENT
- JTASK CODE 11

DESCRIPTION - This routine finds the directory entry for the file specified in the IOCS vector.

ENTRY PARAMETERS -

IY reg points to the file vector.

EXIT PARAMETERS -

DE reg has the directory address
C reg has the unit number
The Z flag is set if found
The NZ flag is set if not found.

CALLING SEQUENCE -
```
LD   A,11
CALL JTASK
```

EXAMPLE -
```
GLOBAL JTASK
LD   IY, VINP     ;POINT TO VECTOR
LD   A,11
CALL JTASK
```

13-30. SPACE - OUTPUT A SPACE
- PROM RESIDENT

DESCRIPTION - Output a blank (20_H).

ENTRY PARAMETERS -

E - reg designates LUN as in WRCHR.

EXIT PARAMETERS -

A - reg is destroyed.

B - reg contains blank (20_H).

CALLING SEQUENCE - CALL SPACE

```
EXAMPLE -     LD      E,1       ;CONSOLE LUN
              CALL    SPACE     ;OUTPUT A SPACE
```

13-31. SRCHR, SRCHU - SEARCH MNEMONIC TABLES - PROM RESIDENT

DESCRIPTION - Search resident mnemonic table (SRCHR) or search user mnemonic table (SRCHU) for a match. The resident menmonic table contains the user registers and their save locations accessed by DDT. This table exists in PROM. The user mnemonic table contains the device handlers and their addresses. The user mnemonic table in part of the SYSGEN FILE (RAM resident).

ENTRY PARAMETERS -

HL - reg pair points to 2 character mnemonic to be searched for. The first character goes into L, the second goes into H.

EXIT PARAMETERS -

Zero flag reset if no match.

Zero flag set if match found and HL reg pair equals 16 bit address associated with the mnemonic.

CALLING SEQUENCE - CALL SRCHR
CALL SRCHU

```
EXAMPLE - LD    H,'P'          ;GET ADDRESS OF
          LD    L,'L'          ;LP = HANDLER
          CALL  SRCHU          ;HL = ADDRESS OF
                               ;HANDLER ON EXIT
```

SECTION 14

BATCH MODE OPERATION

14-1. INTRODUCTION

14-2. FLP-80DOS directly supports batch mode operation in configurations with more than 16K of RAM. In batch mode operation, all commands are entered via a batch input device. The batch input device is specified by the dataset assigned to logical unit 0 and may be any input device such as a card reader, paper tape reader, or a disk file. All responses by the system to the batch input device may be directed to any other output dataset. In batch mode operation, all input from an input dataset corresponds exactly to what the user would normally type in via the terminal keyboard. There is no difference between commands entered via the console or in batch mode. Batch mode operation can be applied to all programs in FLP-80DOS, except DDT, the debugger. Insert mode in the Editor also cannot be activated in batch mode from a disk file. User programs which interface to the console device via IOCS may also be used directly in batch mode operation.

14-3. PRINCIPLES OF OPERATION

14-4. The key to batch mode operation in FLP-80DOS is the system's ability to reassign the console channels (Logical Unit Numbers 0 and 1). LUN 0 is used for all console input. LUN 1 is used for all console output. These LUN's may be reassigned to any other dataset via the Monitor ASSIGN command. When the Monitor makes an assignment of a dataset to LUN 0 or 1, the Monitor automatically closes the currently assigned dataset. Then it opens the new dataset. This operation is different from

the other LUN assignments in which the Monitor does not automatically open the new dataset.

14-5. When an assignment is made to LUN 0 (Console In), the assigned dataset referred to as the batch input device is opened and input is automatically started by the Monitor. Commands input from the dataset are called the Batch Command Sequence (BCS), and they control the system operation. Reassignment back to the original user terminal is then the responsibility of the batch command sequence from the dataset.

14-6. When an assignment is made to LUN 1 (Console Out), the new dataset is opened and all output which would normally appear on the user terminal is directed to the new dataset. Such an assignment, if it is to be done, should be done by the first statement of a batch command sequence (BCS).

14-7. BATCH COMMAND SEQUENCE SYNTAX

14-8. The syntax of a batch command sequence (BCS) is exactly like the user input from the terminal. In this manual, all user input is underlined. Each line of input in a BCS is terminated with a carriage return. A BCS can be built on a disk file by using the FLP-80DOS Text Editor. If a card reader is interfaced to the system, the BCS can be on cards.

14-9. If the console output is to be directed to a non-console dataset, the assignment should be the first record of the BCS:

```
ASSIGN 1,LP:
```

14-10. The last record of the BCS should be assignment of LUN's 0 and 1 back to the original console datasets:

```
ASSIGN 1,TT:
ASSIGN 0,TK:
```

14-11. During Batch Mode Operation, no initialization of the disk units is performed by the system. This means that diskettes cannot be switched during batch mode. This restriction is necessary because during initialization the disk handler's active file table is cleared. This action would clear the BCS disk file, and further BCS records could not be accessed.

14-12. EXAMPLE 1. Build a BCS on a disk file called "BATCH" which accesses PIP and prints out the directory and status of each disk unit on the line printer. The following commands are entered from the user terminal (interactive mode) to build the BATCH file:

```
$EDIT BATCH(CR)
 FLP-80DOS EDITOR V2.0
 -- > NEW FILE
 -- > INSERT MODE
 0001 < PIP(CR)
 0002 < D TO LP:(CR)
 0003 < S TO LP:(CR)
 0004 < D DK1: TO LP:(CR)
 0005 < S DK1: TO LP:(CR)
 0006 < Q(CR)
 0007 < ASSIGN 0,TK:(CR)
 0008 < (CR)
 >Q(CR)
```

To execute the batch file, the following command should be entered:

```
$ASSIGN 0, BATCH(CR)
```

The BATCH file will be executed, command by command. The total command sequence will be printed on the terminal. The directory and status listings will be directed to the line printer.

14-13. EXAMPLE 2. Assemble two files in batch mode, directing all printable output to the line printer. The BCS to be built up as a file (named 'BSC1') is:

```
ASSIGN 1, LP:
ASM FILE 1 TO LP:
S
   -this is the "option" input to the Assembler.
ASM FILE2 TO LP:
S
ASSIGN 1,TT:
ASSIGN 0,TK:
```

The BCS is executed by entering the following Monitor command:

```
$ASSIGN 0,BCS1(CR)
```

SECTION 15

SYSTEM GENERATION

15-1. INTRODUCTION

15-2. After reset or power up the system boot routine resident in PROM loads the operating system from the file OS.BIN [255] into memory and starts execution at its beginning address. The system generation or SYSGEN procedure can be used to link operating system object modules together to generate a modified OS.BIN [255] if desired. The following parameters are defined during SYSGEN.

1. Operating System starting address.
2. Number of disk drives (1-4)
3. I/O drivers linked into system (E.G., LP,CR and etc.)
4. Default I/O vectors for logical units 2-5

15-3. The standard system as shipped from the factory contains 32K of RAM (see Figure 15-1) and contains the I/O drivers TK:, TT: and CP:. The SYSGEN procedure which may be used to modify the operating system is performed as outlined below and is also illustrated in Figure 15-1. All system object files are on the MOSTEK supplied system disk.

15-4. SYSTEM GENERATION PROCEDURE (SYSGEN)

STEP 1. Place a Version 2.0 system diskette containing the operating system object files in disk unit DK0. Depress reset and the carriage return key to boot up the system . If a change in the number of disk drives to be supported needs to be made, follow the instructions in paragraph 15-15. If the user wishes to change the system device

table for purposes of adding a mnemonic for a new I/O driver, he should follow the instructions starting at paragraph 15-10. If modifications to the default logical units are required see paragraph 15-13.

STEP 2. Use the LINKER to create a test operating system file. The Linker A option is used to specify the operating system beginning address .

EXAMPLE:

$LINK MONITOR,IOCS,SYSGEN,CSI,TASK,TK,TT,LPC,DKUNIT,DKTAB,DK,
SYSLNK TO TEST.BIN(CR)

OPTIONS? A U C(CR)

ENTER STARTING LINK ADDRESS >5A00(CR)

NOTES

1). The user may arbitrarily choose the starting address. The LINKER generates a load map listing the beginning and ending addresses of each module (see Figure 15-1). Step 2 may be repeated a second time in order to position the operating system at the top of the user's RAM space, thereby maximizing the amount of RAM available for the user.

2). When entering the Linker command from the terminal the command line may exceed the maximum terminal line length (usually 80 characters). If this occurs, the terminal output driver will automatically issue a CR and LF to enable continuation of the command on the next line. Since a carriage return input from the

keyboard is interpreted by the Linker to be the terminator of the command string, the user should not enter a carriage return until the entire Linker command has been entered. Maximum command line length is 160 characters.

3). The terminal I/O drivers TK and TT must always be linked into the system. Additional I/O drivers (E.,G., LPC) may also be linked into the system.

4). The order in which the system modules are linked must be maintained as shown in the table in paragraph 15-5. The Monitor must be the first module and SYSLNK must be the last module. Additional I/O drivers should be added after the TT driver.

5). The Linker C option may be used to save a copy of the new operating sytem load map (See figure 15-1) and the global cross reference table for future reference. The Cross reference output defaults to the file TEST.CRS unless another output device is specified (See LINKER Section 6).

6). The Linker U option is used to list all of the I/O drivers which are not linked into the new operating system but are in the System Device Table (See Paragaph 15-7). The linker load map specifies all the I/O drivers which have been linked into the system.

STEP 3. Place the diskette on which the new operating system is to be copied into the disk unit DK1. Enter PIP and copy the new operating system to OS.BIN 255 on DK1 as shown below. Other system programs such as PIP,LINK,EDIT and ASM may also be copied to the diskette DK1 should they

they already not be on that diskette.

$PIP(CR)

#C TEST.BIN TO DK1:OS.BIN 255 (CR)

#C PIP.BIN,LINK.BIN,EDIT.BIN,ASM.BIN TO DK1:(CR)

NOTE: The user may also copy the file TEST.CRS which contains the operating system load map to DK1:OS.CRS[255] which may be listed using PIP.

STEP 4. Move the diskette with the modified OS.BIN 255 operating system from disk unit DK1 to DK0. Depress reset and carriage return on the terminal and verify that the modified operating system responds with sign on message:

MOSTEK FLP-80DOS V2.0

The sign on message should be followed by a $ indicating that the user is in the monitor environment and that the new operating sytem has been created successfully. The environments EDIT,ASM,LINK and PIP may be entered next to verify that all system programs are operational.

This completes the System Generation Procedure.

15-5. OPERATING SYSTEM MODULES

The following is a list of the system object modules in the order in which they must be linked into the operating system during the SYSGEN procedure. (See STEP 2).

	MODULE	DESCRIPTION
1.	MONITOR	System Monitor
2.	IOCS	I/O Control system

3.	SYSGEN	See description on next page
4.	CSI	Command String Interpreter
5.	TASK	Task selector for system subroutines
6.	TK	Terminal Input Driver
7.	TT	Terminal Output Driver
8.	I/O DRIVERS	See description below
9.	DKUNIT	Specifies Number of Disk Units
10.	DKTAB	Table or buffer space for disk drives
11.	DK	Disk handler
12.	SYSLNK	Linkages to system software in PROM (E000-EFFF)

15-6. STANDARD I/O DRIVERS

15-7. The user may link up to a maximum of 12 I/O drivers into his system at one time using the SYSGEN procedure. The following is a list of the standard I/O devices which are in the system device table (See Pargraph 15-9) and are also supplied with the system diskette.

DRIVER	FILE NAME	DESCRIPTION
TT:	TT	Terminal Output Device
TK:	TK	Terminal Keyboard
LP:	LPD	Data Products Line Printer
CP:	LPC	Centronics Line Printer
TR:	TR	Teletype tape reader
CR:	CR	Card Reader
PR:	PP	Paper tape reader
PP:	PR	paper tape punch
TI:	STI	Silent 700 Cassette Tape Input
TO:	STO	Silent 700 Cassette Tape Output

15-8. SYSTEM DEVICE TABLE. The system device table is in the

operating system module SYSGEN.OBJ. It contains a mnemonic and a GLOBAL reference for each I/O device. The devices listed in paragraph 15-7 represent the standard System Device Table supplied for FLP-80DOS.

15-9. After system reset or power up the Monitor creates a RAM mnemonic table in scratchpad RAM starting at OFF2FH (See Appendix C). The RAM mnemonic table contains the mnemonics for the I/O devices which are supported by the operating system at execution time. Devices which are not in the RAM mnemonic table will generate the error message UNSUPPORTED DEVICE if an I/O transaction is attempted. In order for a device to be placed in the RAM mnemonic table during the Monitor initialization sequence the following conditions must be met.

1. The mnemonic for the device is in the System Device Table in the program module SYSGEN.OBJ which is linked into the operating system in OS.BIN 255 .
2. The I/O driver itself is linked into the operating system (See STEP 2 in SYSGEN procedure paragraph 15-4).

15-10. ADDING NEW I/O DRIVERS

15-11. A new or modified I/O driver having a mnemonic which is in the system device table (e.g. LP:) may be linked directly into the operating system as outlined in STEP 2 of the SYSGEN procedure. However, if the mnemonic of the new driver is not in the System Device Table (See paragraph 15-7) the table can be modified by the user. Changes to the table are made by editing and assembling the file SYSGEN.SRC. After the System Device Table is modified the user should then link the new I/O driver module into the operating sytem (See STEP 2 of SYSGEN procedure).

15-12. CHANGING THE DEFAULT LOGICAL UNITS

15-13. The default dataset definitions for logical units 2-5 may be changed by the user with the SYSGEN procedure. Changes to the default vectors are made by editing and assembling the file SYSGEN.SRC and then linking the new SYSGEN module into the operating system (see STEP 2 of SYSGEN procedure, paragraph 15-4).

15-14. CHANGING THE NUMBER OF DISK UNITS IN THE SYSTEM

15-15. The variable NMUNIT in the files DKUNIT and DKTAB specifies the number of disk units in the system. NMUNIT is set to 2 for the standard Mostek system. If the user wishes to add additional disk drives (up to 4), NMUNIT should be modified in DKUNIT.SRC and DKTAB.SRC and these modules should be reassembled prior to performing the SYSGEN procedure.

15-16. SYSTEM GENERATION OF A 64K OPERATING SYSTEM

15-17. The hardware modifications to produce a system with 60K total RAM are discussed in the system hardware operations manual. For this configuration, the FLP-80DOS may be split to place most of the operating system below the PROM's (which start at 56K) and part of the operating system above the PROM's (which end at 60K). Here is the procedure to follow.

15-18. Create a module called 'SPACE' with the following instructions on it. Assemble the module.

```
      PSECT  ABS
      ORG    0EFFFH
      NOP
      END
```

FIGURE 15-1. SAMPLE SYSTEM GENERATION

```
$LINK MONITO,IOCS,SYSGEN,CSI,TASK,TK,TT,LPC,DKUNIT,DKTAB,DK,
SYSLNK TO TEST
OPTIONS? C U A
ENTER STARTING LINK ADDRESS > 5B35
DK0:MONITO.OBJ[1]
DK0:IOCS  .OBJ[1]
DK0:SYSGEN.OBJ[1]
DK0:CSI   .OBJ[1]
DK0:TASK  .OBJ[1]
DK0:TK    .OBJ[1]
DK0:TT    .OBJ[1]
DK0:LPC   .OBJ[1]
DK0:DKUNIT.OBJ[1]
DK0:DKTAB .OBJ[1]
DK0:DK    .OBJ[1]
DK0:SYSLNK.OBJ[1]
CR      LP      PP      PP      TI
TO      TR
UNDEFINED SYMBOLS 07
PASS 2
DK0:MONITO.OBJ[1]   REL   BEG ADDR 5A8A   END ADDR 6129
DK0:IOCS  .OBJ[1]   REL   BEG ADDR 612A   END ADDR 6AC0
DK0:SYSGEN.OBJ[1]   REL   BEG ADDR 6AC1   END ADDR 6B62
DK0:CSI   .OBJ[1]   REL   BEG ADDR 6B63   END ADDR 6DB4
DK0:TASK  .OBJ[1]   REL   BEG ADDR 6DB5   END ADDR 6E7B
DK0:TK    .OBJ[1]   REL   BEG ADDR 6E7C   END ADDR 6EFE
DK0:TT    .OBJ[1]   REL   BEG ADDR 6EFF   END ADDR 6FB4
DK0:LPC   .OBJ[1]   REL   BEG ADDR 6FB5   END ADDR 7070
DK0:DKUNIT.OBJ[1]   ABS   BEG ADDR 7071   END ADDR 7072
DK0:DKTAB .OBJ[1]   REL   BEG ADDR 7073   END ADDR 76BD
DK0:DK    .OBJ[1]   REL   BEG ADDR 76BE   END ADDR 7FFF
DK0:SYSLNK.OBJ[1]   ABS   BEG ADDR 8000   END ADDR 8000
```

NOTE: The above example is the Linker Load Map resulting from the SYSGEN procedure on a system having 32K of RAM (TOR=7FFF). Since the module SYSLNK is only used by the Linker to resolve global addresses the end address of the module DK is allowed to be the top location of addressable RAM. The end address of DK must not exceed that of the top of RAM. Since additional I/O drivers may be added and module sizes might change in the future, the starting link address should be adjusted during each system generation to correctly position the end address of DK.

15-19. Link the modules of the operating system together with 'SPACE.OBJ'. The constraints are as follows: 1) the lower part of the OS must have an end address below $DFE0_H$; 2) the upper part of the OS will start above 'SPACE' (start address = 0F000H), and it must have an end address below $FF00_H$.

15-20. Figure 15-2 shows an example of how to link a 64K OS. Note that both the centronics and Data Products line printer handlers (LPC and LPD) were linked in this example. The lower part of OS ends with module 'DKTAB' whose end address is belwo $DFE0_H$. The upper part of OS starts with 'CSI' and ends with 'SYSLNK' whose end address is below $FF00_H$.

FIGURE 15-2 LINKING A 64K OPERATING SYSTEM

```
LINK
MONITOR,IOCS,SYSGEN,TASK,DKUNIT,DKTAB,SPACE,CSI,TK,TT,LPC,LPD,DK,
SYSLNK TO TEST
CUA
C7F7
Y
Y


LOAD MAP

DKO:MONITO.OBJ[1]     REL     BEG ADDR C7F7     END ADDR CE96
DKO:IOCS  .OBJ[1]     REL     BEG ADDR CE97     END ADDR D82D
DKO:SYSGEN.OBJ[1]     REL     BEG ADDR D82E     END ADDR D8CF1
DKO:TASK  .OBJ[1]     REL     BEG ADDR D8D0     END ADDR D991
DKO:DKUNIT.OBJ[1]     ABS     BEG ADDR D992     END ADDR D992
DKO:DKTAB .OBJ[1]     REL     BEG ADDR DFDE     END ADDR DFDE
DKO:SPACE .OBJ[1]     ABS     BEG ADDR EFFF     END ADDR EFFF
DKO:CSI   .OBJ[1]     REL     BEG ADDR F000     END ADDR F251
DKO:TK    .OBJ[1]     REL     BEG ADDR F252     END ADDR F2D4
DKO:TT    .OBJ[1]     REL     BEG ADDR F2D5     END ADDR F377
DKO:LPC   .OBJ[1]     REL     BEG ADDR F378     END ADDR F433
DKO:LPD   .OBJ[1]     REL     BEG ADDR F434     END ADDR F4E7
DKO:DK    .OBJ[1]     REL     BEG ADDR F4E8     END ADDR FDA3
DKO:SYSLNK.OBJ[1]     ABS     BEG ADDR FDA4     END ADDR FDA4
```

APPENDIX A

Z80 OPCODES

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:OPCODE.

                 0002 ; PSEUDO OPS
                 0003 ;
                 0004          NAME    OPCODES
 >0000           0005          ORG     0
                 0006          PSECT   REL
                 0007 ;
'0000  AA        0008          DEFB    0AAH
'>0001           0009 L2       DEFL    $
 >55AA           0010 L2       DEFL    55AAH
'0001  41424344  0011          DEFM    'ABCD'
'>0005           0012 NN       DEFS    2
'0007  BBAA      0013          DEFW    0AABBH
 >AABB           0014 L1       EQU     0AABBH
 >0005           0015 IND      EQU     5
 >0020           0016 N        EQU     20H
 >0030           0017 DIS      EQU     30H
                 0018          GLOBAL  NN
                 0019          IF      0
                 0020 ; SHOULD NOT BE ASSEMBLED
                 0021          LD      A,B
                 0022          ENDIF
                 0023          IF      1
                 0024 ; SHOULD BE ASSEMBLED
'0009  78        0025          LD      A,B
                 0026          ENDIF
                 0027 ; TURN LISTING OFF
                 0032 ; LISTING SHOULD BE ON
                 0033 ;
                 0034 ;
                 0035 ;
                 0036 ; Z80 OPCODES
                 0037 ;
'000B  8E        0038          ADC     A,(HL)
'000C  DD8E05    0039          ADC     A,(IX+IND)
'000F  FD8E05    0040          ADC     A,(IY+IND)
'0012  8F        0041          ADC     A,A
'0013  88        0042          ADC     A,B
'0014  89        0043          ADC     A,C
'0015  8A        0044          ADC     A,D
'0016  8B        0045          ADC     A,E
'0017  8C        0046          ADC     A,H
'0018  8D        0047          ADC     A,L
'0019  CE20      0048          ADC     A,N
'001B  ED4A      0049          ADC     HL,BC
'001D  ED5A      0050          ADC     HL,DE
'001F  ED6A      0051          ADC     HL,HL
'0021  ED7A      0052          ADC     HL,SP
                 0053 ;
'0023  86        0054          ADD     A,(HL)
'0024  DD8605    0055          ADD     A,(IX+IND)
'0027  FD8605    0056          ADD     A,(IY+IND)
'002A  87        0057          ADD     A,A
'002B  80        0058          ADD     A,B
'002C  81        0059          ADD     A,C
'002D  82        0060          ADD     A,D
'002E  83        0061          ADD     A,E
'002F  84        0062          ADD     A,H
'0030  85        0063          ADD     A,L
```

ADDR OBJECT ST # SOURCE STATEMENT DATASET = DK0:OPCODE.

```
'0031  C620      0064          ADD     A,N
'0033  09        0065          ADD     HL,BC
'0034  19        0066          ADD     HL,DE
'0035  29        0067          ADD     HL,HL
'0036  39        0068          ADD     HL,SP
'0037  DD09      0069          ADD     IX,BC
'0039  DD19      0070          ADD     IX,DE
'003B  DD29      0071          ADD     IX,IX
'003D  DD39      0072          ADD     IX,SP
'003F  FD09      0073          ADD     IY,BC
'0041  FD19      0074          ADD     IY,DE
'0043  FD29      0075          ADD     IY,IY
'0045  FD39      0076          ADD     IY,SP
                 0077 ;
'0047  A6        0078          AND     (HL)
'0048  DDA605    0079          AND     (IX+IND)
'004B  FDA605    0080          AND     (IY+IND)
'004E  A7        0081          AND     A
'004F  A0        0082          AND     B
'0050  A1        0083          AND     C
'0051  A2        0084          AND     D
'0052  A3        0085          AND     E
'0053  A4        0086          AND     H
'0054  A5        0087          AND     L
'0055  E620      0088          AND     N
                 0089 ;
'0057  CB46      0090          BIT     0,(HL)
'0059  DDCB0546  0091          BIT     0,(IX+IND)
'005D  FDCB0546  0092          BIT     0,(IY+IND)
'0061  CB47      0093          BIT     0,A
'0063  CB40      0094          BIT     0,B
'0065  CB41      0095          BIT     0,C
'0067  CB42      0096          BIT     0,D
'0069  CB43      0097          BIT     0,E
'006B  CB44      0098          BIT     0,H
'006D  CB45      0099          BIT     0,L
                 0100 ;
'006F  CB4E      0101          BIT     1,(HL)
'0071  DDCB054E  0102          BIT     1,(IX+IND)
'0075  FDCB054E  0103          BIT     1,(IY+IND)
'0079  CB4F      0104          BIT     1,A
'007B  CB48      0105          BIT     1,B
'007D  CB49      0106          BIT     1,C
'007F  CB4A      0107          BIT     1,D
'0081  CB4B      0108          BIT     1,E
'0083  CB4C      0109          BIT     1,H
'0085  CB4D      0110          BIT     1,L
                 0111 ;
'0087  CB56      0112          BIT     2,(HL)
'0089  DDCB0556  0113          BIT     2,(IX+IND)
'008D  FDCB0556  0114          BIT     2,(IY+IND)
'0091  CB57      0115          BIT     2,A
'0093  CB50      0116          BIT     2,B
'0095  CB51      0117          BIT     2,C
'0097  CB52      0118          BIT     2,D
'0099  CB53      0119          BIT     2,E
'009B  CB54      0120          BIT     2,H
'009D  CB55      0121          BIT     2,L
```

ADDR OBJECT ST # SOURCE STATEMENT DATASET = DK0:OPCODE.

```
                    0122 ;
 009F   CB5E        0123          BIT     3,(HL)
'00A1   DDCB055E    0124          BIT     3,(IX+IND)
'00A5   FDCB055E    0125          BIT     3,(IY+IND)
'00A9   CB5F        0126          BIT     3,A
'00AB   CB58        0127          BIT     3,B
'00AD   CB59        0128          BIT     3,C
'00AF   CB5A        0129          BIT     3,D
'00B1   CB5B        0130          BIT     3,E
'00B3   CB5C        0131          BIT     3,H
'00B5   CB5D        0132          BIT     3,L
                    0133 ;
'00B7   CB66        0134          BIT     4,(HL)
'00B9   DDCB0566    0135          BIT     4,(IX+IND)
'00BD   FDCB0566    0136          BIT     4,(IY+IND)
'00C1   CB67        0137          BIT     4,A
'00C3   CB60        0138          BIT     4,B
'00C5   CB61        0139          BIT     4,C
'00C7   CB62        0140          BIT     4,D
'00C9   CB63        0141          BIT     4,E
'00CB   CB64        0142          BIT     4,H
'00CD   CB65        0143          BIT     4,L
                    0144 ;
'00CF   CB6E        0145          BIT     5,(HL)
'00D1   DDCB056E    0146          BIT     5,(IX+IND)
'00D5   FDCB056E    0147          BIT     5,(IY+IND)
 00D9   CB6F        0148          BIT     5,A
 00DB   CB68        0149          BIT     5,B
'00DD   CB69        0150          BIT     5,C
'00DF   CB6A        0151          BIT     5,D
'00E1   CB6B        0152          BIT     5,E
'00E3   CB6C        0153          BIT     5,H
'00E5   CB6D        0154          BIT     5,L
                    0155 ;
'00E7   CB76        0156          BIT     6,(HL)
'00E9   DDCB0576    0157          BIT     6,(IX+IND)
'00ED   FDCB0576    0158          BIT     6,(IY+IND)
'00F1   CB77        0159          BIT     6,A
'00F3   CB70        0160          BIT     6,B
'00F5   CB71        0161          BIT     6,C
'00F7   CB72        0162          BIT     6,D
'00F9   CB73        0163          BIT     6,E
'00FB   CB74        0164          BIT     6,H
'00FD   CB75        0165          BIT     6,L
                    0166 ;
'00FF   CB7E        0167          BIT     7,(HL)
'0101   DDCB057E    0168          BIT     7,(IX+IND)
'0105   FDCB057E    0169          BIT     7,(IY+IND)
'0109   CB7F        0170          BIT     7,A
'010B   CB78        0171          BIT     7,B
'010D   CB79        0172          BIT     7,C
 010F   CB7A        0173          BIT     7,D
 0111   CB7B        0174          BIT     7,E
'0113   CB7C        0175          BIT     7,H
'0115   CB7D        0176          BIT     7,L
                    0177 ;
'0117   DC0500'     0178          CALL    C,NN
'011A   FC0500'     0179          CALL    M,NN
```

```
'011D  D40500'   0180          CALL    NC,NN
'0120  CD0500'   0181          CALL    NN
'0123  C40500'   0182          CALL    NZ,NN
'0126  F40500'   0183          CALL    P,NN
'0129  EC0500'   0184          CALL    PE,NN
'012C  E40500'   0185          CALL    PO,NN
'012F  CC0500'   0186          CALL    Z,NN
                 0187 ;
'0132  3F        0188          CCF
                 0189 ;
'0133  BE        0190          CP      (HL)
'0134  DDBE05    0191          CP      (IX+IND)
'0137  FDBE05    0192          CP      (IY+IND)
'013A  BF        0193          CP      A
'013B  B8        0194          CP      B
'013C  B9        0195          CP      C
'013D  BA        0196          CP      D
'013E  BB        0197          CP      E
'013F  BC        0198          CP      H
'0140  BD        0199          CP      L
'0141  FE20      0200          CP      N
                 0201 ;
'0143  EDA9      0202          CPD
'0145  EDB9      0203          CPDR
'0147  EDA1      0204          CPI
'0149  EDB1      0205          CPIR
                 0206 ;
'014B  2F        0207          CPL
                 0208 ;
'014C  27        0209          DAA
                 0210 ;
'014D  35        0211          DEC     (HL)
'014E  DD3505    0212          DEC     (IX+IND)
'0151  FD3505    0213          DEC     (IY+IND)
'0154  3D        0214          DEC     A
'0155  05        0215          DEC     B
'0156  0B        0216          DEC     BC
'0157  0D        0217          DEC     C
'0158  15        0218          DEC     D
'0159  1B        0219          DEC     DE
'015A  1D        0220          DEC     E
'015B  25        0221          DEC     H
'015C  2B        0222          DEC     HL
'015D  DD2B      0223          DEC     IX
'015F  FD2B      0224          DEC     IY
'0161  2D        0225          DEC     L
'0162  3B        0226          DEC     SP
                 0227 ;
'0163  F3        0228          DI
                 0229 ;
'0164  102E      0230          DJNZ    DIS
                 0231 ;
'0166  FB        0232          EI
                 0233 ;
'0167  E3        0234          EX      (SP),HL
'0168  DDE3      0235          EX      (SP),IX
'016A  FDE3      0236          EX      (SP),IY
'016C  08        0237          EX      AF,AF'
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:OPCODE.

'016D  EB        0238          EX      DE,HL
'016E  D9        0239          EXX
                 0240 ;
'016F  76        0241          HALT
                 0242 ;
'0170  ED46      0243          IM      0
'0172  ED56      0244          IM      1
'0174  ED5E      0245          IM      2
                 0246 ;
'0176  ED78      0247          IN      A,(C)
'0178  DB20      0248          IN      A,(N)
'017A  ED40      0249          IN      B,(C)
'017C  ED48      0250          IN      C,(C)
'017E  ED50      0251          IN      D,(C)
'0180  ED58      0252          IN      E,(C)
'0182  ED70      0253          IN      F,(C)
'0184  ED60      0254          IN      H,(C)
'0186  ED68      0255          IN      L,(C)
                 0256 ;
'0188  34        0257          INC     (HL)
'0189  FD3405    0258          INC     (IY+IND)
'018C  DD3405    0259          INC     (IX+IND)
'018F  3C        0260          INC     A
'0190  04        0261          INC     B
'0191  03        0262          INC     BC
'0192  0C        0263          INC     C
'0193  14        0264          INC     D
'0194  13        0265          INC     DE
'0195  1C        0266          INC     E
'0196  24        0267          INC     H
'0197  23        0268          INC     HL
'0198  DD23      0269          INC     IX
'019A  FD23      0270          INC     IY
'019C  2C        0271          INC     L
'019D  33        0272          INC     SP
                 0273 ;
'019E  EDAA      0274          IND
'01A0  EDBA      0275          INDR
'01A2  EDA2      0276          INI
'01A4  EDB2      0277          INIR
                 0278 ;
'01A6  E9        0279          JP      (HL)
'01A7  DDE9      0280          JP      (IX)
'01A9  FDE9      0281          JP      (IY)
'01AB  DA0500'   0282          JP      C,NN
'01AE  FA0500'   0283          JP      M,NN
'01B1  D20500'   0284          JP      NC,NN
'01B4  C30500'   0285          JP      NN
'01B7  C20500'   0286          JP      NZ,NN
'01BA  F20500'   0287          JP      P,NN
'01BD  EA0500'   0288          JP      PE,NN
'01C0  E20500'   0289          JP      PO,NN
'01C3  CA0500'   0290          JP      Z,NN
                 0291 ;
'01C6  382E      0292          JR      C,DIS
'01C8  182E      0293          JR      DIS
'01CA  302E      0294          JR      NC,DIS
'01CC  202E      0295          JR      NZ,DIS
```

ADDR OBJECT ST # SOURCE STATEMENT DATASET = DK0:OPCODE.

```
'01CE  282E        0296          JR      Z,DIS
                   0297 ;
'01D0  02          0298          LD      (BC),A
'01D1  12          0299          LD      (DE),A
'01D2  77          0300          LD      (HL),A
'01D3  70          0301          LD      (HL),B
'01D4  71          0302          LD      (HL),C
'01D5  72          0303          LD      (HL),D
'01D6  73          0304          LD      (HL),E
'01D7  74          0305          LD      (HL),H
'01D8  75          0306          LD      (HL),L
'01D9  3620        0307          LD      (HL),N
                   0308 ;
'01DB  DD7705      0309          LD      (IX+IND),A
'01DE  DD7005      0310          LD      (IX+IND),B
'01E1  DD7105      0311          LD      (IX+IND),C
'01E4  DD7205      0312          LD      (IX+IND),D
'01E7  DD7305      0313          LD      (IX+IND),E
'01EA  DD7405      0314          LD      (IX+IND),H
'01ED  DD7505      0315          LD      (IX+IND),L
'01F0  DD360520    0316          LD      (IX+IND),N
                   0317 ;
'01F4  FD7705      0318          LD      (IY+IND),A
'01F7  FD7005      0319          LD      (IY+IND),B
'01FA  FD7105      0320          LD      (IY+IND),C
'01FD  FD7205      0321          LD      (IY+IND),D
'0200  FD7305      0322          LD      (IY+IND),E
'0203  FD7405      0323          LD      (IY+IND),H
'0206  FD7505      0324          LD      (IY+IND),L
'0209  FD360520    0325          LD      (IY+IND),N
                   0326 ;
'020D  320500'     0327          LD      (NN),A
'0210  ED430500'   0328          LD      (NN),BC
'0214  ED530500'   0329          LD      (NN),DE
'0218  220500'     0330          LD      (NN),HL
'021B  DD220500'   0331          LD      (NN),IX
'021F  FD220500'   0332          LD      (NN),IY
'0223  ED730500'   0333          LD      (NN),SP
                   0334 ;
'0227  0A          0335          LD      A,(BC)
'0228  1A          0336          LD      A,(DE)
'0229  7E          0337          LD      A,(HL)
'022A  DD7E05      0338          LD      A,(IX+IND)
'022D  FD7E05      0339          LD      A,(IY+IND)
'0230  3A0500'     0340          LD      A,(NN)
'0233  7F          0341          LD      A,A
'0234  78          0342          LD      A,B
'0235  79          0343          LD      A,C
'0236  7A          0344          LD      A,D
'0237  7B          0345          LD      A,E
'0238  7C          0346          LD      A,H
'0239  ED57        0347          LD      A,I
'023B  7D          0348          LD      A,L
'023C  3E20        0349          LD      A,N
'023E  ED5F        0350          LD      A,R
                   0351 ;
'0240  46          0352          LD      B,(HL)
'0241  DD4605      0353          LD      B,(IX+IND)
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT       DATASET = DK0:OPCODE.

'0244  FD4605    0354          LD      B,(IY+IND)
'0247  47        0355          LD      B,A
'0248  40        0356          LD      B,B
'0249  41        0357          LD      B,C
'024A  42        0358          LD      B,D
'024B  43        0359          LD      B,E
'024C  44        0360          LD      B,H
'024D  45        0361          LD      B,L
'024E  0620      0362          LD      B,N
                 0363 ;
'0250  ED4B0500' 0364          LD      BC,(NN)
'0254  010500'   0365          LD      BC,NN
                 0366 ;
'0257  4E        0367          LD      C,(HL)
'0258  DD4E05    0368          LD      C,(IX+IND)
'025B  FD4E05    0369          LD      C,(IY+IND)
'025E  4F        0370          LD      C,A
'025F  48        0371          LD      C,B
'0260  49        0372          LD      C,C
'0261  4A        0373          LD      C,D
'0262  4B        0374          LD      C,E
'0263  4C        0375          LD      C,H
'0264  4D        0376          LD      C,L
'0265  0E20      0377          LD      C,N
                 0378 ;
'0267  56        0379          LD      D,(HL)
'0268  DD5605    0380          LD      D,(IX+IND)
'026B  FD5605    0381          LD      D,(IY+IND)
'026E  57        0382          LD      D,A
'026F  50        0383          LD      D,B
'0270  51        0384          LD      D,C
'0271  52        0385          LD      D,D
'0272  53        0386          LD      D,E
'0273  54        0387          LD      D,H
'0274  55        0388          LD      D,L
'0275  1620      0389          LD      D,N
                 0390 ;
'0277  ED5B0500' 0391          LD      DE,(NN)
'027B  110500'   0392          LD      DE,NN
                 0393 ;
'027E  5E        0394          LD      E,(HL)
'027F  DD5E05    0395          LD      E,(IX+IND)
'0282  FD5E05    0396          LD      E,(IY+IND)
'0285  5F        0397          LD      E,A
'0286  58        0398          LD      E,B
'0287  59        0399          LD      E,C
'0288  5A        0400          LD      E,D
'0289  5B        0401          LD      E,E
'028A  5C        0402          LD      E,H
'028B  5D        0403          LD      E,L
'028C  1E20      0404          LD      E,N
                 0405 ;
'028E  66        0406          LD      H,(HL)
'028F  DD6605    0407          LD      H,(IX+IND)
'0292  FD6605    0408          LD      H,(IY+IND)
'0295  67        0409          LD      H,A
'0296  60        0410          LD      H,B
'0297  61        0411          LD      H,C
```

ADDR OBJECT ST # SOURCE STATEMENT DATASET = DK0:OPCODE.

```
'0298  62          0412          LD      H,D
'0299  63          0413          LD      H,E
'029A  64          0414          LD      H,H
'029B  65          0415          LD      H,L
'029C  2620        0416          LD      H,N
                   0417 ;
'029E  2A0500'     0418          LD      HL,(NN)
'02A1  210500'     0419          LD      HL,NN
                   0420 ;
'02A4  ED47        0421          LD      I,A
                   0422 ;
'02A6  DD2A0500'   0423          LD      IX,(NN)
'02AA  DD210500'   0424          LD      IX,NN
                   0425 ;
'02AE  FD2A0500'   0426          LD      IY,(NN)
'02B2  FD210500'   0427          LD      IY,NN
                   0428 ;
'02B6  6E          0429          LD      L,(HL)
'02B7  DD6E05      0430          LD      L,(IX+IND)
'02BA  FD6E05      0431          LD      L,(IY+IND)
'02BD  6F          0432          LD      L,A
'02BE  68          0433          LD      L,B
'02BF  69          0434          LD      L,C
'02C0  6A          0435          LD      L,D
'02C1  6B          0436          LD      L,E
'02C2  6C          0437          LD      L,H
'02C3  6D          0438          LD      L,L
'02C4  2E20        0439          LD      L,N
                   0440 ;
'02C6  ED4F        0441          LD      R,A
                   0442 ;
'02C8  ED7B0500'   0443          LD      SP,(NN)
'02CC  F9          0444          LD      SP,HL
'02CD  DDF9        0445          LD      SP,IX
'02CF  FDF9        0446          LD      SP,IY
'02D1  310500'     0447          LD      SP,NN
                   0448 ;
'02D4  EDA8        0449          LDD
'02D6  EDB8        0450          LDDR
'02D8  EDA0        0451          LDI
'02DA  EDB0        0452          LDIR
                   0453 ;
'02DC  ED44        0454          NEG
                   0455 ;
'02DE  00          0456          NOP
                   0457 ;
'02DF  B6          0458          OR      (HL)
'02E0  DDB605      0459          OR      (IX+IND)
'02E3  FDB605      0460          OR      (IY+IND)
'02E6  B7          0461          OR      A
'02E7  B0          0462          OR      B
'02E8  B1          0463          OR      C
'02E9  B2          0464          OR      D
'02EA  B3          0465          OR      E
'02EB  B4          0466          OR      H
'02EC  B5          0467          OR      L
'02ED  F620        0468          OR      N
                   0469 ;
```

```
 ADDR  OBJECT    ST # SOURCE STATEMENT        DATASET = DK0:OPCODE.

'02EF  EDBB      0470          OTDR
'02F1  EDB3      0471          OTIR
               0472 ;
'02F3  ED79      0473          OUT     (C),A
'02F5  ED41      0474          OUT     (C),B
'02F7  ED49      0475          OUT     (C),C
'02F9  ED51      0476          OUT     (C),D
'02FB  ED59      0477          OUT     (C),E
'02FD  ED61      0478          OUT     (C),H
'02FF  ED69      0479          OUT     (C),L
'0301  D320      0480          OUT     (N),A
               0481 ;
'0303  EDAB      0482          OUTD
'0305  EDA3      0483          OUTI
               0484 ;
'0307  F1        0485          POP     AF
'0308  C1        0486          POP     BC
'0309  D1        0487          POP     DE
'030A  E1        0488          POP     HL
'030B  DDE1      0489          POP     IX
'030D  FDE1      0490          POP     IY
'030F  F5        0491          PUSH    AF
'0310  C5        0492          PUSH    BC
'0311  D5        0493          PUSH    DE
'0312  E5        0494          PUSH    HL
'0313  DDE5      0495          PUSH    IX
'0315  FDE5      0496          PUSH    IY
               0497 ;
'0317  CB86      0498          RES     0,(HL)
'0319  DDCB0586  0499          RES     0,(IX+IND)
'031D  FDCB0586  0500          RES     0,(IY+IND)
'0321  CB87      0501          RES     0,A
'0323  CB80      0502          RES     0,B
'0325  CB81      0503          RES     0,C
'0327  CB82      0504          RES     0,D
'0329  CB83      0505          RES     0,E
'032B  CB84      0506          RES     0,H
'032D  CB85      0507          RES     0,L
               0508 ;
'032F  CB8E      0509          RES     1,(HL)
'0331  DDCB058E  0510          RES     1,(IX+IND)
'0335  FDCB058E  0511          RES     1,(IY+IND)
'0339  CB8F      0512          RES     1,A
'033B  CB88      0513          RES     1,B
'033D  CB89      0514          RES     1,C
'033F  CB8A      0515          RES     1,D
'0341  CB8B      0516          RES     1,E
'0343  CB8C      0517          RES     1,H
'0345  CB8D      0518          RES     1,L
               0519 ;
'0347  CB96      0520          RES     2,(HL)
'0349  DDCB0596  0521          RES     2,(IX+IND)
'034D  FDCB0596  0522          RES     2,(IY+IND)
'0351  CB97      0523          RES     2,A
'0353  CB90      0524          RES     2,B
'0355  CB91      0525          RES     2,C
'0357  CB92      0526          RES     2,D
'0359  CB93      0527          RES     2,E
```

```
'035B  CB94      0528          RES     2,H
'035D  CB95      0529          RES     2,L
                 0530 ;
'035F  CB9E      0531          RES     3,(HL)
'0361  DDCB059E  0532          RES     3,(IX+IND)
'0365  FDCB059E  0533          RES     3,(IY+IND)
'0369  CB9F      0534          RES     3,A
'036B  CB98      0535          RES     3,B
'036D  CB99      0536          RES     3,C
'036F  CB9A      0537          RES     3,D
'0371  CB9B      0538          RES     3,E
'0373  CB9C      0539          RES     3,H
'0375  CB9D      0540          RES     3,L
                 0541 ;
'0377  CBA6      0542          RES     4,(HL)
'0379  DDCB05A6  0543          RES     4,(IX+IND)
'037D  FDCB05A6  0544          RES     4,(IY+IND)
'0381  CBA7      0545          RES     4,A
'0383  CBA0      0546          RES     4,B
'0385  CBA1      0547          RES     4,C
'0387  CBA2      0548          RES     4,D
'0389  CBA3      0549          RES     4,E
'038B  CBA4      0550          RES     4,H
'038D  CBA5      0551          RES     4,L
                 0552 ;
'038F  CBAE      0553          RES     5,(HL)
'0391  DDCB05AE  0554          RES     5,(IX+IND)
'0395  FDCB05AE  0555          RES     5,(IY+IND)
'0399  CBAF      0556          RES     5,A
'039B  CBA8      0557          RES     5,B
'039D  CBA9      0558          RES     5,C
'039F  CBAA      0559          RES     5,D
'03A1  CBAB      0560          RES     5,E
'03A3  CBAC      0561          RES     5,H
'03A5  CBAD      0562          RES     5,L
                 0563 ;
'03A7  CBB6      0564          RES     6,(HL)
'03A9  DDCB05B6  0565          RES     6,(IX+IND)
'03AD  FDCB05B6  0566          RES     6,(IY+IND)
'03B1  CBB7      0567          RES     6,A
'03B3  CBB0      0568          RES     6,B
'03B5  CBB1      0569          RES     6,C
'03B7  CBB2      0570          RES     6,D
'03B9  CBB3      0571          RES     6,E
'03BB  CBB4      0572          RES     6,H
'03BD  CBB5      0573          RES     6,L
                 0574 ;
'03BF  CBBE      0575          RES     7,(HL)
'03C1  DDCB05BE  0576          RES     7,(IX+IND)
'03C5  FDCB05BE  0577          RES     7,(IY+IND)
'03C9  CBBF      0578          RES     7,A
'03CB  CBB8      0579          RES     7,B
'03CD  CBB9      0580          RES     7,C
'03CF  CBBA      0581          RES     7,D
'03D1  CBBB      0582          RES     7,E
'03D3  CBBC      0583          RES     7,H
'03D5  CBBD      0584          RES     7,L
                 0585 ;
```

```
'03D7  C9          0586          RET
'03D8  D8          0587          RET     C
'03D9  F8          0588          RET     M
'03DA  D0          0589          RET     NC
'03DB  C0          0590          RET     NZ
'03DC  F0          0591          RET     P
'03DD  E8          0592          RET     PE
'03DE  E0          0593          RET     PO
'03DF  C8          0594          RET     Z
                   0595 ;
'03E0  ED4D        0596          RETI
'03E2  ED45        0597          RETN
                   0598 ;
'03E4  CB16        0599          RL      (HL)
'03E6  DDCB0516    0600          RL      (IX+IND)
'03EA  FDCB0516    0601          RL      (IY+IND)
'03EE  CB17        0602          RL      A
'03F0  CB10        0603          RL      B
'03F2  CB11        0604          RL      C
'03F4  CB12        0605          RL      D
'03F6  CB13        0606          RL      E
'03F8  CB14        0607          RL      H
'03FA  CB15        0608          RL      L
                   0609 ;
'03FC  17          0610          RLA
                   0611 ;
'03FD  CB06        0612          RLC     (HL)
'03FF  DDCB0506    0613          RLC     (IX+IND)
'0403  FDCB0506    0614          RLC     (IY+IND)
'0407  CB07        0615          RLC     A
'0409  CB00        0616          RLC     B
'040B  CB01        0617          RLC     C
'040D  CB02        0618          RLC     D
'040F  CB03        0619          RLC     E
'0411  CB04        0620          RLC     H
'0413  CB05        0621          RLC     L
                   0622 ;
'0415  07          0623          RLCA
                   0624 ;
'0416  ED6F        0625          RLD
                   0626 ;
'0418  CB1E        0627          RR      (HL)
'041A  DDCB051E    0628          RR      (IX+IND)
'041E  FDCB051E    0629          RR      (IY+IND)
'0422  CB1F        0630          RR      A
'0424  CB18        0631          RR      B
'0426  CB19        0632          RR      C
'0428  CB1A        0633          RR      D
'042A  CB1B        0634          RR      E
'042C  CB1C        0635          RR      H
'042E  CB1D        0636          RR      L
                   0637 ;
'0430  1F          0638          RRA
                   0639 ;
'0431  CB0E        0640          RRC     (HL)
'0433  DDCB050E    0641          RRC     (IX+IND)
'0437  FDCB050E    0642          RRC     (IY+IND)
'043B  CB0F        0643          RRC     A
```

```
'043D  CB08      0644          RRC     B
'043F  CB09      0645          RRC     C
'0441  CB0A      0646          RRC     D
'0443  CB0B      0647          RRC     E
'0445  CB0C      0648          RRC     H
'0447  CB0D      0649          RRC     L
                 0650 ;
'0449  0F        0651          RRCA
                 0652 ;
'044A  ED67      0653          RRD
                 0654 ;
'044C  C7        0655          RST     0
'044D  CF        0656          RST     08H
'044E  D7        0657          RST     10H
'044F  DF        0658          RST     18H
'0450  E7        0659          RST     20H
'0451  EF        0660          RST     28H
'0452  F7        0661          RST     30H
'0453  FF        0662          RST     38H
                 0663 ;
'0454  9E        0664          SBC     A,(HL)
'0455  DD9E05    0665          SBC     A,(IX+IND)
'0458  FD9E05    0666          SBC     A,(IY+IND)
'045B  9F        0667          SBC     A,A
'045C  98        0668          SBC     A,B
'045D  99        0669          SBC     A,C
'045E  9A        0670          SBC     A,D
'045F  9B        0671          SBC     A,E
'0460  9C        0672          SBC     A,H
'0461  9D        0673          SBC     A,L
'0462  DE20      0674          SBC     A,N
                 0675 ;
'0464  ED42      0676          SBC     HL,BC
'0466  ED52      0677          SBC     HL,DE
'0468  ED62      0678          SBC     HL,HL
'046A  ED72      0679          SBC     HL,SP
                 0680 ;
'046C  37        0681          SCF
                 0682 ;
'046D  CBC6      0683          SET     0,(HL)
'046F  DDCB05C6  0684          SET     0,(IX+IND)
'0473  FDCB05C6  0685          SET     0,(IY+IND)
'0477  CBC7      0686          SET     0,A
'0479  CBC0      0687          SET     0,B
'047B  CBC1      0688          SET     0,C
'047D  CBC2      0689          SET     0,D
'047F  CBC3      0690          SET     0,E
'0481  CBC4      0691          SET     0,H
'0483  CBC5      0692          SET     0,L
                 0693 ;
'0485  CBCE      0694          SET     1,(HL)
'0487  DDCB05CE  0695          SET     1,(IX+IND)
'048B  FDCB05CE  0696          SET     1,(IY+IND)
'048F  CBCF      0697          SET     1,A
'0491  CBC8      0698          SET     1,B
'0493  CBC9      0699          SET     1,C
'0495  CBCA      0700          SET     1,D
'0497  CBCB      0701          SET     1,E
```

```
'0499  CBCC       0702          SET     1,H
 049B  CBCD       0703          SET     1,L
                  0704 ;
'049D  CBD6       0705          SET     2,(HL)
'049F  DDCB05D6   0706          SET     2,(IX+IND)
'04A3  FDCB05D6   0707          SET     2,(IY+IND)
'04A7  CBD7       0708          SET     2,A
'04A9  CBD0       0709          SET     2,B
'04AB  CBD1       0710          SET     2,C
'04AD  CBD2       0711          SET     2,D
'04AF  CBD3       0712          SET     2,E
'04B1  CBD4       0713          SET     2,H
'04B3  CBD5       0714          SET     2,L
                  0715 ;
'04B5  CBDE       0716          SET     3,(HL)
'04B7  DDCB05DE   0717          SET     3,(IX+IND)
'04BB  FDCB05DE   0718          SET     3,(IY+IND)
'04BF  CBDF       0719          SET     3,A
'04C1  CBD8       0720          SET     3,B
'04C3  CBD9       0721          SET     3,C
'04C5  CBDA       0722          SET     3,D
'04C7  CBDB       0723          SET     3,E
'04C9  CBDC       0724          SET     3,H
'04CB  CBDD       0725          SET     3,L
                  0726 ;
'04CD  CBE6       0727          SET     4,(HL)
 04CF  DDCB05E6   0728          SET     4,(IX+IND)
 04D3  FDCB05E6   0729          SET     4,(IY+IND)
'04D7  CBE7       0730          SET     4,A
'04D9  CBE0       0731          SET     4,B
'04DB  CBE1       0732          SET     4,C
'04DD  CBE2       0733          SET     4,D
'04DF  CBE3       0734          SET     4,E
'04E1  CBE4       0735          SET     4,H
'04E3  CBE5       0736          SET     4,L
                  0737 ;
'04E5  CBEE       0738          SET     5,(HL)
'04E7  DDCB05EE   0739          SET     5,(IX+IND)
'04EB  FDCB05EE   0740          SET     5,(IY+IND)
'04EF  CBEF       0741          SET     5,A
'04F1  CBE8       0742          SET     5,B
'04F3  CBE9       0743          SET     5,C
'04F5  CBEA       0744          SET     5,D
'04F7  CBEB       0745          SET     5,E
'04F9  CBEC       0746          SET     5,H
'04FB  CBED       0747          SET     5,L
                  0748 ;
'04FD  CBF6       0749          SET     6,(HL)
'04FF  DDCB05F6   0750          SET     6,(IX+IND)
'0503  FDCB05F6   0751          SET     6,(IY+IND)
'0507  CBF7       0752          SET     6,A
'0509  CBF0       0753          SET     6,B
 050B  CBF1       0754          SET     6,C
 050D  CBF2       0755          SET     6,D
'050F  CBF3       0756          SET     6,E
'0511  CBF4       0757          SET     6,H
'0513  CBF5       0758          SET     6,L
                  0759 ;
```

```
'0515  CBFE      0760          SET     7,(HL)
'0517  DDCB05FE  0761          SET     7,(IX+IND)
'051B  FDCB05FE  0762          SET     7,(IY+IND)
'051F  CBFF      0763          SET     7,A
'0521  CBF8      0764          SET     7,B
'0523  CBF9      0765          SET     7,C
'0525  CBFA      0766          SET     7,D
'0527  CBFB      0767          SET     7,E
'0529  CBFC      0768          SET     7,H
'052B  CBFD      0769          SET     7,L
                 0770 ;
'052D  CB26      0771          SLA     (HL)
'052F  DDCB0526  0772          SLA     (IX+IND)
'0533  FDCB0526  0773          SLA     (IY+IND)
'0537  CB27      0774          SLA     A
'0539  CB20      0775          SLA     B
'053B  CB21      0776          SLA     C
'053D  CB22      0777          SLA     D
'053F  CB23      0778          SLA     E
'0541  CB24      0779          SLA     H
'0543  CB25      0780          SLA     L
                 0781 ;
'0545  CB2E      0782          SRA     (HL)
'0547  DDCB052E  0783          SRA     (IX+IND)
'054B  FDCB052E  0784          SRA     (IY+IND)
'054F  CB2F      0785          SRA     A
'0551  CB28      0786          SRA     B
'0553  CB29      0787          SRA     C
'0555  CB2A      0788          SRA     D
'0557  CB2B      0789          SRA     E
'0559  CB2C      0790          SRA     H
'055B  CB2D      0791          SRA     L
                 0792 ;
'055D  CB3E      0793          SRL     (HL)
'055F  DDCB053E  0794          SRL     (IX+IND)
'0563  FDCB053E  0795          SRL     (IY+IND)
'0567  CB3F      0796          SRL     A
'0569  CB38      0797          SRL     B
'056B  CB39      0798          SRL     C
'056D  CB3A      0799          SRL     D
'056F  CB3B      0800          SRL     E
'0571  CB3C      0801          SRL     H
'0573  CB3D      0802          SRL     L
                 0803 ;
'0575  96        0804          SUB     (HL)
'0576  DD9605    0805          SUB     (IX+IND)
'0579  FD9605    0806          SUB     (IY+IND)
'057C  97        0807          SUB     A
'057D  90        0808          SUB     B
'057E  91        0809          SUB     C
'057F  92        0810          SUB     D
'0580  93        0811          SUB     E
'0581  94        0812          SUB     H
'0582  95        0813          SUB     L
'0583  D620      0814          SUB     N
                 0815 ;
'0585  AE        0816          XOR     (HL)
'0586  DDAE05    0817          XOR     (IX+IND)
```

```
'0589  FDAE05     0818          XOR     (IY+IND)
 058C  AF         0819          XOR     A
'058D  A8         0820          XOR     B
'058E  A9         0821          XOR     C
'058F  AA         0822          XOR     D
'0590  AB         0823          XOR     E
'0591  AC         0824          XOR     H
'0592  AD         0825          XOR     L
'0593  EE20       0826          XOR     N
                  0827 ;
                  0828          END

ERRORS=0000
```

APPENDIX B

MOSTEK OBJECT OUTPUT DEFINITION

APPENDIX B

MOSTEK OBJECT OUTPUT DEFINITION

B-1. INTRODUCTION

B-2. Each record of an object module begins with a delimiter (colon or dollar sign) and ends with carriage return and line feed. A colon (:) is used for data records and end of file record. A dollar sign ($) is used for records containing relocation information and linking information. An Intel loader will ignore such information and allow loading of non-relocatable, non-linkable programs. All information is in ASCII. Each record is identified by a "type". The type appears in the 8th and 9th bytes of the record and can take the following values:

00 - data record
01 - end-of-file
02 - internal symbol
03 - external symbol
04 - relocation information
05 - module definition

B-3. DATA RECORD FORMAT (TYPE 00)

Byte 1	Colon (:) delimiter.
2-3	Number of binary bytes of data in this record. The maximum is 32 binary bytes (64 ASCII bytes).
4-5	Most significant byte of the start address of data.
6-7	Least significant byte of start address of data.
8-9	ASCII zeros. This is the "record type" for data.
10-	Data bytes.
Last two bytes	Checksum of all bytes except the delimiter, carriage return, and line feed. The

checksum is the negative of the binary sum of all bytes in the record.

CRLF Carriage return, line feed.

B-4. END-OF-FILE RECORD (TYPE 01)

Byte 1 Colon (:) delimiter.

2-3 ASCII zeros.

4-5 Most significant byte of the transfer address of the program. This transfer address appears as an argument in the 'END' Pseudo-op of a program. It represents the starting execution address of the program.

6-7 Least significant byte of the transfer address.

8-9 Record type 01.

10-11 Checksum.

CRLF Carriage return, line feed.

B-5. INTERNAL SYMBOL RECORD (TYPE 02)

Byte 1 Dollar sign ($) delimiter.

2-7 Up to 6 ASCII characters of the internal symbol name. The name is left justified, blank filled.

8-9 Record type 02.

10-13 Address of the internal symbol, most significant byte first.

14-15 Binary checksum. Note that the ASCII letters of the symbol are converted to binary before the checksum is calculated. Binary conversion is done without regard to errors.

CRLF Carriage return, line feed.

B-6. EXTERNAL SYMBOL RECORD (TYPE 03)

Byte 1 Dollar Sign ($) Delimiter.

2-7 Up to 6 ASCII characters of the external symbol name. The name is left justified, blank filled.

8-9 Record type 03.

10-13 Last address which uses the external symbol. This is the start of a link list in the object data records which is described below. The most significant byte is first.

14-15 Binary checksum.

CRLF Carriage return, line feed.

The Assembler outputs the external symbol name and the last address in the program where the symbol is used. The data records which follow contain a link list pointing to all occurrences of that symbol in the object code. This is illustrated in Figure B-1.

1. The external symbol record shows the symbol ('LAB') and the last location in the program which uses the symbol ($212A_H$).
2. The object code at 212AH has a pointer which shows where the previous reference to the external symbol occurred ($200F_H$).
3. This backward reference list continues until a terminator ends the list. This terminator is FFFFH. This method is easy to generate and decode. It has the advantage of reducing the number of bytes of object code needed to define all external references in a program.

B-7. RELOCATING INFORMATION RECORD (TYPE 04)

The addresses in the program which must be relocated are explicitly defined in these records. Up to 16 addresses (64 ASCII characters) may be defined in each record.

Byte 1 Dollar sign ($) delimiter.

2-3 Number of sets of 2 ASCII characters, where 2 sets define an address.

4-7 ASCII zeros.
8-9 Record type 04.
10- Addresses which must be relocated, most significant byte first.
Last two bytes - Binary checksum.
CRLF Carriage return, line feed.

B-8. MODULE DEFINITION RECORD (TYPE 05)

This record has the name of the module (defined by the 'NAME' pseudo-op) and a loading flag byte. The flag byte is determined by the 'PSECT' pseudo-op.

Byte 1 Dollar sign ($) delimiter.
2-7 Name of the module, left justified, blank filled.
8-9 Record type 05.
10-11 Flag byte. When converted to binary, the flag byte is defined as follows:

Bit 0 = 0 For absolute
= 1 For relocatable
Bit 1 = 0 For Z80 Data Format (LSB First)
= 1 For 3870 Data Format (MSB First)

12-13 Binary checksum.
CRLF Carriage return, line feed.

FIGURE B-1. EXTERNAL SYMBOL LINK LIST

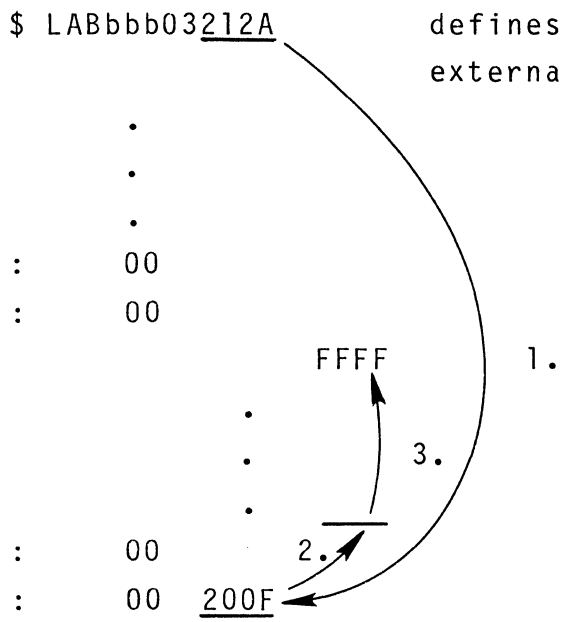

APPENDIX C

SCRATCHPAD MEMORY MAP

APPENDIX C

SCRATCHPAD MEMORY MAP

C-1. INTRODUCTION

C-2. The FLP-80DOS operating system makes extensive use of the 256 x 8 scratchpad memory from $OFF00_H$ to $OFFFF_H$ for system variables. This area is reserved for the operating system and should not be modified by user programs.

C-3. DESCRIPTION OF PARAMETERS

SCRATCHPAD MAP

MEMORY LOCATION	MNEMONIC	DESCRIPTION
FF00-01	TOR	Top of contiguous RAM Memory (calculated by Monitor)
FF02-03	BALR	Bottom of Allocated RAM
FF04-05	CDATE	Current Date
FF06	Count	DDT variables
FF07	CMDSV	Disk Controller Command Save location
FF08	TRK	Disk Controller Variable
FF09	ERSTAT	Disk Controller Error Status Flag
FF0A	SCTR	Disk Controller Variable
FF0B	SCTRSIZE	Disk Controller Variable
FF0C-FF11		Software Break Point Control
FF12	FLAG	Debug Flag
FF13	LONG	Register Map long/short flag

MEMORY LOCATION	MNEMONIC	DESCRIPTION
FF14-FF19	OPR1,OPR2, OPR3	DDT OPERANDS, 124 Byte Buffer for Reset Boot sequence
FF1A	OPFLG	DDT Operand Flag
FF1B	NXCHR	DDT Variable
FF1C	CMD	DDT Variable
FF1D-1E	MAP	DDT Variable
FF1F-20	OFFSET	DDT Offset Address
FF21	EXCTL	DDT Variable
FF22	FSAVE	DDT Variable
FF23	BUSY FLG	IOCS busy flag
FF24	MINFLG	DDT Variable
FF25	TKST	DDT Variable
FF26-28	JTASK	Jump to the routine TASK
FF29-2B	JIOCS	Jump to IOCS
FF2C-2E		Not used. Reserved for future use
FF2F-5F		Ram Mnemonic Table*
FF60-FF8F		Monitor I/O Vector, Reset Boot Vector
FF90-FF98		AIM-80 Flags
FFA9		User Stack Origin
FFAA-FFDF		Monitor and DDT Stack and Breakpoint Area
FFE0	BRATE	Baud Rate Flag
FFE1		Not used. Reserved for future use
FFE2-E3	SPSV	FLP-80 Disk Controller Stack Pointer Save
FFE4-FFFF		DDT User Register Save Area

*The RAM mnemonic table is initialized by the Monitor. It contains device mnemonics for I/O drivers which are linked into the operating system during the System Generation procedure (See Section 15).

APPENDIX D

TESTING/DIAGNOSTICS

APPENDIX D

TESTING/DIAGNOSTICS

D-1. INTRODUCTION

D-2. This Appendix contain a description of Software/Firmware troubleshooting techniques and instructions for using the Disk Diagnostic Utility. For problems in areas other than those listed above, consult the appropriate hardware or software manual.

D-3. SOFWARE/FIRMWARE TROUBLE SHOOTING

D-4. Double check the hardware and associated interfaces. Assure that the FLP-80DOS PROMS are in the correct sockets and that the strapping options are correct. Double check connections from the terminal to the serial port. If you suspect a hardware problem perform the diagnostic tests listed in the hardware manuals.

D-5. POWER UP SEQUENCE WITHOUT DISKETTE

1. Assure that no diskettes are in the drives.
2. Power up the system.
3. Depress " carriage return" on your terminal. The system should print the following:

   DSK ERR

   The dot is the DDT-80 prompt.
4. If the above message was not printed and all hardware appears correct, the problem is probably bad PROM's which should be replaced.

D-6. POWER UP SEQUENCE WITH DISKETTE

1. Assure that no diskettes are in the drives.
2. Power up the system.
3. Place a system diskette in the right hand drive (DK0:).
4. Depress "carriage return" on your terminal.
5. The disk should be accessed.
6. If the disk was not accessed, then a controller or disk controller Firmware problem is indicated. Double check the strapping options on the disk drive board. Then proceed to paragraph D-7, DISK CONTROLLER FIRMWARE TEST.
7. If the sign-on message was printed on the terminal but a disk error was indicated (*****ERROR 0A DISK I/O ERROR), then the diskette is bad and should be replaced.
8. If the following message is displayed on the terminal:

   OS.BIN 255 NOT FOUND

   the operating system binary file is not on the disk in DK0:. The period is the DDT-80 prompt.
9. If the sign-on message and Monitor prompt ('$') appeared on the terminal, proceed to paragraph D-8, MONITOR CHECKOUT.

D-7. DISK CONTROLLER FIRMWARE TEST (only for FLP-80 card. See Hardware manual for other cards).

1. Perform the following sequence.

```
.F 0,7F,AA(CR)
.E EC06(CR)
SAVE ADR, #SCTRS: 0,1(CR)
UNIT,TRK,SCTR: 0,A,1(CR)
```

If a disk error is indicated, then a disk controller problem is indicated for WRITE.

```
.F 0,7F,0(CR)
.E EC09(CR)
LOAD ADR: 0(CR)
UNIT,TRK,SCTR: 0,A,1(CR)
```

```
.M 0,7F(CR)
```

Check locations 0-7FH for the pattern AAH. If any discrepancies are found, then failure in the disk controller or disk unit is indicated for READ.

Consult the FLP-80 Operations Manual; MK78560.

D-8. MONITOR CHECKOUT

D-9. A major portion of the system software and hardware can be checked out by performing the following procedure:

```
$DDT
.F 0,FF,AA(CR)
.Q(CR)
$SAVE 0,FF,TEST(CR)
$DDT(CR)
.F 0,FF,0(CR)
.Q(CR)
$GET TEST(CR)
$DDT(CR)
.M 0,FF(CR)
...
```

All of the displayed locations should have AA in them. If not, then the Disk Diagnostic should be executed.

D-10. DISK DIAGNOSTIC UTILITY

D-11. PURPOSE

D-12. The Disk Diagnostic Utility allows the user to perform a battery of tests on the disk controller and individual disk drives.

D-13. USER INTERFACE

D-14. The Disk Diagnostic Utility is executed by the user

by entering the following while in the Monitor environment.

$DSKDIA(CR)

D-15. At this point, the program will print a list of available tests and how to call for them. A brief description of the available tests follows.

D-16. DESCRIPTION OF TESTS

1. TEST 20 -- Write and read every sector. This test causes random data to be written to and read from each sector of the diskette in the unit specified. The data is verified as it is read in.
2. TEST 21 -- read every sector. Every sector of the diskette in the unit specified is read. No check of the input data is performed, however format information is checked.
3. TEST 22 -- read ID. This test allows the user to specify a random track and sector address, which the program will then attempt to access.
4. TEST 23 -- random write and read (single drive). Random track and sector addresses are generated and random data is written to the sector at that address. The data is then read and verified.
5. TEST 24 -- random write and read (both drives). This test is the same as the 23 except that both drives are used.
6. TEST 27 -- format diskette. The diskette in the unit specified is formatted in IBM compatible format (Note, this is not to be confused with the PIP format command).
7. TEST 30 -- Memory test. This tests all memory locations from the end of the program to location $7FFF_H$ (32K system).

8. TEST 31 -- fifo test. This test causes writing to and reading from the fifo on the disk controller board.

NOTE -- the removal of disks containing data to be saved from their respective drives is highly recommended immediately after the Disk Diagnostic Utility is loaded. This will prevent accidential overwriting of data during tests 20, 23, 24, and 27.

APPENDIX E

FLP-80DOS ERROR DICTIONARY

APPENDIX E

ERROR MESSAGE/DESCRIPTION

1 INVALID RQST

A request word was specified which is not a valid DOS request.

2 DUPLICATE FILE

An attempt was made to create a directory entry for a file that already exists. Can occur only on create or rename. In the case of OPENW, the file is opened but this error is reported only as a flag.

3 FILE TABLE FULL

An attempt was made to insert another entry in the active file table when it is full. Can occur only on open or create. Up to 7 files can be open at one time.

4 FILE NOT FOUND

The requested file was not found in the directory. Can occur only on open or rename.

5 DIR FULL

There is no more space to insert another directory entry. The directory can have up to 192 entries in it.

6 DISK WRITE PROTECT

Diskette is write protected and an attempt has been made to write on it. Write protection is documented in the Shugart SA800/801 OEM Manual, paragraphs 8.2 and 8.3.

7 I/O TIME OUT

The maximum time allowed for an I/O device to go ready has been exceeded. This is a non-terminating error printed on

the console device by an I/O device handler. In MOSTEK I/O handlers, the message is output every 20 seconds until the I/O device is made ready by the user. The user may terminate the wait loop via RESET or Console Escape (CNTL-C or CNTL-X from the keyboard).

8 FILE NOT OPEN

An attempt was made to close or perform some record operation on a file which had not been opened. Can occur on any operation except initialize, open, or create.

9 READ PAST EOF

An attempt was made to advance the pointer beyond the last record in the file. The error can occur on read next, skip forward, or delete. In the case of delete it points to a null record, with the previous record being the last one.

0A DISK I/O ERR

A disk I/O error occurred during the operation. Data may have been lost. Can occur on any operation except rewind.

0B DISK FULL

Diskette is full and will not allow the allocation of another record. Can occur only on insert.

0C DISK PTR ERR

The pointers read do not agree with the next or previous record. Can occur on any record operation except rewind. Pointer errors occur because a sector is not readable or because an application program has written on a non-initialized disk.

0D DIR MAP ERR

A read or write error occurred during operations involving

the disk directory or sector and track maps. If operation occurred during a close or erase, directory or maps could be destroyed.

0E FILE ALREADY OPEN
An attempt was made to open or create a file which is currently active.

0F DISK NOT READY
Can occur on any operation when a diskette is not fully inserted and ready.

10 INITIALIZE
A file is being closed on a disk whose ID is different from the one currently in memory. This can occur if disks are changed during operations without initializing. Can occur only on close and erase. Recovery is by initializing disks before operations begin (INIT command).

11 BAD UNIT
A unit has been specified other than 0/-3 for any command.

12 INVALID RQST
An invalid request code was passed to IOCS in the IOCS vector. The programmer should assure that each request code is one which is described in Section 9 of this manual and that the code is allowed for the selected device.

13 UNIT ALREADY OPEN
An attempt was made to open the same device more than once. This applies to non-file-structured devices and file structured devices. The user should open a device only once. The device must be closed via a CLOSE request before it can be opened again.

14 UNIT NOT OPEN

An I/O operation was attempted on a device which had not been opened. This applies to non-file-structured devices and file structured devices. The user should assure that any device to be accessed is opened for read or write via an OPENR or OPENW request.

15 UNSUPPORTED DEVICE

An operation was attempted on a device whose two character device name was not recognized by the system. The user should assure that an allowable device name is being used. Alternatively, new device names may be added to the system (See Section 7-29). This error occurs at the IOCS level. Allowed device names are shown in Section 9-12.

16 INVALID FMAT

The format specification (FMAT) in the IOCS vector is invalid. The programmer should assure that a valid format specification is used (See Section 9).

17 ALLOC ERR

This error occurs if the user attempts to open more than 16 files or devices requiring physical buffers at the same time.

18 DE-ALLOC ERR

This error occurs during a CLOSE request if the physical buffer number (PBFFR) in the IOCS vector contained an erroneous number, or if the physical buffer had previously been de-allocated.

19 BAD FILE NAME

An invalid file name was specified. A file name may have

up to 6 alphanumeric characters and must start with an alphabetic character.

1A An attempt was made to read from or write into the directory area of the diskette. These operations are not allowed via the FDH, but they are allowed via the Disk Controller Firmware (DCF). Occurrence of this error during normal operation of the software indicates that the diskette has not been initialized or that track and sector pointers on the diskette have been corrupted. The diskette should be reformatted via PIP's FORMAT command.

1B BAD UNIT, TRK, OR SCTR
Controller has received invalid drive number, or sector and track out of normal range.

1C SEEK ERR
Controller not able to locate track during seek, read, or write operation.

1D SCTR NOT FOUND
Sector address marks not readable.

1E CRC ERR
Incorrect data has been flagged by CRC check during reading.

1F DATA LOST
Hardware problem causing data overrun in reading or writing.

20 INVALID DEVICE SPEC
An I/O device was specified in a command which is not al-

lowed in the system. The user should assure that an allowable device mnemonic is being used. See Section 9-12. Alternatively, new mnemonics may be added to the system (See Section 15-6). This error occurs at the system program level and is used in PIP. The Append command, for example, is only supported on the disk device DK.

21 INCOMPATIBLE EXTENSIONS

An attempt was made to perform some PIP command on files whose extensions are not compatible. Specifically, binary files (extension 'BIN') cannot be intermixed with non-binary files. The user should assure that binary file operations are associated only with binary files. The PIP commands Rename and Copy will generate this error if the extensions are incompatible.

22 BINARY EXTENSION NOT ALLOWED

Binary files (extension 'BIN') cannot be appended. This error is generated by the PIP Append command.

23 RESERVED FOR FUTURE USE

24 I/O FILES EQUAL

An input and output file in a PIP copy command were the same file. The user should assure that any file is not used for both input and output in PIP.

25-2B Reserved for future use.

MONITOR ERROR MESSAGES

2C INVALID LUN

The Logical Unit Number (LUN) specified in a Monitor com-

mand was not allowed. LUN's may be 0/-FEH. LUN FFH is reserved for applications in which the LUN is not to be redirected.

2D SAVE TOO LARGE

The amount of memory to be saved as a binary file via the Monitor SAVE command exceeded the maximum allowable, which is 256x124=31744 bytes. The user should assure that the maximum size of the area to be saved does not exceed 31744 bytes.

2E INVALID EXTENSION

A valid extension consists of one to three alphanumeric digits.

2F ASSIGN TABLE FULL

Too many redirects were attempted via the Monitor ASSIGN command. The maximum number of allowed redirects is 6. The user should eliminate some of the redirects via the Monitor CLEAR command.

30 MEMORY FAULT LOC

A memory location was found to be faulty. The address is printed out.

31 CHECKSUM

A checksum error was encountered by the LINKER within an object module. The user should regenerate the object module and then try linking it.

32 GLOBAL DOUBLE DEF

The LINKER generates this error when a global symbol is multiply defined in two different modules.

33-34 RESERVED FOR FUTURE USE

35 MODULE SEQUENCE ERROR
During use of the LINKER, specification of modules to be linked did not match during both passes.

36 NOT ENOUGH MEMORY AVAILABLE
During use of the LINKER, the largest object module to be linked exceeded the available memory.

37-3E Reserved for future use.

ASSEMBLER ERROR MESSAGES

3F BAD RELOCATABLE USAGE
A relocatable value was used in an 8-bit operand. The user should assure that relocatable quantities are used only for 16-bit operand values (addresses), or the PSECT ABS pseudo-op should be used.

40 BAD LABEL
An invalid label was specified. A label may consist of any printable ASCII characters except '( ) * + , - = . / : ; or space. In addition, the first character cannot be a number. A label may start in any column if followed by a colon. It does not require a colon if started in column one.

41 BAD OPCODE
An invalid Z80 opcode or pseudo-op was specified. This error will also occur for a label which starts beyond column 1 and is not followed by a colon.

42 BAD OPERAND
An invalid operand or combination of operands was specified for a given opcode.

43 BAD SYNTAX
The specification of an operand was invalid.

44 UNDEF SYMBOL
A symbol was used in an operand which was not defined in the program, either locally or as an external symbol.

45 MULTIPLE DEF
A symbol was defined more than once in the same program.

46 MULTIPLE PSECT USAGE
A PSECT pseudo-op was used more than once or was defined after the first code producing opcode. The PSECT pseudo-op should be used only once at the beginning of a program.

47 SYMBOL TABLE FULL
The symbol table of the Assembler is full and will accept no more symbols. The user should reduce the number of symbols in his program or break the program up into one or more linkable modules.

48 BAD EXTERNAL USAGE
An external symbol was used in an expression or as the operand of an 'EQU' or 'DEFL' pseudo-op. The user should assure that an external symbol is not used in these situations.

49 MACROS NOT ALLOWED WITH THIS VERSION
The current version of the Assembler does not support macros.

4A UNBALANCED QUOTES

An uneven number of quote characters (') occurred in an operand or operands.

4B LABEL REQUIRED

A label was not used on an 'EQU' or 'DEFL' pseudo-op. Each 'EQU' or 'DEFL' pseudo-op must have a label associated with it.

4C OVERFLOW IN EXPRESSION

In evaluating an expression, the value of the expression exceeded 65536 (0/FFFFH). The user should check the expression for validity. Alternatively, the .RES. operation may be used to ignore the overflow condition and only the least significant 16 bits of the expression will be used.

4D OPERAND OUT OF RANGE

The final value of an operand was found to be out of the range allowed for the given opcode. For example, the valid range of the JR operand is -126 through +129.

4E BAD DIGIT

An invalid digit was found in a number.

4F BAD OPERATOR

An invalid operator was found in an expression.

50 BAD SYMBOL TABLE LIMITS

The available RAM is not sufficient for the Assembler symbol table. The user should assure that 'BALR' (Bottom of Allocated RAM) is correct for his configuration. 'BALR' is defined in locations FF02H and FF03H. All system routines exist above BALR and must not be overwritten. See SYSGEN,

51 INPUT TRUNCATED

The input statement exceeded 80 characters in length. This is the system input limit for all FLP-80DOS Software.

52 MULTIPLE NAME

The 'NAME' pseudo-op was used more than once in the same program. The user should use the NAME pseudo-op only once per source module.

53 The 'INCLUDE' pseudo-op was nested. The user should assure that the 'INCLUDE' pseudo-op is not used in the body of an included module.

54 The expression evaluator stack reached its limit. The user should reduce the complexity of the expression in the statement with caused the errror.

55 The cross reference table became too large. This is a warning message indicating that not all cross references will be output in the cross reference listing.

APPENDIX F

SYSTEM LINKAGES
(SYSLNK)

F-1. INTRODUCTION

F-2. FLP-80DOS system routines are documented in Section 13 of this manual. The linkage addresses for these routines are documented here, and they are set up in a file on the system diskette called SYSLNK. SYSLNK contains linkages for all system routines resident in PROM (E000-EFFF). It also contains the variable JTASK which is the linkage to the RAM resident system routines in the operating system (See Section 13), and the linkage to JIOCS for calls to IOCS.

F-3. Any program using a system routine should declare that routine name as an external global symbol.

EXAMPLE

```
GLOBAL RDCHR
GLOBAL WRCHR
GLOBAL JTASK
```

F-4. When the user program is loaded or linked, the SYSLNK.OBJ file should be linked in with it to resolve these external references.

EXAMPLE

```
$LINK MYFILE,SYSLNK(CR)
```

F-5. The source and object files SYSLNK.SRC and SYSLNK.OBJ are both included on FLP-80DOS system diskettes.

ADDR OBJECT ST # SOURCE STATEMENT DATASET = DK0:SYSLNK.SRC

```
                0002          NAME    SYSLNK
                0003          PSECT   ABS
                0004 ;*************************************************
                0005 ;*       SYSTEM LINKAGES FOR FLP-80DOS V2.0      *
                0006 ;*                                               *
                0007 ;*       ID: SYSLNK   VERSION 2.0   5/22/78      *
                0008 ;*                                               *
                0009 ;*       PROGRAMMER: JOHN BATES                  *
                0010 ;*                                               *
                0011 ;*       DESCRIPTION:                            *
                0012 ;*       THIS IS AN ABSOLUTE LINK BLOCK FOR      *
                0013 ;*       FLP-80DOS SYSTEM SUBROUTINES.  MOST OF  *
                0014 ;*       THESE ROUTINES ARE RESIDENT IN THE      *
                0015 ;*       SYSTEM FIRMWARE AREA (E000-EFFF).       *
                0016 ;*       ADDITIONAL RAM RESIDENT SYSTEM ROUTINES *
                0017 ;*       IN OS.BIN[255] MAY BE ACCESSED THROUGH  *
                0018 ;*       LINKAGES IN SCRATCH PAD RAM (E.G.TASK). *
                0019 ;*       EACH SYSTEM SUBROUTINE IS IDENTIFIED BY *
                0020 ;*       ITS ASSIGNED NAME AND ITS ASSOCIATED    *
                0021 ;*       STARTING ADDRESS.  THIS SOURCE MODULE   *
                0022 ;*       SHOULD BE ASSEMBLED SO ITS OBJECT MODULE*
                0023 ;*       MAY BE LINKED WITH USER PROGRAMS OR     *
                0024 ;*       SYSTEM PROGRAMS (E.G. PIP).             *
                0025 ;*************************************************
                0026 ;
                0027 ;
                0028 ;
                0029 ;        SYSTEM SUBROUTINES IN FIRMWARE SPACE (E000-EFFF)
                0030 ;
                0031          GLOBAL  AORN
>E56A           0032 AORN     EQU     0E56AH
                0033          GLOBAL  ASBIN
>E583           0034 ASBIN    EQU     0E583H
                0035          GLOBAL  CRLF
>E59C           0036 CRLF     EQU     0E59CH
                0037          GLOBAL  ECHO
>E597           0038 ECHO     EQU     0E597H
                0039          GLOBAL  EH
>E003           0040 EH       EQU     0E003H  ;ERROR HANDLER
                0041          GLOBAL  FATAL
>EC23           0042 FATAL    EQU     0EC23H  ;FATAL ERROR EXIT
                0043          GLOBAL  FLOPPY
>EC00           0044 FLOPPY   EQU     0EC00H  ;FLOPPY CONTROLLER
                0045          GLOBAL  LOADER
>EC03           0046 LOADER   EQU     0EC03H  ;LINKED FILE LOADER
                0047          GLOBAL  MINDIS
>E3B3           0048 MINDIS   EQU     0E3B3H  ;DISABLE MINIMAL LISTNER
                0049          GLOBAL  MINEN
>E534           0050 MINEN    EQU     0E534H  ;ENABLE MINIMAL LISTNER
                0051          GLOBAL  PACC
>E58B           0052 PACC     EQU     0E58BH
                0053          GLOBAL  PADD0
>E61C           0054 PADD0    EQU     0E61CH
                0055          GLOBAL  PASP
>E5AA           0056 PASP     EQU     0E5AAH  ;PRINT ACC AND SPACE
                0057          GLOBAL  PTXT
>E3C7           0058 PTXT     EQU     0E3C7H
                0059          GLOBAL  RDCHR
```

 ADDR OBJECT   ST # SOURCE STATEMENT DATASET = DK0:SYSLNK.SRC

```
 >E522           0060 RDCHR   EQU     0E522H
                 0061         GLOBAL  RENTRY
 >E11D           0062 RENTRY  EQU     0E11DH  ;DDT-80 RENTRY POINT
                 0063         GLOBAL  ENTRY
 >E066           0064 ENTRY   EQU     0E066H  ;BREAK PT REENTRY
                 0065         GLOBAL  RUN
 >EFE1           0066 RUN     EQU     0EFE1H  ;EXIT FOR IMPILIED RUN CMD
                 0067         GLOBAL  SCAN
 >E414           0068 SCAN    EQU     0E414H
                 0069         GLOBAL  SPACE
 >E5A5           0070 SPACE   EQU     0E5A5H
                 0071         GLOBAL  SRCHU
 >E547           0072 SRCHU   EQU     0E547H
                 0073         GLOBAL  WRCHR
 >E527           0074 WRCHR   EQU     0E527H
                 0075         GLOBAL  REBOOT
 >E006           0076 REBOOT  EQU     0E006H
                 0077 ;
                 0078 ;       SCRATCH PAD VARIABLES
                 0079 ;
                 0080         GLOBAL  ERSTAT
 >FF09           0081 ERSTAT  EQU     0FF09H  ;ERROR STATUS
                 0082         GLOBAL  JTASK
 >FF26           0083 JTASK   EQU     0FF26H  ;JUMP TO TASK
                 0084         GLOBAL  JIOCS
 >FF29           0085 JIOCS   EQU     0FF29H  ;JUMP TO IOCS
                 0086 ;
                 0087         END

ERRORS=0000
```

APPENDIX G

DISK RECOVERY UTILITY

APPENDIX G

DISK RECOVERY UTILITY

G-1. INTRODUCTION

G-2. The Disk Recovery Utility may be used to recover ASCII text files that are inaccessible to other programs due to some form of error within the file. Typically, the Disk Recovery Utility would be used to recover files that have experienced a pointer error.

G-3. USER INTERFACE

G-4. The file to be recovered must be on the diskette currently in unit DK1:. As its contents are recovered, they are copied to a file on unit DK0: (the file is automatically created by the Disk Recovery Utility).

G-5. The Disk Recovery Utility is invoked by entering the following from the console while in the monitor environment:

```
$DSKREC DK1:sfilename TO DK0:dfilename (CR)
```

G-6. The parameter 'sfilename' is the name of the input (source) file that is to be recovered. The parameter 'dfilename' is the name of the output (destination) file that is to receive the recovered data. This is optional and defaults to the name of the source file.

G-7. After the above is entered by the user, the program attempts to recover the source file. One or more of the following messages may then be printed.

G-8. MESSAGES

G-9. Error messages that may be printed by the Disk Recovery Utility are listed in Appendix E (FLP-80DOS ERROR MESSAGES/-DESCRIPTION)

G-10. The following messages indicates normal termination of the Disk Recovery Utility:

DSKREC> FILE VERIFIED--NO ERRORS

This indicates that the file was recovered and that no errors of any sort were detected.

DSKREC> FILE RECOVERED--POSSIBLE ERRORS

The source file has been partially recovered. An error was detected in the file and therefore some data may have been lost.

G-11. When some form of error is detected in a file being recovered, the Disk Recovery Utility inserts a message into the recovered copy of the file at the point were the error occurred. This message is highly visible and enables the user to quickly locate the area in the recovered file at which data may be garbled and/or lost. This message should be deleted from the recovered copy of the file when the user has verified the data in the area of the message. The message will appear as follows:

```
************************************
* I/O OR POINTER ERROR OCCURRED HERE*
************************************
```

G-12. METHOD OF OPERATION

G-13. The procedure used by the Disk Recovery Utility to recover disk files is descibed below.

G-14. The directory entry for the source (input) file is

obtained from the disk file directory. Within this entry the addresses of the first and last sectors in the source file are found. These are copied and saved. At this point the destination file is created on unit DK0:.

G-15. The source file is then read and copied to the destination file sector by sector until either an end of file or error condition is detected. If an end of file condition is detected, the output file is closed and a message is printed on the console indicating that no errors were detected. The program returns control to the Monitor. If an error condition is detected, the program retries the operation 50 times. If the error is still present, the program then writes a message to the destination file that will aid the user in locating the area in the file where data is suspect.

G-16. The program then begins reading sectors backward starting at the last sector in the file (the address was saved previously). No sectors are written to the destination file during this pass. Reading continues until an error condition is detected and 50 retries are performed.

G-17. Sectors are then read forward, beginning at the last sector correctly read (in G-16, above). These sectors are written to the destination file. Reading and copying continues until the end of the source file is detected, at which time a message is printed on the console indicating that errors have been detected. The program then returns control to the Monitor.

MOSTEK®
Z80·F8 Covering the full spectrum of
3870 microcomputer applications.

1215 W. Crosby Rd. • Carrollton, Texas 75006 • 214/323-6000
In Europe, Contact: MOSTEK Brussels
150 Chaussee de la Hulpe, B1170, Belgium;
Telephone: 660.69.24

Mostek reserves the right to make changes in specifications at any time and without notice. The information furnished by Mostek in this publication is believed to be accurate and reliable. However, no responsibility is assumed by Mostek for its use; nor for any infringements of patents or other rights of third parties resulting from its use. No license is granted under any patents or patent rights of Mostek.

PRINTED IN USA January 1980
Publication No. MK78557
STD No. 8023-78557-0505

Copyright 1980 by Mostek Corporation
All rights Reserved